


SERVICE MANUAL

BG-3S CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KV-XF29M97	RM-953	India	SCC-U22L-A				
KV-XF29M67	RM-953	India	SCC-U22M-A				

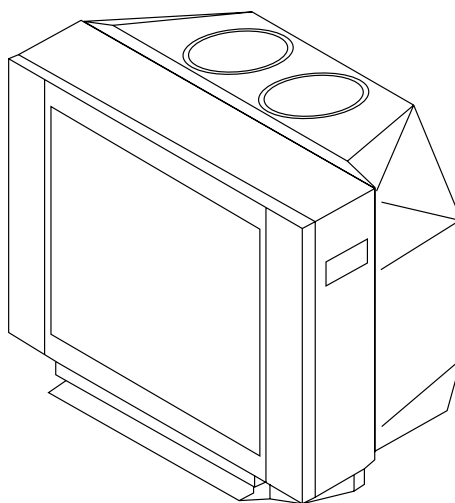

TRINITRON® COLOR TV
SONY®

SPECIFICATIONS

		Note
Power requirements	110-240 V AC, 50/60 Hz	
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G, I, D/K, M	
Color system	PAL, PAL 60, SECAM, NTSC4.43, NTSC3.58	
Channel coverage		
B/G	VHF: E2 to E12 / UHF: E21 to E69 / CATV: S01 to S03, S1 to S41	
I	UHF: B21 to B68 / CATV: S01 to S03, S1 to S41	
D/K	VHF: C1 to C12, R1 to R12 / UHF: C13 to C57, R21 to R60 CATV: Z1 to Z39, S01 to S03, S1 to S41	
M	VHF: A2 to A13 / UHF: A14 to A79 / CATV: A-8 to A-2, A to W+4, W+6 to W+84	
⌚ (Antenna)	75-ohm external terminal	
Audio output	6W + 6W	
3D WOOFER	15W	
Number of terminal		
📺 (Video)	Input: 3 Output: 1	Phono jacks; 1 V _{P-P} , 75 ohms
🎵 (Audio)	Input: 3 Output: 1	Phono jacks; 500 mVrms
📺 (S Video)	Input: 2	Y : 1 V _{P-P} , 75 ohms, unbalanced, sync negative C : 0.286 V _{P-P} , 75 ohms
🎧 (Headphone)	Output: 1	Minijack
Picture tube	29 inch	
Tube size (cm)	72	Measured diagonally
Screen size (cm)	68	Measured diagonally
Dimension (w/h/d, mm)	794 × 589 × 517	
Mass (kg)	54	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
	SELF DIAGNOSIS FUNCTION	4		5. DIAGRAMS	
1. GENERAL		8	5-1.	Block Diagram	47
2. DISASSEMBLY			5-2.	Frame Schematic Diagram	51
2-1.	3D Speaker Box Removal	27	5-3.	Circuit Boards Location	55
2-2.	Rear Cover Removal	27	5-4.	Schematic Diagrams and Printed Wiring Boards ...	56
2-3.	Speaker Removal	27	(1)	Schematic Diagram of A (1/2) Board	59
2-4.	Chassis Assy Removal	27	(2)	Schematic Diagram of A (2/2) Board	63
2-5.	F Bracket Removal	28	(3)	Schematic Diagrams of F and J2 Boards	67
2-6.	Service Position	28	(4)	Schematic Diagram of B3 Board	71
2-7.	Replacement of Parts	28	(5)	Schematic Diagram of C Board	79
2-7-1.	Replacement of Control Button	28	(6)	Schematic Diagram of P1 Board	83
2-7-2.	Replacement of Light Guide	28	(7)	Schematic Diagrams of B2 and H3 Boards	86
2-8.	D1 Board Removal	29	(8)	Schematic Diagram VM1 Board	91
2-9.	PWB Holder Removal	29	(9)	Schematic Diagram D2 Board	93
2-10.	Terminal Bracket Removal	29	5-5.	Semiconductors	90
2-11.	H3 Board Removal	29		6. EXPLODED VIEWS	
2-12.	P1 Board Removal	30	6-1.	Speaker Bracket	99
2-13.	A and B3 Boards Removal	30	6-2.	Chassis	100
2-14.	Picture Tube Removal	30	6-3.	Picture Tube	101
			6-4.	3D Speaker	102
3. SET-UP ADJUSTMENTS				7. ELECTRICAL PARTS LIST	103
3-1.	Beam Landing	32			
3-2.	Convergence	33			
3-3.	Focus Adjustment	35			
3-4.	G2 (Screen) and White Balance Adjustments	36			
4. CIRCUIT ADJUSTMENT					
4-1.	Adjustments with Commander	37			
4-2.	Adjustment Method	38			
4-3.	Picture Quality Adjustments	43			
4-4.	Display Position Adjustment	43			
4-5.	A Board Adjustment After IC003 (Memory) Replacement	43			
4-6.	Picture Distortion Adjustment	44			

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.

The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".



Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) or overvoltage (OVP) • Vertical deflection stopped • Horizontal deflection overdrive	2 times	002:000 or 002:001~255 003:001~255 004:001~255 at the same time	• H.OUT Q511 is shorted. (A board) • IC701 is shorted. (C board) • -13V is not supplied. (A board) • IC 503 faulty (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~225	• G2 is improperly adjusted. (Note 2) • CRT problem. • Video OUT IC701 is faulty. (C board) • IC301 is faulty. (A board) • No connection A board to C board.	• No raster is generated. • CRT cathode current detection reference pulse output is small.
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.

The symptom that is diagnosed first by the microcontroller is displayed on the screen.

Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

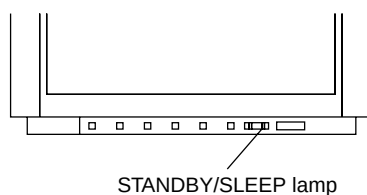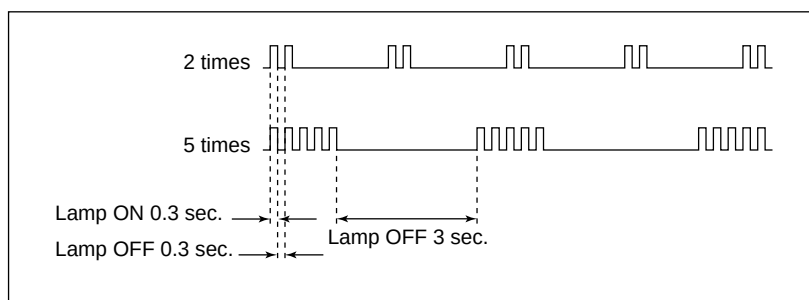

<u>Diagnostic Item</u>	<u>Flash Count*</u>
+B overcurrent/overvoltage Vertical deflection stopped	2 times
White balance failure	5 times

* One flash count is not used for self-diagnostic.

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of failure for confirmation on the screen:


[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display → channel [5] → Sound volume [-] → Power ON
↑

Note that this differs from entering the service mode (mode volume [+]).

Self-Diagnosis screen display

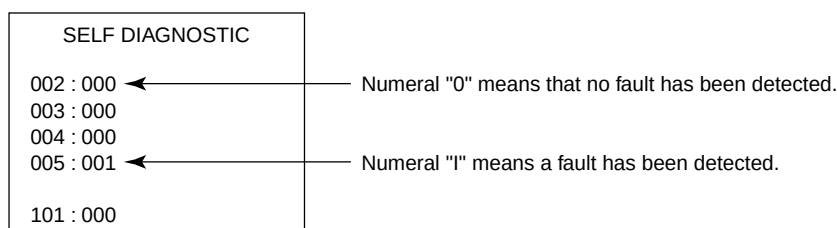

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]


To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] → 0

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

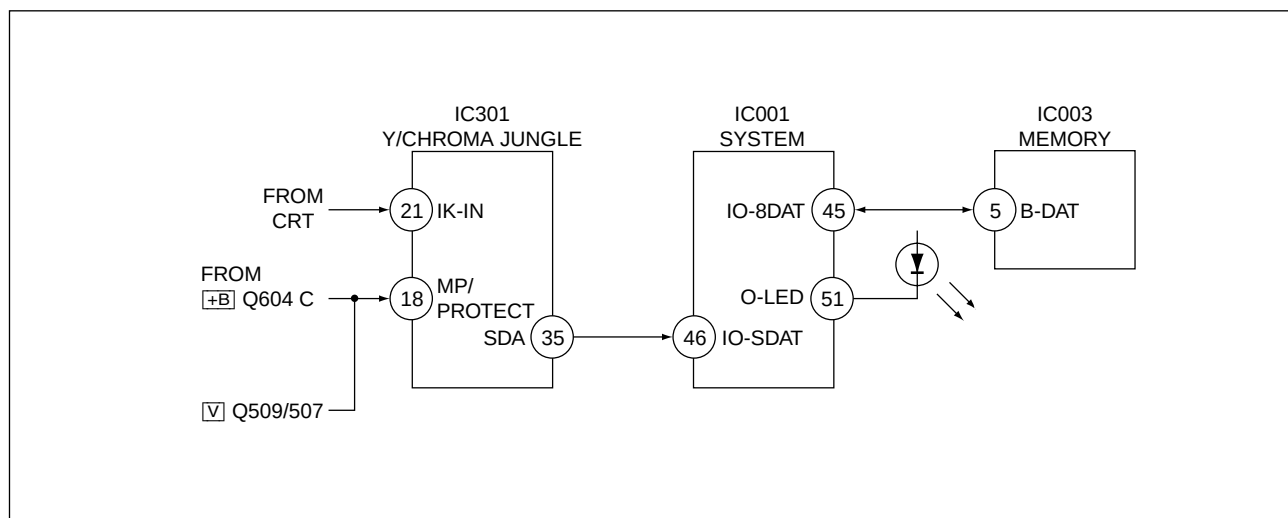

+B overcurrent (OCP)

Occurs when an overcurrent on the +B(135) line is detected by Q604. If Q604 go to ON and the voltage to pin 18 of IC301 should go down when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

Vertical deflection stopped

Occurs when an absence of the vertical deflection pulse is detected by Q509 and IC001 shut down the power supply.

Vertical deflection overcurrent

Occurs when an overcurrent on V drive line is detected by Q507. Power supply will be shut down when detect this by IC001.

White balance failure

If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture.

* (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

SECTION 1
GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.


Using Your New TV

Getting Started

Step 1

Connect the antenna

If you wish to connect a VCR, see the "Connecting a VCR" diagram below.

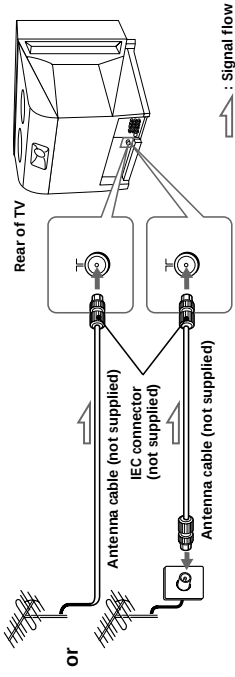


CAUTION

Do not connect the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.

Connecting a VCR

To watch the video, press (see page 10).

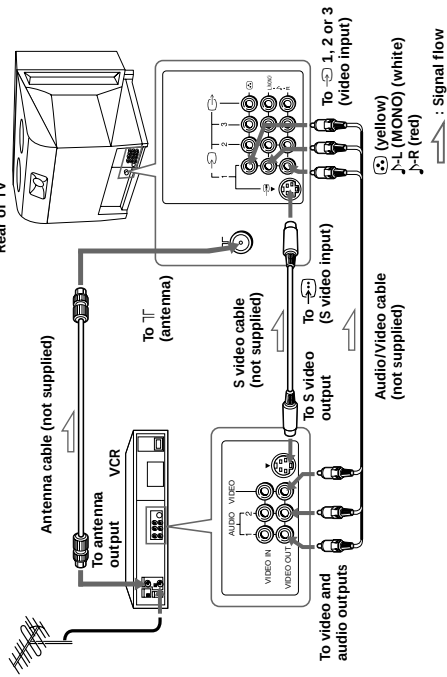


Notes

- If you connect a monaural VCR, connect the yellow plug to ⑤ (the yellow jack) and the black plug to ④-L (MONO) (the white jack).
- If you connect a VCR to the ① (antenna) terminal, preset the signal output from the VCR to the program number 0 on the TV.
- If both ② (S video input) and ③ (S video input) at the rear of your TV are input at the same time, the ③ (S video input) is automatically selected. To view ③ 1 (video input), disconnect the S video cable.
- Do not connect video equipment to ③ 3 (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.
- When no signal is input to the connected video equipment, the TV screen becomes blue.

Step 2

Insert the batteries into the remote




Note

- Do not use old batteries nor use different types of batteries together.

Step 3

Preset the channels automatically

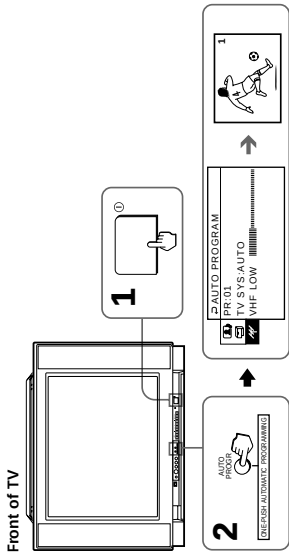


Tip

- If you want to stop the automatic channel presetting, press MENU twice.


Now You Are Ready . . .

To watch your TV, see page 9.

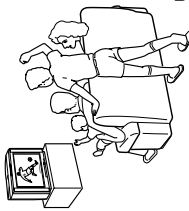

Connecting the 3D WOOFER

You can enjoy high quality sound by connecting the 3D WOOFER.

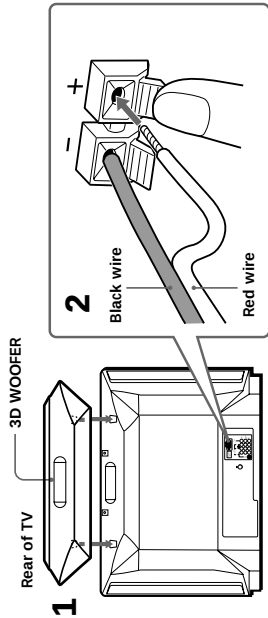

1 Attach the 3D WOOFER into the footholds on the top of your TV.

2 Connect the wires to the 3D WOOFER (8 Ω) terminals at the rear of your TV. The red wire should be connected to the ⊕ red terminal and the black wire to the ⊖ black terminal.

Notes


- Connect only the supplied 3D WOOFER; otherwise your TV may malfunction.
- Unplug your TV from the wall outlet when connecting the 3D WOOFER.
- To prevent a malfunction caused by a short circuit of the terminals, make sure that none of the 3D WOOFER wire strands stick out, making contact with the neighbouring speaker terminal.

Connecting optional components

You can connect optional audio/video components, such as a VCR, multi disc player, camcorder, video game or stereo system.

To watch the picture of the connected equipment, press (see page 10).


Connecting a camcorder/video game equipment using the (video input) jacks

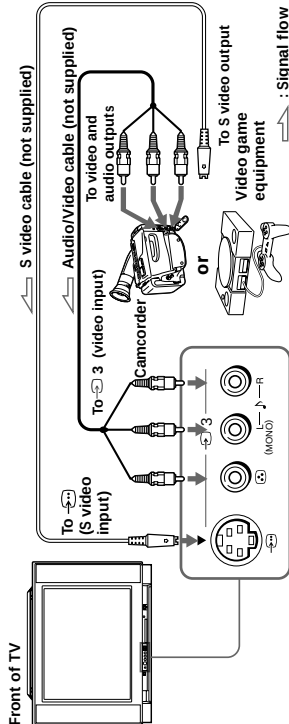

Notes

- You can also connect video equipment to the 1, 2 or 3 (video input) jacks at the rear of your TV.
- If both (S video input) and 3 (video input) at the front of your TV are input at the same time, the (S video input) is automatically selected. To view 3 (video input), disconnect the S video cable.

Connecting audio/video equipment using the (monitor output) jacks

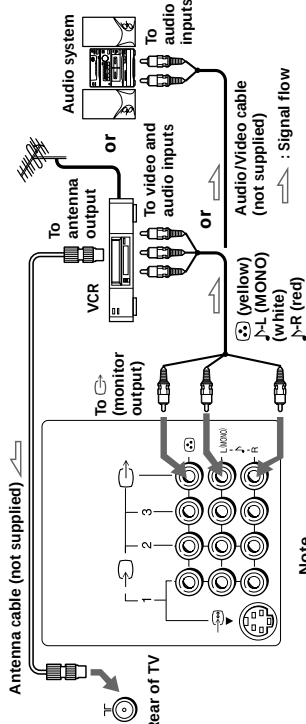

Note

- When connecting a monaural VCR, connect the yellow plug to (the yellow jack) and the black plug to (MONO) (the white jack).


Securing the TV

To prevent the TV from falling, secure the TV using one of the following methods:

A With the supplied screws, attach the band to the TV stand and to the rear of the TV using the provided hole.

or

B Put the cord or chain through the clamps to secure the TV against a wall or pillar.


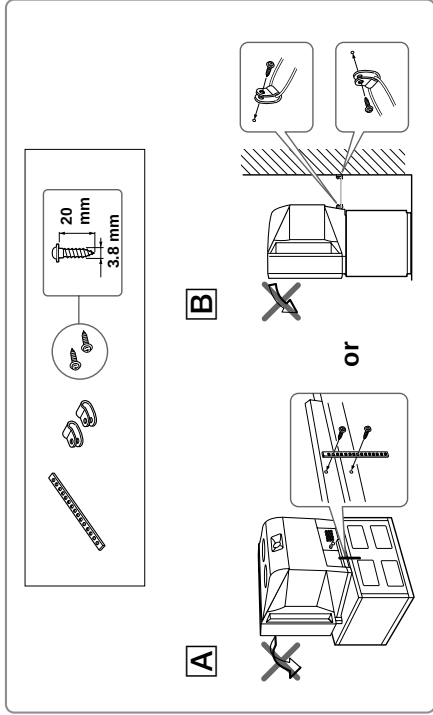


Note

- Use only the supplied screws. Use of other screws may damage the TV.

Watching the TV

This section explains functions used while watching TV. Most operations can be done using the remote.

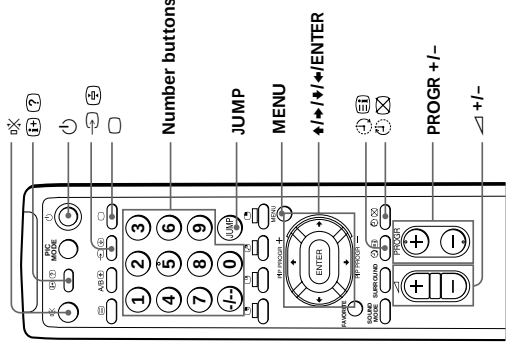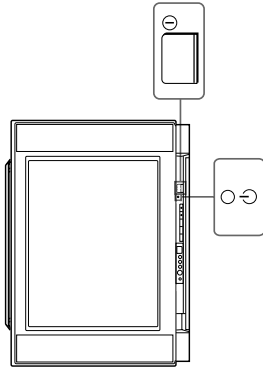


Using Your New TV

1 Press **⏻** to turn on the TV.
When the TV is in the standby mode (the **⏻** indicator on the TV is lit red), press **⏻** on the remote or **PROGR + / -** on the TV.

2 Press **PROGR +/-** or number buttons to select the TV program.
For double digit numbers, press **- / +**, then the number (e.g., for 25, press **- / +**, then 2 and 5).

3 Press **⏻ +/-** to adjust the volume.

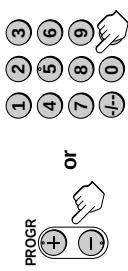

continued

Watching the TV (continued)

Additional tasks

To	Do this
Turn off temporarily	Press ⏻ . The ⏻ indicator on the TV lights up red.
Turn off completely	Press ⏻ on the TV.
Mute the sound	Press ⏻ .
Watch the video input (VCR, camcorder, etc.)	Press ⏻ to select "VIDEO 1", "VIDEO 2" and "VIDEO 3". To return to the TV program, press ⏻ .
Jump back to the previous channel	Press JUMP .
Display the on-screen information*	Press ⏻ .

* The picture, sound, and either the program number or video mode are displayed. The on-screen display for the picture and sound information disappears after about 3 seconds.

Changing the menu language

You can change the menu language as well as the on-screen language.

For details on how to use the menu, see "How to use the menu" on page 21.

- 1** Press **MENU**.
- 2** Press **⏻** or **⏻** to select the **SET UP** icon (⏻), then press **ENTER**.
- 3** Make sure "LANGUAGE/ اللغة" is selected, then press **ENTER**.
- 4** Press **⏻** or **⏻** to select "عربي" or "English", then press **ENTER**. The menu language changes to Arabic.


To return to the normal screen

Press **MENU**.

Advanced Operations

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in PERSONAL option.

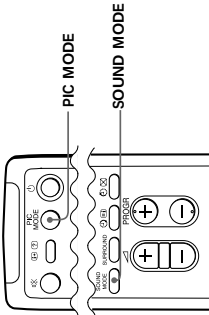

Selecting the picture mode


Press PIC MODE repeatedly until you get the desired picture mode.



Select	To
DYNAMIC	receive high contrast pictures.
STANDARD	receive normal contrast pictures.
SOFT	receive mild pictures.
PERSONAL	receive the last adjusted picture setting from the ADJUST option in the A / V CONTROL menu (see page 22 and 23).

Selecting the sound mode

Press SOUND MODE repeatedly until you get the desired sound mode.

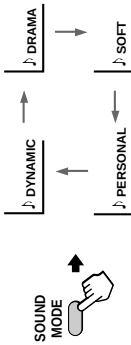

Select	To
DYNAMIC	listen to dynamic and clear sound that emphasizes the low and high tones.
DRAMA	listen to sound that emphasizes voice and high tones.
SOFT	receive soft sound.
PERSONAL	receive the last adjusted sound setting from the ADJUST option in the A / V CONTROL menu (see page 22 and 23).


Tip

- You can also set the picture and sound modes using the menu (see "Changing the A / V CONTROL setting" on page 22 and 23).

Using Your New TV

Setting the Wake Up timer

- Press  until the desired period of time appears.
The Wake Up timer starts immediately after you have set it.

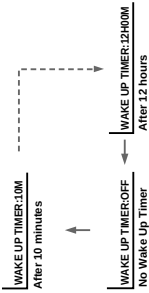

- Select the TV program or video mode you want to display when you wake up.

- Press  or set the Sleep timer if you want the TV to turn off automatically. The  indicator lights up orange.

To cancel the Wake Up timer


Press  until "WAKE UP TIMER: OFF" appears or turn off the TV's main power.

Note

- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into the standby mode. To continue watching the TV, press any button or control on the TV or the remote.

Setting the Sleep timer

- Press  until the desired period of time appears.
The Sleep timer starts immediately after you have set it.

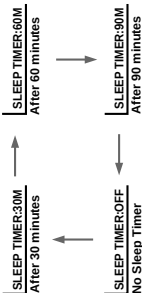


To cancel the Sleep timer


Press  until "SLEEP TIMER: OFF" appears or turn the TV off.

Viewing your favorite channels


You can display and select six of your favorite channels directly from your TV screen.

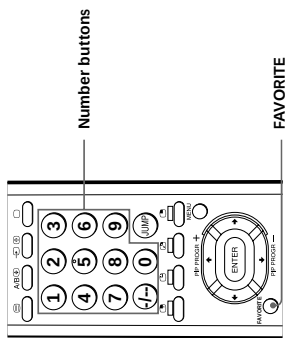

1 Press FAVORITE.



2 Press the number button from 1 to 6 to select the desired channel.

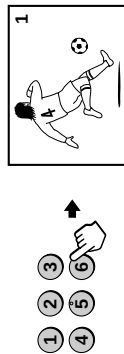


Tip

- To program your favorite channels, see "Programming your favorite channels" on page 26.

Watching two programs at the same time —PIP

With the Picture-in-Picture (PIP) feature, you can display a different TV program or video directly within the main picture.

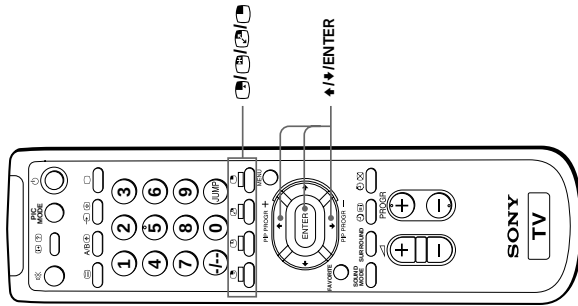


Displaying the PIP screen

Press .




Listening with surround sound

The surround feature enables you to enjoy the sound effects of a concert hall or movie

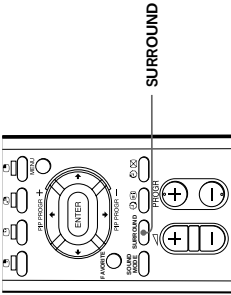

Press SURROUND repeatedly until you receive the desired surround sound.

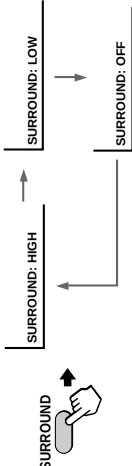

Select	To
HIGH	listen to sound that spreads out over a large area, giving the feeling of being at a concert hall.
LOW	listen to the sound that gives the feeling of being at a live concert.
OFF	turn off the surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

Additional PIP tasks

To	Press
change a TV program in the PIP screen	▲ or ▼, then press ENTER.
change a video input in the PIP screen	
swap pictures between the main and PIP screens	

freeze the PIP screen
 To unfreeze the screen, press the button again.

To return to the normal screen

Press .

Tips


- You can also display the PIP screen using the menu (see “Adjusting the PIP setting” on page 24).
- You can change the position of the PIP screen (see “Adjusting the PIP setting” on page 24).

Notes

- When you display a video input on the PIP screen at a faster/slower speed, the picture may be disrupted depending on the VCR type.
- If you display different color systems on the PIP screen, the size of the PIP screen may be different and the picture may be disrupted. This does not indicate a malfunction of the TV.

Selecting a stereo or bilingual program

You can enjoy stereo sound or bilingual programs of NICAM and A2 (German) stereo systems.

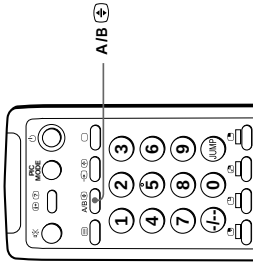


Press A/B repeatedly until you receive the sound you want.

The on-screen display changes to show the selected sound and the indicator on the TV lights up red.




When receiving a NICAM program

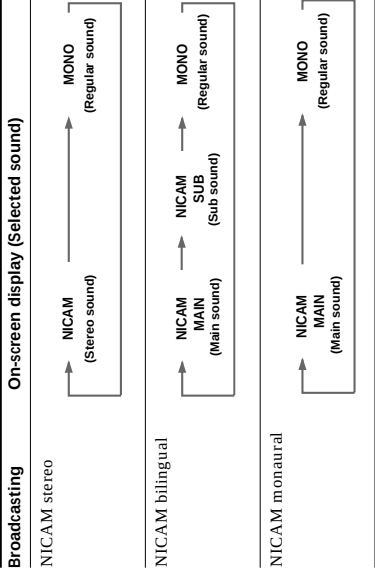

continued

Selecting a stereo or bilingual program (continued)

When receiving an A2 (German) program

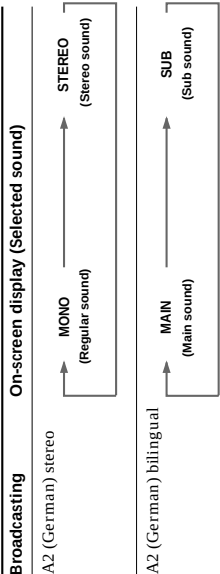

Notes

- If the signal is very weak, the sound becomes monaural automatically.
- If the stereo sound is noisy when receiving a NICAM program, select "MONO". The sound becomes monaural, but the noise is reduced.

If the sound is distorted or noisy when receiving a monaural program through the antenna terminal

Press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.




Notes

- The "MONO" or "AUTO" setting is memorized for each program position.
- You cannot receive stereo broadcast signal when the TV is in the "MONO" setting. Normally set the TV to "AUTO".

Adjusting Your Setup (MENU)

Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. Here's an overview of the menu system.

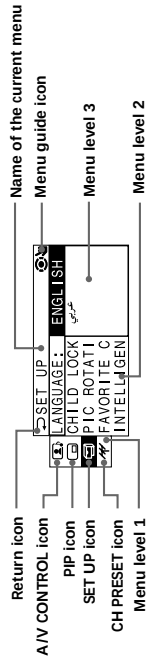

Level 1	Level 2	Level 3/Function
	A/V CONTROL	PICTURE MODE
	ADJUST	Select the picture mode. DYNAMIC → STANDARD → SOFT → PERSONAL → ADJUST
		Adjust the PERSONAL option. PICTURE → COLOR → BRIGHT → HUE → SHARP
	SOUND MODE	Select the sound mode. DYNAMIC → DRAMA → SOFT → PERSONAL → ADJUST
	ADJUST	Adjust the PERSONAL option. BASS → TREBLE → BALANCE → BBE* Select the surround mode. HIGH → LOW → OFF
	PIP POSITION	Change the position of the PIP screen.
	PIP	Display a sub screen within the main picture.
	SWAP	Exchange program between main screen and sub screen.
	LANGUAGE	Change the menu language. ENGLISH - عربي (Arabic)
	CHILD LOCK	Lock the channel independently.
	PIC ROTATION	Adjust the picture position.
	FAVORITE CH	Program favorite channels.
	INTELLIGENT VOL	Adjust volume automatically.

continued


Introducing the menu system (continued)

Level 1	Level 2	Level 3/Function
	AUTO PROGRAM	Preset channels automatically.
	MANUAL PROGRAM	Preset channels manually.
	SKIP	Skip unwanted or unused program positions.
	TV SYS	Select the TV system. B/G, I, D/K, M
	COL SYS	Select the color system. AUTO → PAL → SECAM → NTSC3.58 → NTSC4.43

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

You can use the buttons on the remote and on the TV as well to display the menu and adjust the settings.

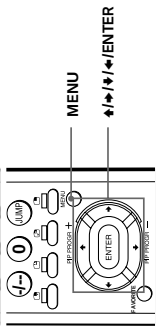

1 Press MENU to display the menu.



2 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired item.



3 Press ENTER to confirm your option and go to the next menu level.



Other menu operations

To	Press
Adjust the setting value	$\blacktriangle$, $\blacktriangledown$ or $\blacklozenge$
Move to the next / previous menu level*	$\blacklozenge$ or $\blacktriangleleft$
Cancel the menu	MENU


Note

- If more than 60 seconds elapse between entries, the menu screen automatically disappears.

Tips


- If you want to exit from Menu Level 2 to Menu Level 1, press $\blacklozenge$ or $\blacktriangleleft$ until the return icon ($\blacklozenge$) is highlighted, then press ENTER.
- You can also use the buttons on the TV for menu operations. $\blacktriangleleft$ + $\blacklozenge$ works as $\blacklozenge$ or $\blacktriangleleft$ on the remote and $\blacklozenge$ works as ENTER on the remote.

Front of TV




Changing the A/V CONTROL setting

The A/V CONTROL menu allows you to change the picture and sound settings.

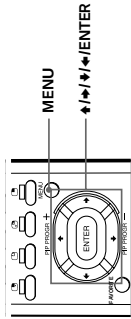

1 Press MENU.

2 Make sure the A/V CONTROL icon ($\blacklozenge$) is selected, then press ENTER.



3 Press $\blacktriangle$ or $\blacktriangledown$ to select either PICTURE MODE, SOUND MODE, or SURROUND, then press ENTER.



4 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired option, then press ENTER.



For Select

PICTURE MODE	either DYNAMIC, STANDARD, SOFT, PERSONAL*, or ADJUST.
SOUND MODE	either DYNAMIC, DRAMA, SOFT, PERSONAL*, or ADJUST.
SURROUND	either HIGH, LOW, or OFF.

* When the PERSONAL mode is selected, the last adjusted picture and sound settings from the ADJUST option are received.

Tip


- For details on the options under "PICTURE MODE", "SOUND MODE" and "SURROUND", see page 12 and 16 respectively.

To return to the normal screen

Press MENU.

Adjusting the PIP setting

With the Picture-In-Picture (PIP) feature, you can display a sub screen within the main picture of different TV programs or video inputs.

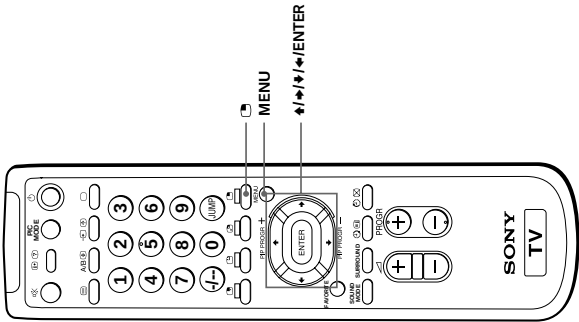


1 Press MENU.



2 Press $\blacktriangle$ or $\blacktriangledown$ to select the PIP icon (), then press ENTER.



3 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired option, then press ENTER.



Adjusting the ADJUST options under PICTURE MODE

1 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired item (e.g., COLOR), then press ENTER.



2 Adjust the value according to the following table, then press ENTER.

For	Press $\blacktriangle$ / $\blacktriangledown$ to	Press $\blacktriangle$ / $\blacktriangledown$ to
PICTURE	decrease picture contrast	increase picture contrast
COLOR	decrease color intensity	increase color intensity
BRIGHT	darken the picture	brighten the picture
HUE*	increase red picture tones	increase green picture tones
SHARP	soften the picture	sharpen the picture

* You can adjust HUE for the NTSC color system only.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select PERSONAL.

Adjusting the ADJUST options under SOUND MODE

1 Press $\blacktriangle$ or $\blacktriangledown$ to select the desired item (e.g., BALANCE), then press ENTER.



2 Adjust the value according to the following table, then press ENTER.

For	Press $\blacktriangle$ / $\blacktriangledown$ to	Press $\blacktriangle$ / $\blacktriangledown$ to
BASS	decrease the bass	increase the bass
TREBLE	decrease the treble	increase the treble
BALANCE	increase the left speaker's volume	increase the right speaker's volume
BBE	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to turn off the BBE sound	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select PERSONAL.

Tip

- For details on the menu system and how to use the menu, refer to "Introducing the menu system" on page 19 and "How to use the menu" on page 21.

Select	To
POSITION	change the position of the PIP screen. Press ▲ or ▼ to select the desired position, then press ENTER.
PIP	display a sub screen within the main picture. Press ▲ or ▼ to select "ON", then press ENTER. To cancel, press □ or select "PIP : OFF", then press ENTER.
SWAP	exchange program between main screen and sub-screen.

To return to the normal screen


Press MENU.

Tip

- For details on the menu system and how to use the menu, refer to "Introducing the menu system" on page 19 and "How to use the menu" on page 21.

Changing the SET UP setting

The SET UP menu allows you to change the menu language, lock channels, adjust the picture position, program your favorite channels and adjust volume automatically.

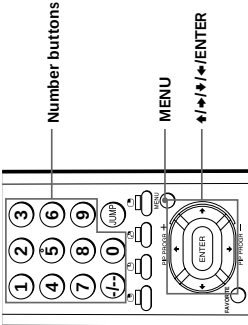

Programming your favorite channels

The FAVORITE CH feature enables you to program up to six channels for direct selection.

- 1 Press MENU.
- 2 Press **▲** or **▼** to select the SET UP icon (⚙️), then press ENTER.
- 3 Press **▲** or **▼** to select FAVORITE CH, then press ENTER twice.
- 4 Press **▲** or **▼**, or number buttons to program the desired channel (e.g., PR03), then press ENTER.
- 5 To continue programming other favorite channels, press **▲** or **▼** and then press ENTER. After that, repeat step 4.

To return to the normal screen

Press MENU.

Changing the SET UP setting (continued)

Changing other SET UP menu options

1

Press MENU.

2

Press $\blacktriangle$ or $\blacktriangledown$ to select the SET UP icon (), then press ENTER.

3

Press $\blacktriangle$ or $\blacktriangledown$ to select the desired option (e.g., INTELLIGENT VOL), then press ENTER.

Select	To
LANGUAGE / اللغة	Change the menu language (see "Changing the menu language" on page 10).
CHILD LOCK	Prevent children from watching certain channels (see "Using the CHILD LOCK feature" on page 26).
PIC ROTATION	Adjust the picture position when it is not aligned to the TV screen. Press $\blacktriangle$, $\blacktriangledown$, $\blackrightarrow$ or $\blackleftarrow$ to adjust the picture position, then press ENTER.
FAVORITE CH	Program channels for direct selection (see "Programming your favorite channels" on page 25).
INTELLIGENT VOL	Adjust the volume of each program automatically. Press $\blacktriangle$ or $\blacktriangledown$ to select "ON", then press ENTER. To turn off the Intelligent Volume function, select "OFF", then press ENTER.

To return to the normal screen

Press MENU.

Tip

- For details on the menu system and how to use the menu, refer to "Introducing the menu system" on page 19 and "How to use the menu" on page 21.

Using the CHILD LOCK feature

You can prevent your children from watching certain channels by using the CHILD LOCK feature.

1

Press MENU.

2

Press $\blacktriangle$ or $\blacktriangledown$ to select the SET UP icon (), then press ENTER.

3

Press $\blacktriangle$ or $\blacktriangledown$ to select CHILD LOCK, then press ENTER.

4

Press $\blacktriangle$ or $\blacktriangledown$, or number buttons to select the desired channel, then press ENTER.

5

Press $\blacktriangle$ or $\blacktriangledown$ to select ON, then press ENTER.

6

To continue locking other channels, press ENTER and then repeat step 4 to 5.

The lock symbol () appears on the screen.

To unlock the channel, select OFF.

	SET UP	LANGUAGE/اللغة	ENGLISH
	CHILD LOCK	PR00	OFF
	PIC ROTATION		
	FAVORITE CH		
	INTELLIGENT VOL		OFF

	SET UP	LANGUAGE/اللغة	ENGLISH
	CHILD LOCK	PR00	ON
	PIC ROTATION		
	FAVORITE CH		
	INTELLIGENT VOL		OFF


To return to the normal screen

Press MENU.

continued

Changing the Channel Preset (CH PRESET) setting

The CH PRESET menu allows you to adjust the setup of your TV. For example, you can receive a channel with a weak signal that fails to be tuned in by automatic presetting.

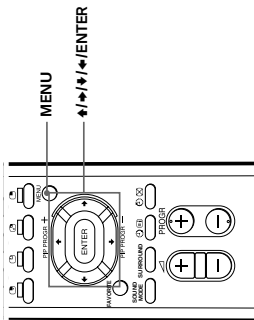

Presetting channels manually


- 1 Press MENU.
- 2 Press **↔** or **↔** to select the CH PRESET icon (✱), then press ENTER.
- 3 Press **↔** or **↔** to select MANUAL PROGRAM, then press ENTER.
- 4 Select the program number to which you want to preset a channel.
 - (1) Make sure "PR" is selected, then press ENTER.
 - (2) Press **↔** or **↔** until the program number you want to preset (e.g., program number 10) appears on the menu, then press ENTER.

Changing the Channel Preset (CH PRESET) setting (continued)

- 5 Select the desired channel.
 - (1) Press **↔** or **↔** to select either VHF LOW, VHF HIGH or UHF, then press ENTER.
 - (2) Press **↔** or **↔** until the desired channel picture appears on the TV screen, then press ENTER.
- 6 If the sound of the desired channel is abnormal, select the appropriate TV system.
 - (1) Press **↔** or **↔** to select TV SYS, then press ENTER.
 - (2) Press **↔** or **↔** until the sound becomes normal (e.g., M), then press ENTER.

7


If you are not satisfied with the picture and sound quality, you may improve them by using fine tuning.

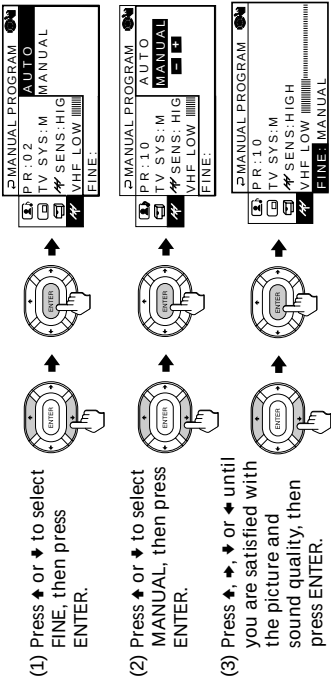

The + or - icon on the menu flashes while tuning.

8

If the TV signal is too strong and the picture is distorted, you may reduce the TV receiving sensitivity.

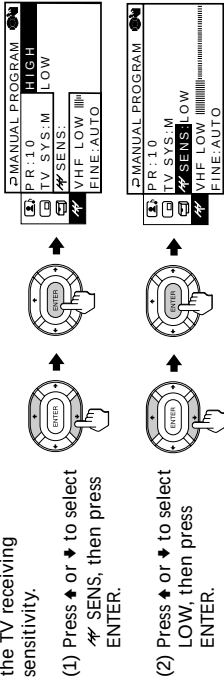

To return to the normal screen
Press MENU.


Notes

- If you preset a locked channel, that particular channel will be unlocked automatically (see page 27).
- The TV system (TV SYS), SENS and the fine tuning (FINE) settings are memorized for each program number.

continued

Changing the Channel Preset (CH PRESET) setting (continued)

Changing other CH PRESET menu options

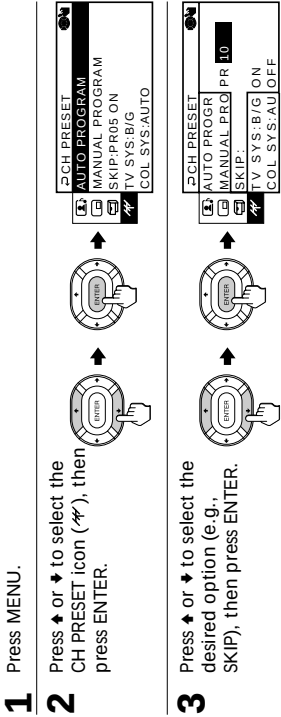

Select

To

AUTO PROGRAM	preset channels automatically.
MANUAL PROGRAM	preset channels manually. See "Presetting channels manually" on page 26 and 27.
TV SYS	select the TV system. See "Presetting channels manually" on page 26 and 27.
COL SYS	select the color system. Normally, set this to "AUTO".
SKIP	skip unwanted or unused program numbers. 1 Press $\blacktriangle$ or $\blacktriangledown$ until the unused or unwanted program number appears, then press ENTER. 2 Press $\blacktriangle$ or $\blacktriangledown$ to select "ON", then press ENTER. To put the skipped program number back on, select "OFF", then press ENTER.

Tip

- For details on the menu system and how to use the menu, refer to "Introducing the menu system" on page 19 and "How to use the menu" on page 21.


Note

- If you preset a locked channel, that particular channel will be unlocked automatically.

Self-diagnosis function

Your TV is equipped with a self-diagnosis function. If there is a problem with your TV, the u indicator flashes red. The number of times the u indicator flashes indicates the possible causes.

Front of TV

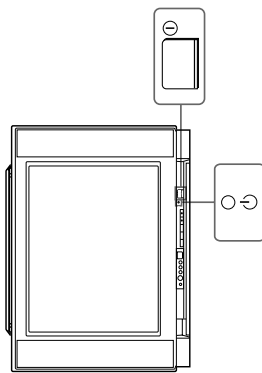

- 1** Check that the red flashes of the u indicator is about 3 seconds per interval.
- 2** Count the number of times the u indicator flashes.
- 3** Press ① (main power) to turn off your TV.
- 4** Inform your nearest Sony service center about the number of times the u indicator flashes.
Be sure to note the model name and serial number located on the rear of your TV.

Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Solutions	Possible cause
Snowy picture 	- Check the antenna cable and connection on the TV, VCR and on the wall. (page 4) - Display the CH PRESET menu and select "MANUAL PROGRAM" to preset the channel again. (page 29 and 30)	Connection is loose or the cable is damaged.
Noisy sound 	- Check the antenna type (VHF/UHF). Contact a Sony dealer for advice. - Adjust the antenna direction. Contact a Sony dealer for advice. - Try using a booster.	- The antenna type is inappropriate. - The antenna direction is inappropriate. - Signal transmission is low.
Distorted picture 	- Display the CH PRESET menu and select "MANUAL PROGRAM". Then, select "SENS: ON". (page 22) - Turn off or disconnect the booster if it is in use.	Broadcast signals are too strong.
Noisy sound 		
Good picture 	- If the sound of all the channels are noisy, display the CH PRESET menu and select the appropriate TV system (page 30), then select "AUTO PROGRAM" to preset the channels again. (page 32) - If the sound of some channels are noisy, select the channel, then display the CH PRESET menu and select the appropriate TV system. (page 30)	The TV system setting is inappropriate.
Noisy sound 		
No picture 	Check the power cord, antenna and the VCR connections.	The power cord, antenna or VCR is not connected.
No sound 	- Press ① (power). - Press ② (main power) on the TV to turn off the TV about five seconds, then turn it on again.	The TV is not turned on.

Symptom	Solutions	Possible cause
Stereo broadcast sound switches on and off or is distorted.	• Check the antenna cable and connection on the TV, VCR and on the wall. (page 4)	• Connection is loose or the cable is damaged.
Or The sound switches between monaural and stereo frequently.	• Adjust the antenna direction. Contact a Sony dealer for advice. • Press A/B until a good sound is heard.	• The antenna direction is inappropriate. • Broadcast signal has a transmission problem.
Picture slant 	• Keep external speakers or other electrical equipment away from the TV. • Display the SET UP menu and adjust "PIC ROTATION" so that the picture is aligned to the TV screen. (page 28)	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.
The indicator on your TV flashes red for about 3 seconds per interval.	• Contact your nearest Sony service center.	• Your TV may need service.
TV cabinet creaks.	—	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	—	• The TV's demagnetizing function is working. This does not indicate a malfunction.


Symptom	Solutions	Possible cause
Good picture 	• Press $\triangle$ + to increase the volume level.	• The volume level is too low.
No sound 	• Press $\times$ to cancel the muting. • Press A/B until a good sound is heard.	• The sound is muted. • Broadcast signal has a transmission problem.
Dotted lines or stripes 	• Do not use a hair dryer or other equipment near the TV. • Adjust the antenna direction for minimum interference. Contact a Sony dealer for advice.	• There is local interference from cars, neon signs, hair dryers, power generators, etc.
Double images or "ghosts" 	• Use a highly directional antenna. • Adjust the antenna direction. Contact a Sony dealer for advice. • Turn off or disconnect the booster if it is in use.	• Broadcast signals are reflected by nearby mountains or buildings. • The antenna direction is inappropriate. • Use of a booster is inappropriate.
No color 	• Display the A/V CONTROL menu and select "ADJUST" of PICTURE MODE, then adjust the COLOR level. (page 22 and 23) • Display the CH PRESET menu and check the color system (COL SYS) setting. (usually set this to AUTO). (page 32)	• The color level setting is too low. • The color system setting is inappropriate.
Abnormal color patches 	• Adjust the antenna direction. Contact a Sony dealer for advice. • Keep external speakers or other electrical equipment away from the TV. Do not move the TV while the TV is turned on. Press (main power) on the TV to turn off the TV for about five minutes, then turn it on again.	• The antenna direction is inappropriate. • There are magnetic effects from external speakers or other electrical equipment that may affect the TV. • The direction of the earth's magnetic field may affect the TV.
TV cannot receive stereo broadcast signal.	• Press A/B until "AUTO" appears on the screen.	• The stereo reception setting is inappropriate.

Additional Information

Identifying parts and controls

Refer to the pages indicated in parentheses () for details.


Front panel

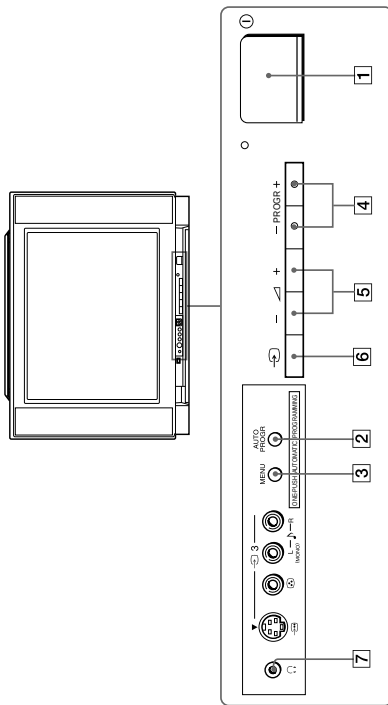


- 1 (main power) button (9)
- 2 AUTO PROGRAM (auto program) button (5)
- 3 MENU button (21)
- 4 PROGRAM +/- (program) buttons (9)
- 5 +/- (volume) buttons (9)
- 6 (TV/video) button (10)
- 7 (Headphone) jack

Additional Information | 37

Remote Control

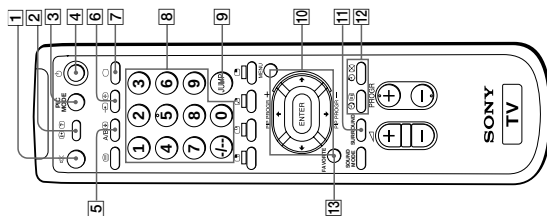


- 1 Muting button (10)
- 2 (display) button (10)
- 3 PIC MODE button (12)
- 4 (power) button (9)
- 5 AV/8 button (15)
- 6 (video) button (10)
- 7 (TV) button (10)
- 8 Number buttons (10)
- 9 JUMP button (10)
- 10 Menu operation buttons (21)
- 11 SURROUND button (16)
- 12 Timer setting buttons (11)
- 13 FAVORITE button (13)

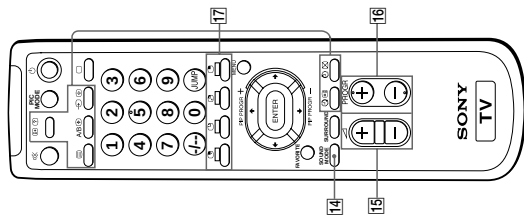

- 14 SOUND MODE button (12)
- 15 (volume) +/- buttons (9)
- 16 PROGRAM +/- button (9)
- 17 Teletext operation buttons (not used for KV-XF29M97/XF29M67)

Names / symbols of buttons on the remote are indicated in different colors to represent the available functions.	
Label color	Button function
White	For general TV operations
Green	For Teletext operations
Yellow	For PIP operations


38 | Additional Information

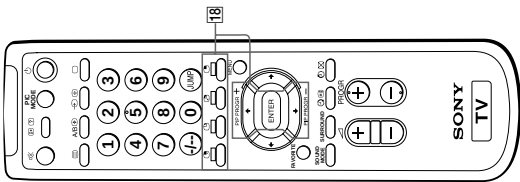


- 18 PIP operation buttons (24-25)
- TV/Video
 - Freeze
 - Swap
 - PIP
 - ENTER – for PIP PROGR

SECTION 2 DISASSEMBLY


2-1. 3D SPEAKER BOX REMOVAL

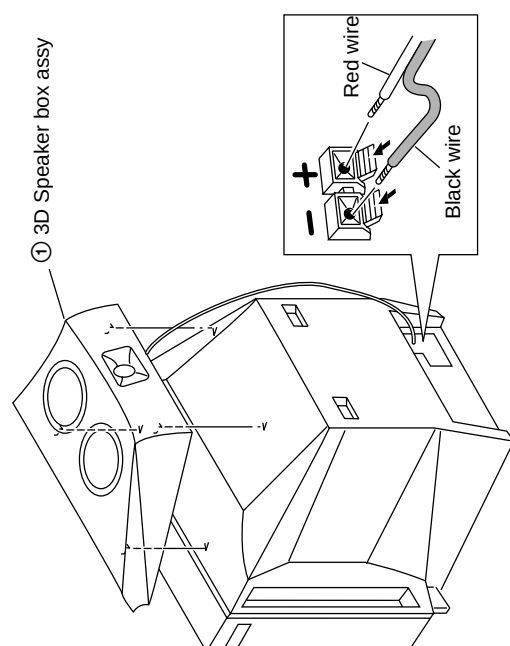


2-3. SPEAKER REMOVAL

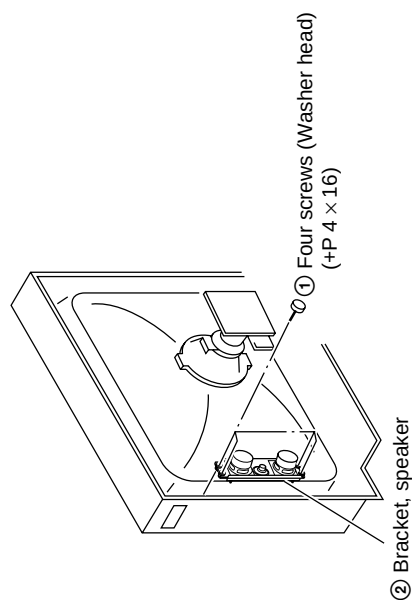


2-2. REAR COVER REMOVAL

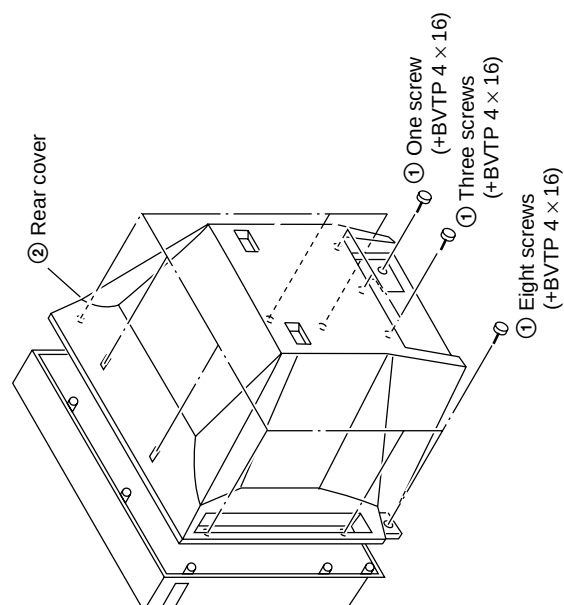

2-4. CHASSIS ASSY REMOVAL

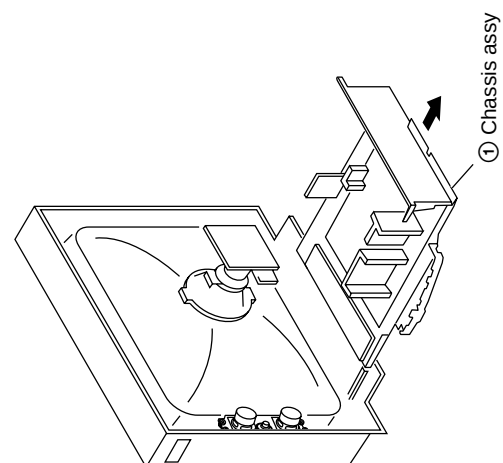


2-5. F BRACKET REMOVAL

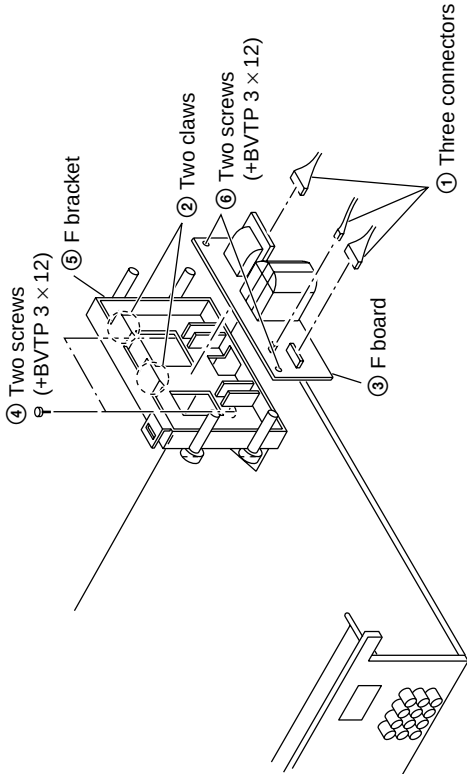

2-7. REPLACEMENT OF PARTS


For replacement of the Control Button and Light Guide, unscrew them, exchange with the new parts, and fix them with screws (+BVTP) respectively.

2-7-1. REPLACEMENT OF CONTROL BUTTON

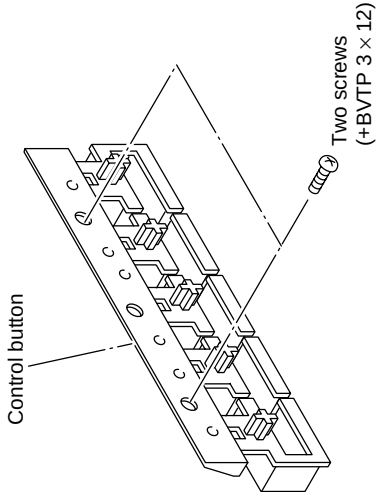


2-6. SERVICE POSITION


(Note: Remove F Bracket first.)

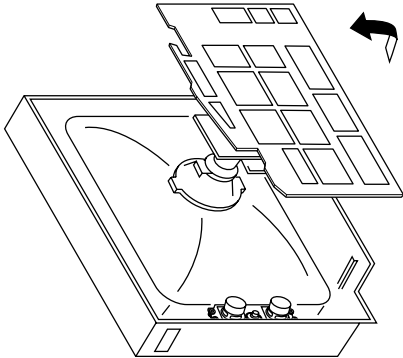


2-7-2. REPLACEMENT OF LIGHT GUIDE

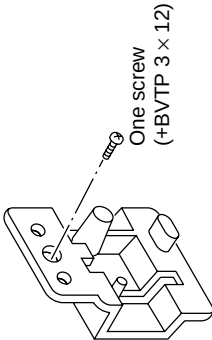


2-8. D1 BOARD REMOVAL

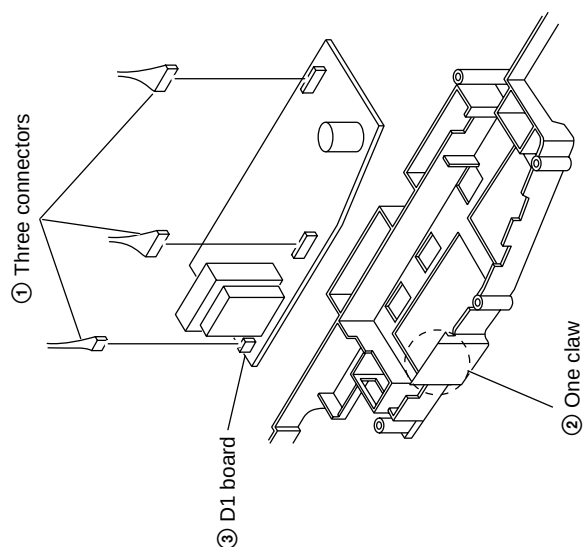


2-9. PWB HOLDER REMOVAL

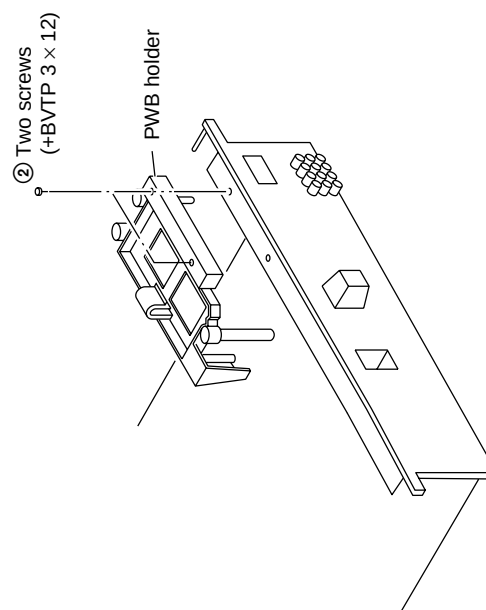

2-10. TERMINAL BRACKET REMOVAL

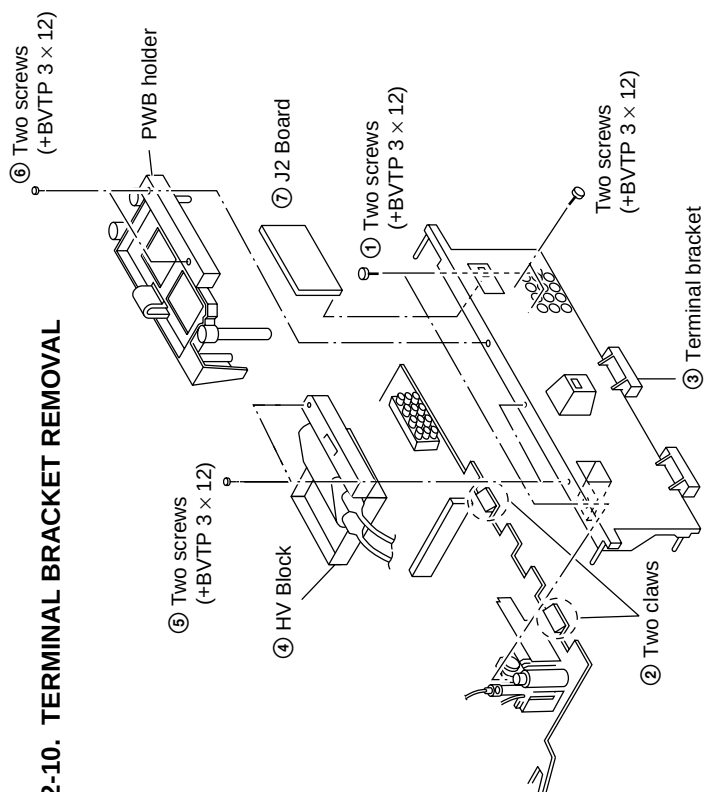


2-11. H3 BOARD REMOVAL

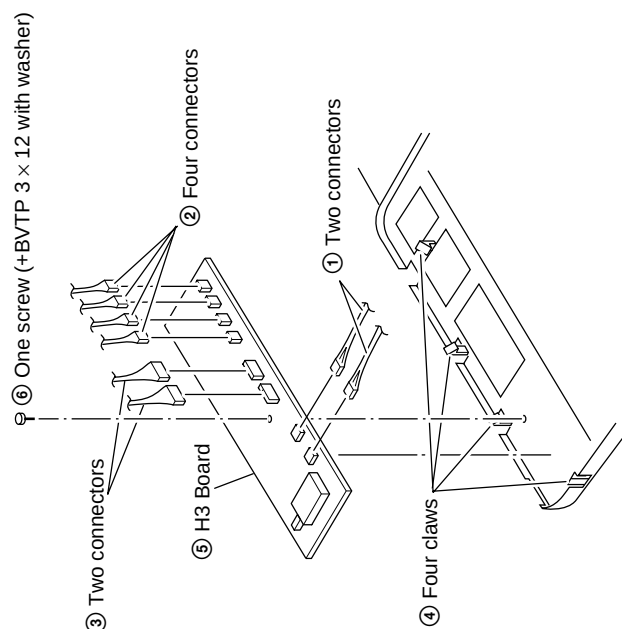


2-12. P1 BOARD REMOVAL


NOTE : V1 board is not used for this model

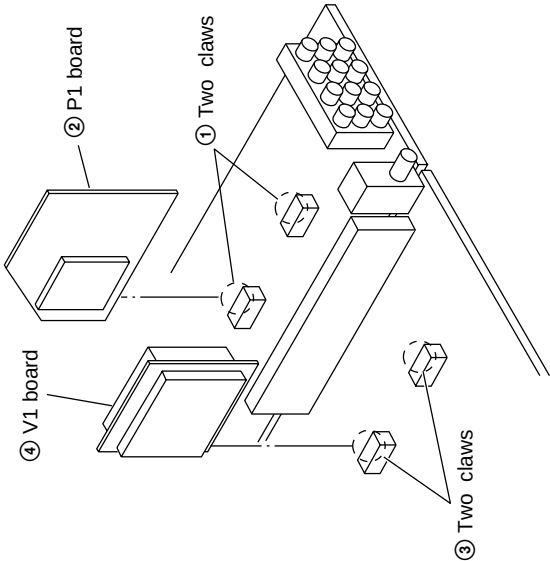

2-13. A AND B3 BOARDS REMOVAL

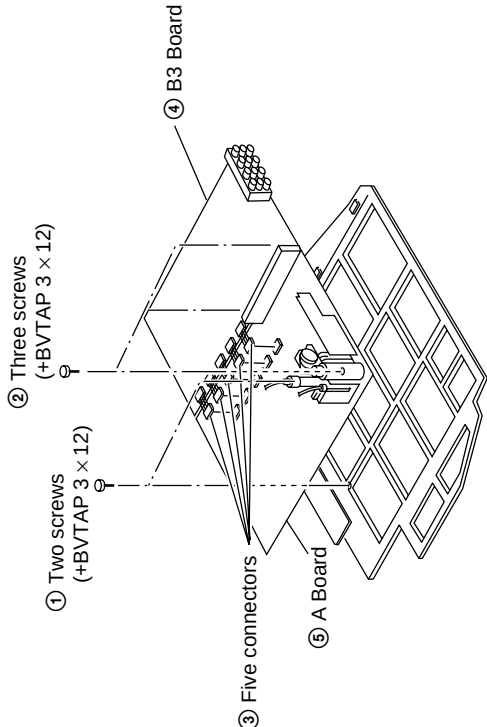

2-14. PICTURE TUBE REMOVAL

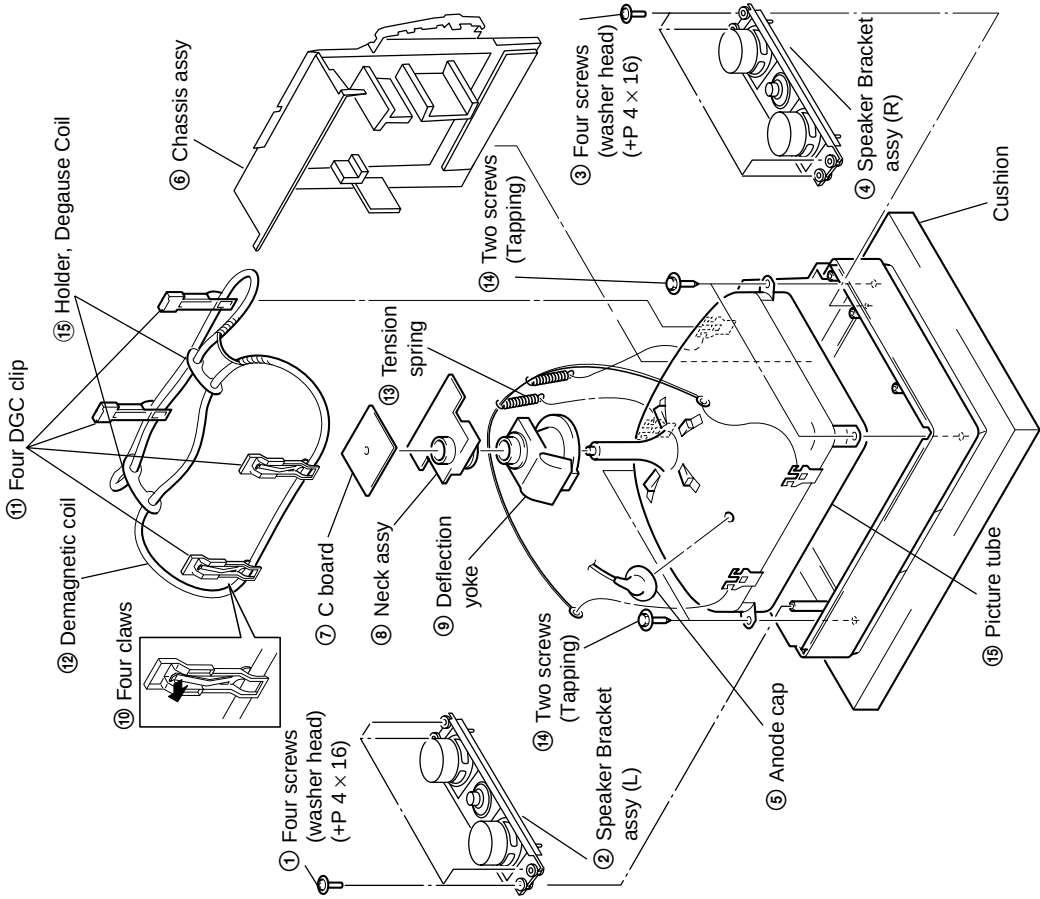


•REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.


•REMOVING PROCEDURES

- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①.
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ③.

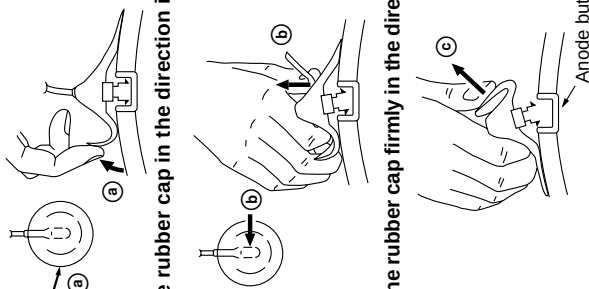

• HOW TO HANDLE AN ANODE-CAP

- ① Do not damage the surface of anode-caps with sharp shaped objects.
- ② Do not press the rubber too hard so as not to damage the inside of anode-cap.
- ③ A metal fitting called the shatter-hook terminal is built into the rubber.
- ④ Do not turn the foot of rubber over too hard.
- ⑤ The shatter-hook terminal will stick out or damage the rubber.

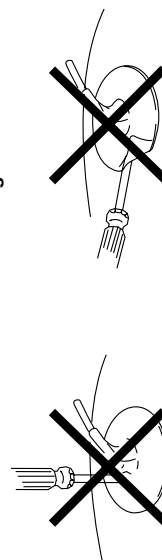

SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control normal

BRIGHTNESS control normal

.....

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
Contrast } normal
Brightness }
2. Position neck assy as shown in Fig3-2.
3. Set the pattern generator raster signal to a green raster.
4. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
(See Figures 3-1 through 3-4.)
5. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-2.)
6. Switch the raster signal to blue, then to red and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-5.)

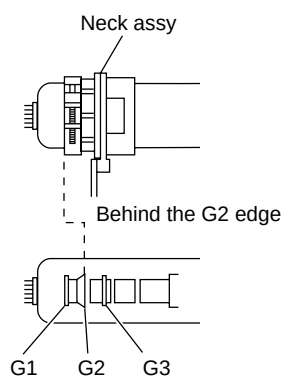


Fig. 3-1

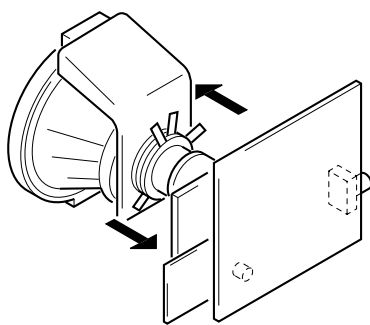


Fig. 3-2

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

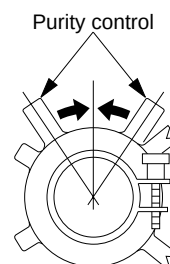


Fig. 3-3

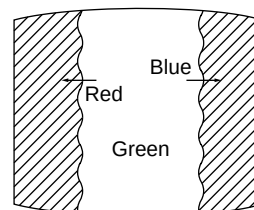


Fig. 3-4

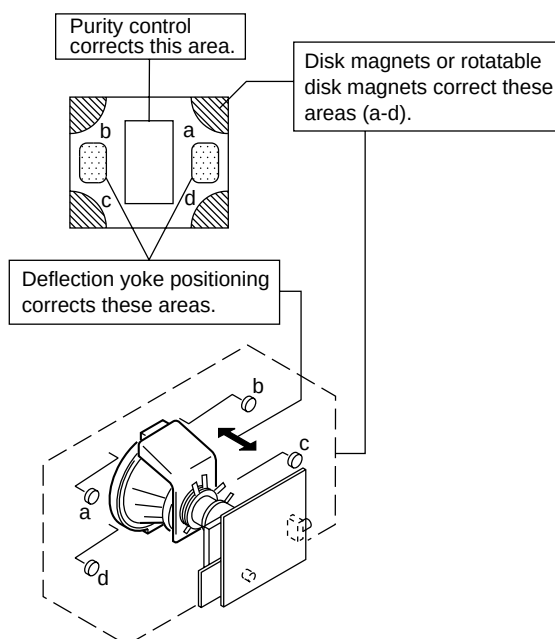



Fig. 3-5

3-2. CONVERGENCE


Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.


(1) Horizontal and Vertical Static Convergence

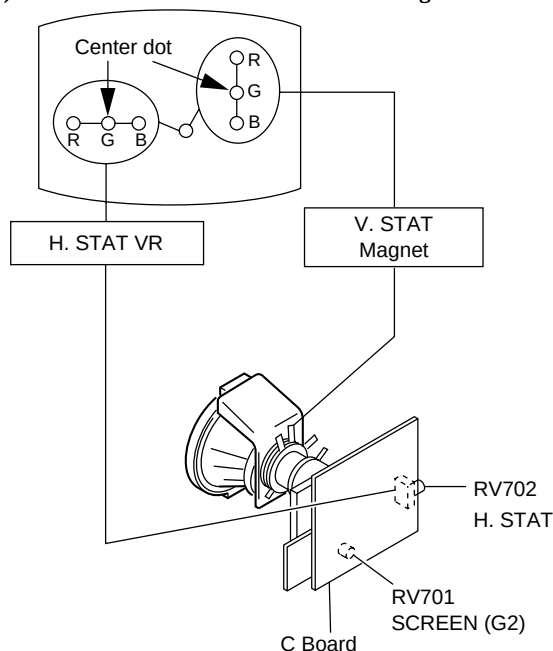


1. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

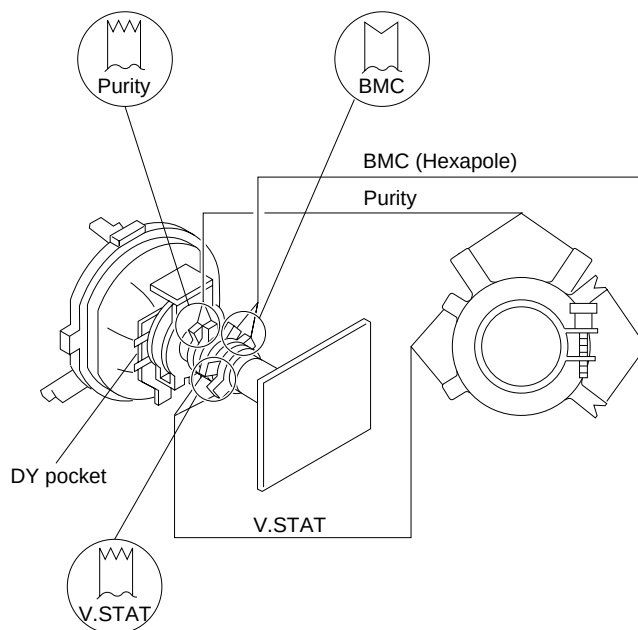


① V. STAT

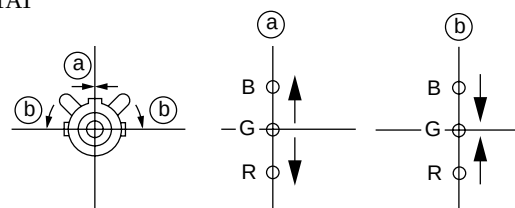

② H. STAT VR



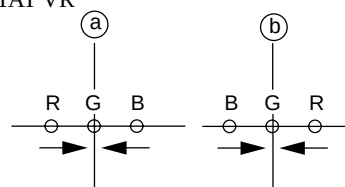


③

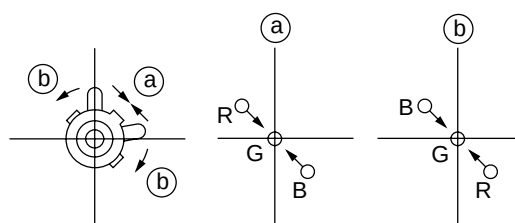

④ BMC (Hexapole) Magnet.

If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

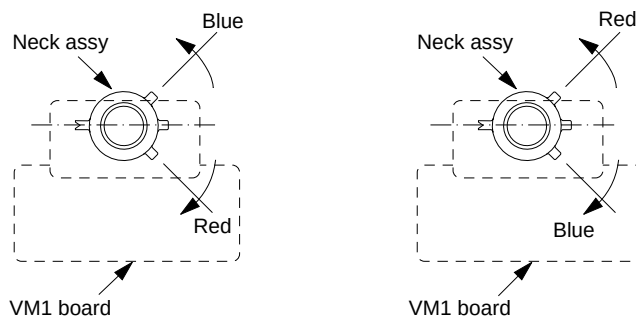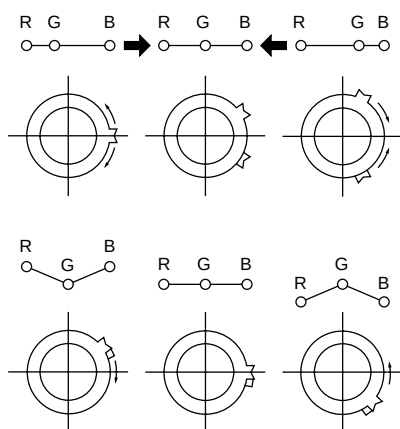

Note

1. The Red and Blue magnets should be equally far from the horizontal center line.
2. Do not separate the Red and Blue magnets too far. (Less than 8 mm)


⑤ Y separation axis correction magnet adjustment.

1. Receive the cross-hatch signal and adjust [PICTURE] to [MIN] and [BRIGHTNESS] to [STANDARD] .
2. Adjust the Y separation axis correction magnet on the neck assembly so that the horizontal lines at the top and bottom of the screen are straight.

(2) Dynamic Convergence Adjustment


Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

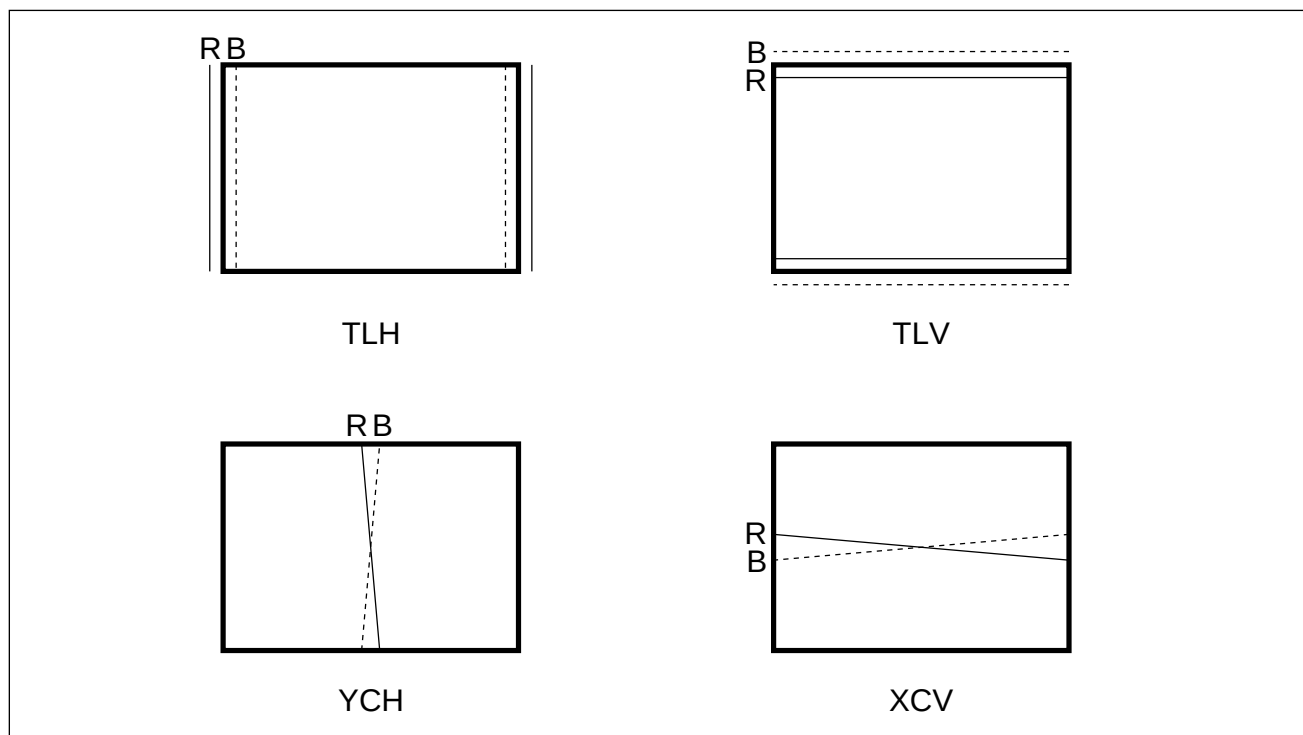


TLV	Rotate	TLV-2	VOL (29", 34") on DY
	Rotate	TLV	VOL (25") on DY
XCV	Rotate	XCV	Adj core on DY
YCH	Rotate	YCH	VOL on DY
TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)

ON DY:


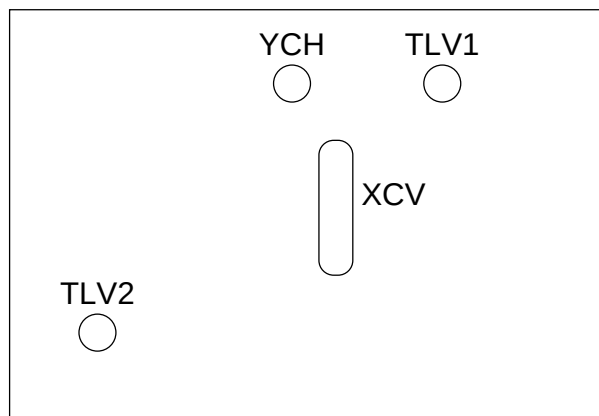


3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for the best focus.

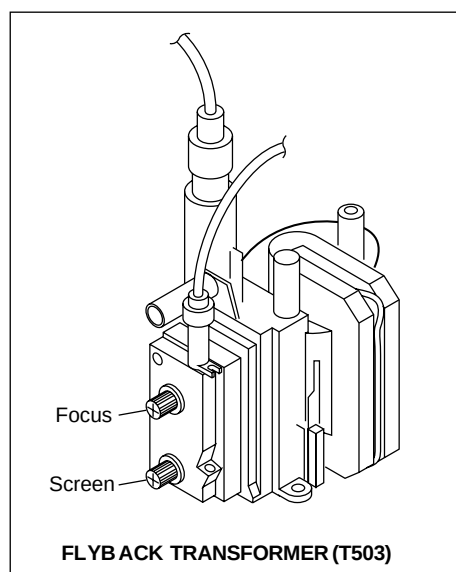


(3) Screen-corner Convergence

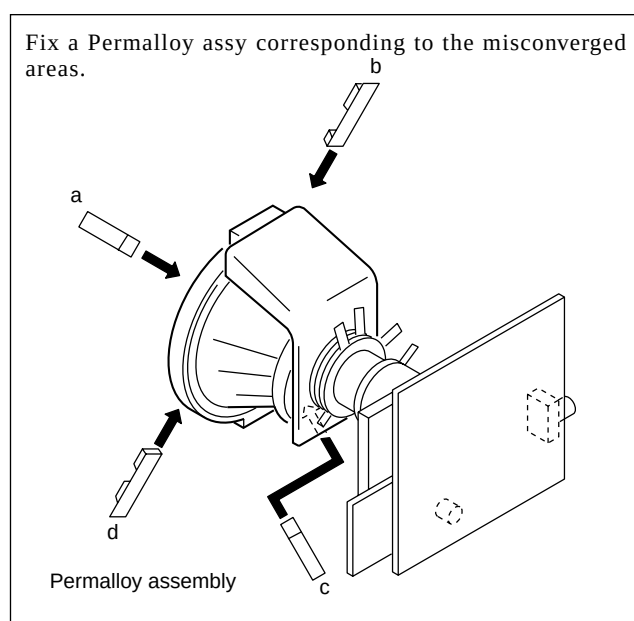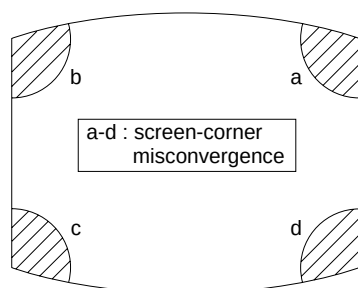

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

- 1) Set the PICTURE to normal.
- 2) Put to VIDEO input mode without signals.
- 3) Connect R, G and B of the C board cathode to the oscilloscope.
- 4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
- 5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

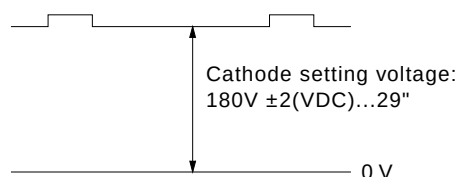


2. WHITE BALANCE ADJUSTMENT

- 1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
- 2) Input white raster signal.
- 3) Set the PICTURE to minimum.
- 4) Select GCT (WHB 4) and BCT (WHB 5) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 5) Set the PICTURE to maximum.
- 6) Select GDR (WHB 1) and BDR (WHB 2) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 7) Write into the memory by pressing [MUTING] then [0].

3. SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Input a staircase signal of black to white from the pattern generator.
- 3) BRIGHTNESS 50%.
PICTURE MINIMUM
- 4) Select SBR (WHB7) with [1] and [4], and adjust SBR (WHB7) level with [3] and [6] so that the second stripe from the right is dimly lit.

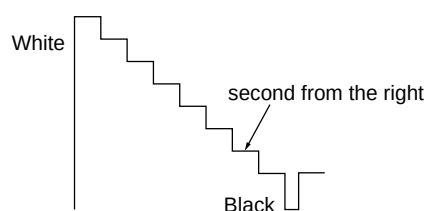


SECTION 4

CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments are made with the RM-953 that comes with this unit.

a. ENTERING SERVICE MODE

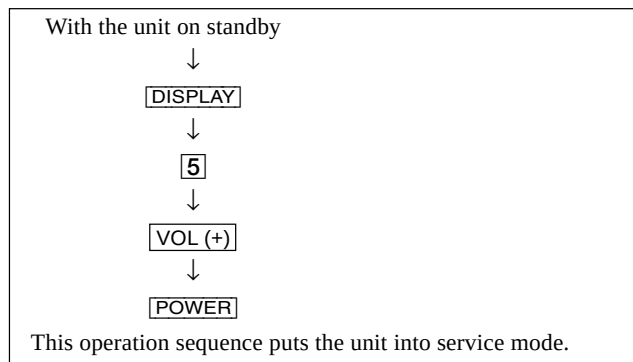

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY


- 1) Set to Service Mode.
- 2) Press [1] (UP) and [4] (DOWN), select an item of adjustment.
- 3) Press [MUTING] button and it will indicate WRITE on the screen.
- 4) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD


- 1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again to confirm adjustments were made.

The screen display is :

Device Name	Item Name	Item No	Data	Marking of virgin NVM	Mode	
GEO		00	HPS	1C	■	SERVICE 50 ← PAL, SECAM : 50
621S		1.0C	59	7F	0	000A NTSC : 60
Suffix No (OEM Code)	Software version				Total Power-On time (hours)	

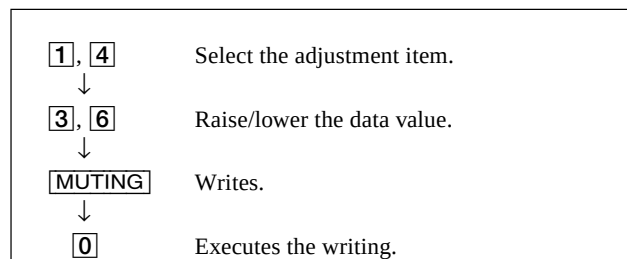

- [7], [0] All the data becomes the values in memory.
- [8], [0] All user control goes to the standard state.
- [5], [0] Service data initialization (Be sure not to use usually.)
- [2], [0] Write 50Hz adjustment data to 60Hz, or vice versa.

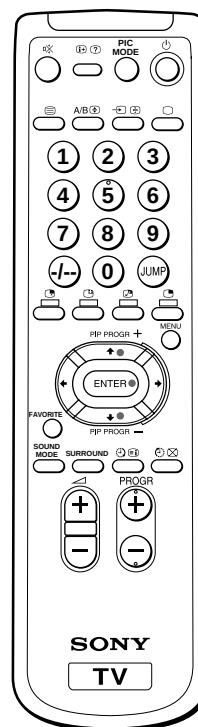

RM-953

4-2. ADJUSTMENT METHOD



Item Number 00 of device GEO

This explanation uses H-Position as an example.


- 1. Select “GEO 00 HPS” with the [1] and [4] buttons.
- 2. Raise/lower the data with the [3] and [6] buttons.
- 3. Select the optimum state. (The standard is 1F for PAL reception.)
- 4. Write with the [MUTING] button. (The display changes to WRITE.)
- 5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

Note : 1. In [WRITE], the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

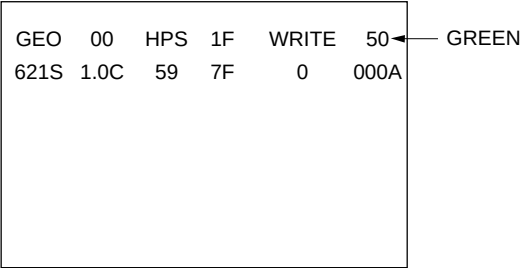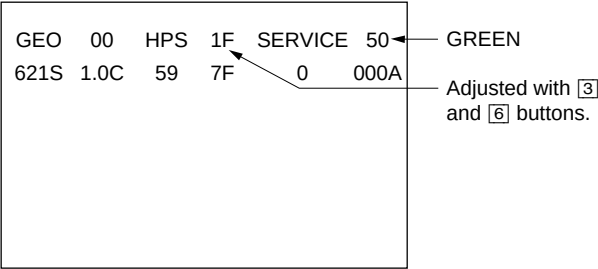

Written with [MUTING]

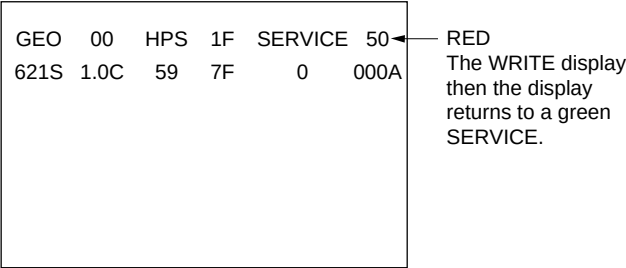

Write executed with [0]

Adjustment Item Table

Device Name	Functionality		Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
	No	Name							
GEO	0	HPS	7	3F	H Position	50/60HZ	12 (7-2)	CXA2139S(88H)	96 (7-2)
	1	HSZ	1F	3F	H Size	50/60HZ	11 (7-2)		95 (7-2)
	2	PAP	1F	3F	Pin Amp	50/60HZ	13 (7-2)		97 (7-2)
	3	TLT	7	0F	Trapezium	50/60HZ	15 (7-4)		99 (7-4)
	4	VPS	1F	3F	V Position	50/60HZ	0F (7-2)		93 (7-2)
	5	VSZ	1F	3F	V Size	50/60HZ	0E (7-2)		92 (7-2)
	6	SCO	7	0F	S Correction	50/60HZ	10 (7-4)		94 (7-4)
	7	VLN	7	0F	V Linearity	50/60HZ	10 (3-0)		94 (3-0)
	8	BOW	7	0F	AFC Bow	50/60HZ	16 (7-4)		9A (7-4)
	9	AGL	7	0F	AFC-Angle	50/60HZ	16 (3-0)		9A (3-0)
WHB	0A	UPN	1F	3F	Upper Pin	50/60HZ	14 (7-2)	CXA2139S(88H)	98 (7-2)
	0B	LPN	2F	3F	Lower Pin	50/60HZ	18 (7-2)		9C (7-2)
	0C	HBL	1	1	H Blanking on/off	50/60HZ	18 (1)		6C (1)
	0D	LBL	7	0F	Left H Blanking	50/60HZ	17 (7-4)		9B (7-4)
	0E	RBL	7	0F	Right H Blanking	50/60HZ	17 (3-0)		9B (3-0)
	0	RDR	1F	3F	R Drive	DYNAMIC/other	09 (7-2)		A3 (7-2)
	1	GDR	1F	3F	G Drive	DYNAMIC/other	0A (7-2)		A4 (7-2)
	2	BDR	1F	3F	B Drive	DYNAMIC/other	0B (7-2)		A5 (7-2)
	3	RCT	7	0F	R Cutoff	SECAM/other	07 (3-0)		A7 (3-0)
	4	GCT	7	0F	G Cutoff	SECAM/other	08 (7-4)		A8 (3-0)
SAJ	5	BCT	7	0F	B Cutoff	SECAM/other	08 (3-0)	CXA2139S(88H)	A8 (3-0)
	6	BMN	15	1F	Brightness Minimum Data	SECAM/other	06 (7-2)		106
	7	SBR	1F	3F	Sub Brightness Control	SECAM/other	06 (7-2)		107
	0	PMX	33	3F	Picture Maximum Data		03 (7-2)		105
	1	SHU	8	0F	Sub Hue Control	TV/Video	05 (7-2)		108
	2	SSH	8	0F	Sub Sharpness Control	TV/Video	07 (7-4)		109
	3	SCL	1F	3F	Sub Color Control	NTSC/others	04 (7-2)		10A
	0	EHT	4	0F	EHT Comp	50/60HZ	15 (3-0)		99 (3-0)
	1	GMA	2	03	Gamma Correction	NTSC/others	0B (1-0)		25B (1-0)
	2	YDL	6	0F	Y Delay	PAL/SECAM/NTSC	0C (3-0)		A0 (3-0)
VP	3	SST	1	03	SECAM ID Start Position		1B (1-0)	CXA2139S(88H)	6F (1-0)
	4	SSP	1	03	SECAM ID Stop Position		1B (3-2)		6F (3-2)
	5	SLV	2	03	SECAM ID Level		1C (1-0)		70 (1-0)
	6	SBF	22	3F	SECAM BELL fo		1C (7-2)		70 (7-2)
	7	DYC	1	1	Dynamic Color on/off		0A (1)		5E (1)
	8	ABL	1	1	ABL Mode Switching (except STANDARD mode)		09 (1)		5D (1)
	9	VTH	1	1	ABL Detection Vth Switching		09 (0)		5D (0)
	0A	SFO	1	1	FO Switching for Sharpness	NTSC/others	05 (1)		24A (1)
	0B	DCX	1	1	DC Trans. Ratio Switching		06 (1)		5A (1)
	0C	SHT	1	1	Pre-/Overshoot ratio Switch	NTSC/others	06 (0)		24A (0)

Adjustment Item Table

Device Name	Functionality		Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
	No	Name							
VP	0D	HDW	0	1	H Drive Pulse Width Switch	TV/Video	00 (6)		54 (6)
	0E	AFC	1	03	AFC Gain Control		0F (1-0)		A1 (1-0)
	0F	HOS	7	0F	H Oscillation		0C (7-4)		60 (7-4)
	10	HSS	0	1	Slice Level of H Sync Sep.	50/60Hz	0D (1)		61 (1)
	11	VSS	0	1	Slice Level of V Sync Sep.		0D (0)		61 (0)
	12	HMS	1	1	Macro Vision C/m off/on		0E (0)		92 (0)
	13	YUV	1	1	YUV Switch Control		01 (0)		55 (0)
	14	CDV	1	3	CD mode for Video		0D (5-4)		259 (5-4)
	15	RON	1	1	R ON		01 (3)		55 (3)
	16	GON	1	1	G ON		01 (2)		55 (2)
	17	BON	1	1	B ON		01 (1)		55 (1)
	18	PON	1	1	P ON		00 (7)		54 (7)
	19	BLK	0	1	BLK Off	Video only not memorized not memorized not memorized	12 (0)		66 (0)
	1A	VMC	0	1	VM Off		13 (0)		67 (0)
AP	0	BCS	1	3	Bass Center Shift		#4 (3-0)	TDA7315(80H)	24C (1-0)
	1	TCS	1	3	Treble Center Shift		#5 (3-0)		24D (1-0)
	2	TRF	2	3	RF Treble Offset		#5 (3-0)		24E (1-0)
MSP	0	WST	15	FF	W/G Stereo Threshold	TEMPORARY		MSP3415D(84H)	165
	1	WBT	EC	FF	W/G Bilingual Threshold				166
	2	WLL	5	FF	W/G Monaural Threshold				167
	3	WAC	1	0F	W/G Agreement Count				168
	4	WDL	30	FF	W/G Search Delay				169
	5	NDL	20	FF	NICAM Search Delay				16A
	6	SDL	10	FF	Stereo status Read Delay				16B
	7	AGC	1	1	AGC Switch Auto/Constant		00BB (7)		116 (7)
	8	REL	28	3F	AGC Gain at Constant Mode		00BB (6-1)		116 (6-1)
	9	CRM	0	1	Carrier muting on/off		00BB (9)		115 (9)
	0A	ACO	1	1	Audio Clock out on/off		0083 (5)		11A (5)
	0B	FP	1B	7F	FM Prescale for non-M system		000E (14-8)		221
	0C	FPM	32	7F	FM Prescale for M system		000E (14-8)		222
	0D	FH	36	7F	FM Prescale for HDEV		000E (14-8)		223
	0E	FHM	65	7F	FM Prescale for HDEV and M		000E (14-8)		224
	0F	WGP	2A	7F	W/G Prescale		000E (14-8)		225
	10	NIP	6D	7F	NICAM Prescale		0010 (14-8)		14F
	11	ERR	50	FF	Auto FM switch Threshold		0021 (10-3)		174
	12	VOL	6D	FF	Loud Speaker gain 07xx0		0000 (11-4)		254

Adjustment Item Table

Device Name	Functionality		Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
	No	Name							
SVP	0	SBF	22	3F	SECAM BELL f0		1C (7-2)	CXA2060AS(8AH)	85 (7-2)
	1	HOS	7	0F	H Oscillation		0C (7-4)		80 (7-4)
	2	SHU	8	0F	Sub Hue Control		05 (7-2)		210
	3	SCL	1F	3F	Sub Color Control		04 (7-2)		211
PIP	0	SDL	02	0F	Delay of output SELECT		01 (6-3)	SDA9288X(D6H)	1A0 (6-3)
	1	PPH	15	FF	H Position of TOP-LEFT Pin P		01/02		1AF
	2	PPV	2E	FF	V Position of TOP-LEFT Pin P		03 (7-0)		1B0
	3	YDL	0	07	Delay of Luminance Input		04 (2-0)		1A3 (2-0)
	4	HDI	00	0F	H Sync Delay for Inset		06 (3-0)		1A5 (3-0)
	5	ISC	01	1	Inset Clock Selection		06 (4)		1A5 (4)
	6	CLP	1	1	Clamp Pulse Selection		06 (5)		1A5 (5)
	7	CLC	0	1	Clamp Cycle Selection		06 (6)		1A5 (6)
	8	CON	00	0F	Contrast Adjustment for inset		09 (7-4)		1A8 (7-4)
	9	PLL	2	03	H Position For A-ch		0D (6-5)		1AC (6-5)
	0A	PDV	0	0F	PIP V Pedestal Level		0E (7-4)		1AD (7-4)
	0B	PDU	0	0F	PIP U Pedestal Level		0E (3-0)		1AD (3-0)
TXT	0	TXH	1	3	Teletext Horizontal Position		10 (1-0)	SAA5261(58H)	248 (1-0)
	1	TXV	0	3	Teletext Vertical Position		10 (6-4)		248 (5-4)
OPM	0	OSH	0A	3F	OSD H Position	Option-Misc	1F1	CXP86461(60H)	18D (7-2)
	1	COM	1	03	Comb Selection				23F (7-6)
	2	APC	1	1	APC Switch				23E (5)
	3	TSY	0	03	TV Sys at Auto TV Sys				23E (4-3)
	4	MUT	0	1	No Signal Mute				23E (0)
	5	AFM	1	1	Auto FM switch				23E (1)
	6	RFB	0	3	C-BPF Control				23F (5-4)
OPB	7	TVO	0	7	Tilt to V-Angle offset				23F (2-0)
	0	OP1	FF	FF	Optional Bits 1 (see below)	Option-Bits		CXP86461(60H)	48
	1	OP2	63	FF	Optional Bits 2 (see below)				49
	2	OP3	31	FF	Optional Bits 3 (see below)				4A

NOTE

- Shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

KV-XF29M97/XF29M67

RM-953

ITEM INFORMATION.**No. OPB0 OP1**

Item	XTAL 4.43	XTAL 3.58	SECAM	2nd. Lang	B/G	I	D/K	M
KV-XF29M97	1	1	1	1	1	1	1	1
KV-XF29M67	1	1	1	1	1	1	1	1

No. OPB1 OP2

Item	TOP	NICAM	HDEV	Thai Bil	–	DVD Input	AV Input	
KV-XF29M97	0	1	1	0	0	0	1	1
KV-XF29M67	0	1	1	0	0	0	1	1


No. OPB2 OP3

Item	–	–	Auto PIC	Auto TV sys	US ST	AV Mono	11 KEY	Color SW
KV-XF29M97	0	0	1	1	0	0	0	1
KV-XF29M67	0	0	1	1	0	0	0	1

4-3. PICTURE QUALITY ADJUSTMENTS


SUB COLOR ADJUSTMENT

1. Input a PAL color-bar.
2. Set to the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
3. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
4. Set to Service Mode and select SAJ 3 'SCL' with **[1]** and **[4]** of the commander then adjust to VB2=VB3=VB4 with **[3]** and **[6]**.
5. Press **[MUTING]** → **[0]** of the commander to write the data.
6. Adjust SAJ 3 'SCL' as step 2 to 5 when receiving NTSC color-bar.

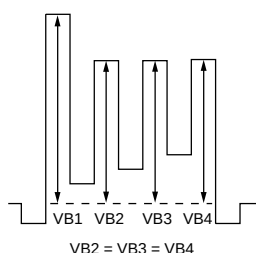

SUB HUE ADJUSTMENT


1. Select Video 1.
2. Input a NTSC color-bar, video into Video 1.
3. Set the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Select SAJ 1 'SHU' with **[1]** and **[4]** of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with **[3]** and **[6]**.

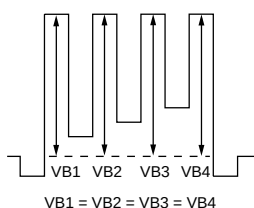

6. Press **[MUTING]** → **[0]** of the commander to write the data.

BELL FILTER ADJUSTMENT

1. Input SECAM color-bar signal.
2. Connect the dual-trace oscilloscope to CN303 pin ⑨ (not mounted).
3. Adjust SERVICE MODE, ITEMS 'SBF' as shown below.

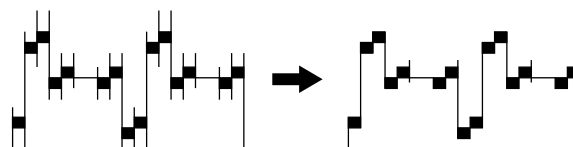

4-4. DISPLAY POSITION ADJUSTMENT

PIP POSITION

1. Input a PAL color-bar.
2. Press PIP button of the remote commander to set the PIP picture.
3. Set to Service Mode.
4. Use **[1]** and **[4]** of the remote commander to select PIP 1 "PIP" and use **[3]** and **[6]** to set data "14".
5. Select PIP 2 "PPV" to set data "27".
6. Press **[MUTING]** → **[0]** of the remote commander to write the data.
7. Use the screen display menu changing the PIP position to check the PIP position.

4-5. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

When replacing IC003 (MEMORY), be sure to change IC001 (μ-COM) to the following new IC at the same time.

IC001(μ-COM):


CXP86461-621S

1. Enter to Service Mode.
2. Press commander buttons **[5]** and **[0]** (Data Initialize), and **[2]** and **[0]** (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
In cases where items are not well adjusted, rectify the items with fine adjustment.
Write the data per each item number (**[MUTING]** + **[0]**).
4. Select item numbers "OPB0" (OP1), "OPB1" (OP2) and "OPB2" (OP3) and respectively set the bit per model with command buttons **[3]** and **[6]**.
5. Press commander buttons **[8]** and **[0]** (Test Normal) to return to the data that was set on the shipment from the factory.
(This will also cancel Service Mode.)


4-6. PICTURE DISTORTION ADJUSTMENT (1)

Item Number 00 – 0B


GEO 0 HPS (H POSITION)




GEO 1 HSZ (H SIZE)




GEO 2 PAP (PIN AMP)




GEO 3 TLT (TRAPEZIUM)




GEO 4 VPS (V POSITION)




GEO 5 VSZ (V SIZE)




GEO 6 SCO (VERTICAL S-Correction)




GEO 7 VLN (V LINEARITY)



GEO 8 BOW (AFC.BOW)




GEO 9 AGL (AFC.ANGLE)




GEO 0A UCP (UPPER CORNER PIN)

GEO 0B LCP (LOWER CORNER PIN)




PICTURE DISTORTION ADJUSTMENT (2)

H-TRAPEZOID (Rotate RV1801)






5.2. FRAME SCHEMATIC DIAGRAM

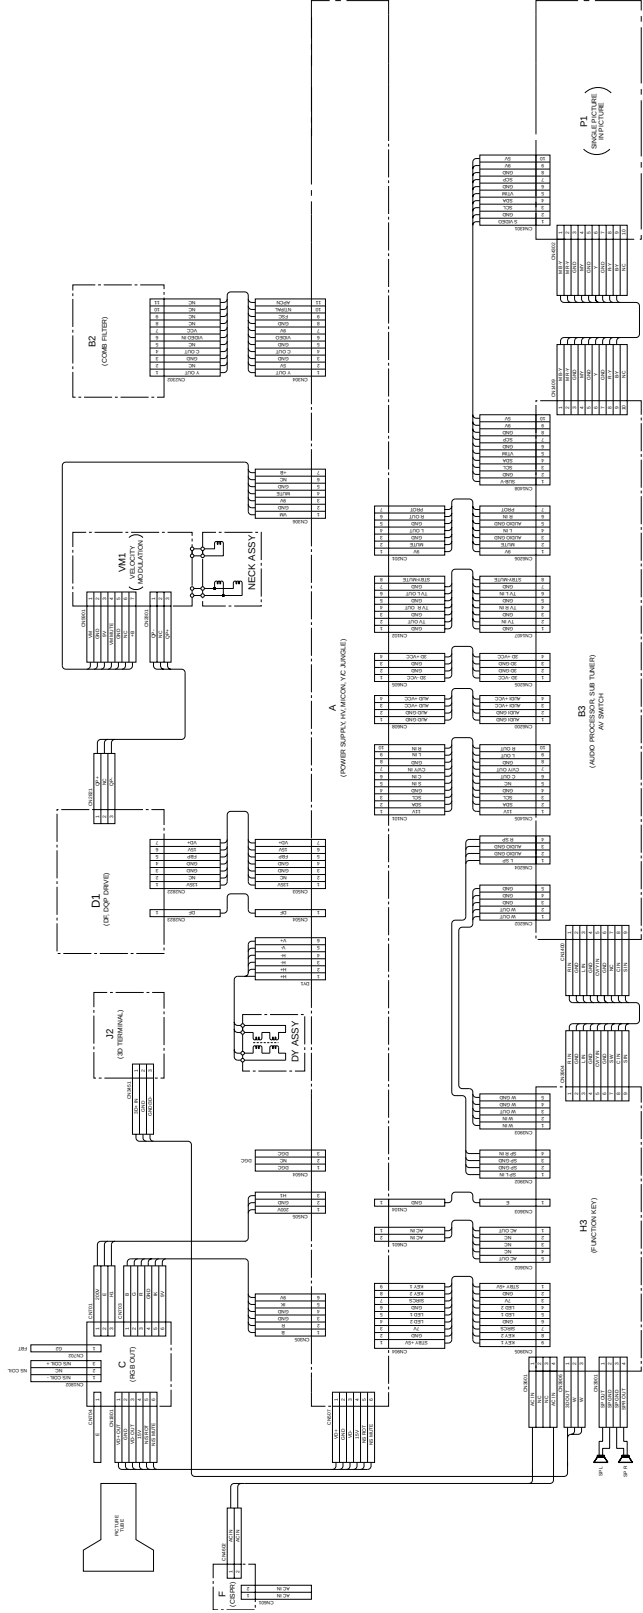

5-3. CIRCUIT BOARDS LOCATION

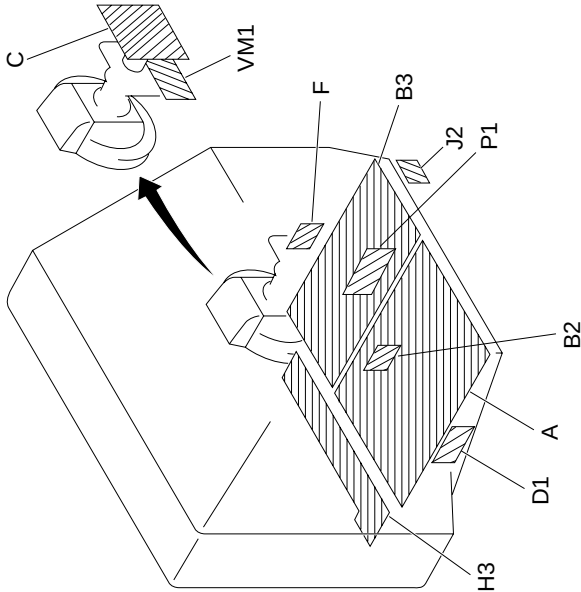


5-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS


- Note:**
- All capacitors are in μF unless otherwise noted.
 - All electrolytic capacitors are rated at 50V unless otherwise noted.
 - All resistors are in ohms.
 - $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
 - Indication of resistance which does not have rating electrical power is as follows.
- | |
|--|
| Pitch: 5 mm |
| Rating electrical power 1/4W (CHIP- 1/10W) |
- $\frac{1}{100}$: nonflammable resistor.
 - Δ : internal component.
 - $\square$: panel designation or adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B unless otherwise noted.
 - Readings are taken with a color-bar signal input.
- no mark : PAL
() : SECAM
[] : NTSC 3.58
« » : NTSC 4.43
- Readings are taken with a 10 Ω MW digital multimeter.
 - Voltage are dc with respect to ground unless otherwise noted.
 - Voltage variations may be noted due to normal production tolerances.
 - All voltages are in V.
 - * : Cannot be measured.
 - Circled numbers are waveform references.
 - $\bullet$: B + bus.
 - $\blacksquare$: B - bus.
 - $\Rightarrow$: signal path.
- Reference information**
- | | | |
|-----------|---------|--------------------------|
| RESISTOR | : RN | METAL FILM |
| | : RC | SOLID |
| | : FPRD | NONFLAMMABLE CARBON |
| | : FUSE | NONFLAMMABLE FUSIBLE |
| | : RS | NONFLAMMABLE METAL OXIDE |
| | : RB | NONFLAMMABLE CEMENT |
| | : RW | NONFLAMMABLE WIREWOUND |
| | : X | ADJUSTMENT RESISTOR |
| COIL | : LF-8L | MICRO INDUCTOR |
| CAPACITOR | : TA | TANTALUM |
| | : PS | STYROL |
| | : PP | POLYPROPYLENE |
| | : PT | MYLAR |
| | : MPS | METALIZED POLYESTER |
| | : MPP | METALIZED POLYPROPYLENE |
| | : ALB | BIPOLAR |
| | : ALT | HIGH TEMPERATURE |
| | : ALR | HIGH RIPPLE |

Note: The component identified by shading and mark Δ are critical for safety. Replace only with part number specified.


A Board IC001 CXP86461-621S

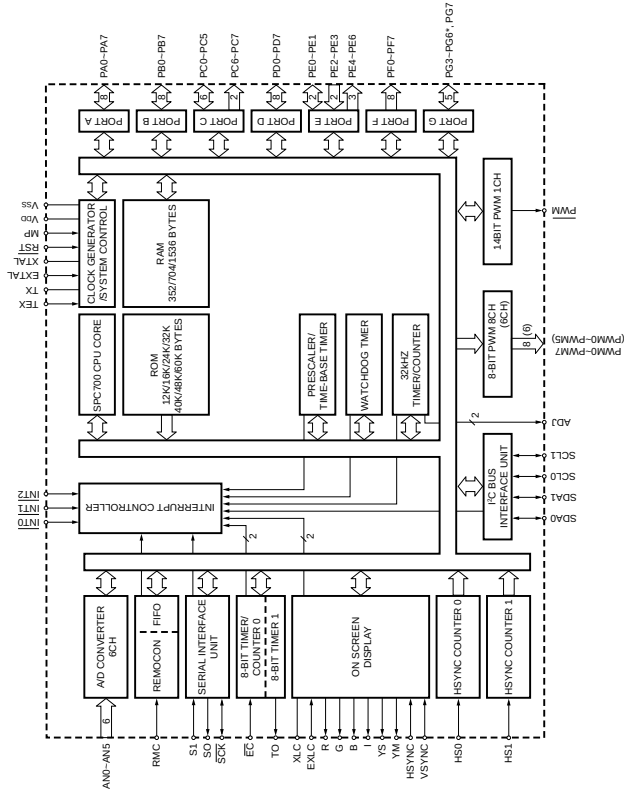

A BOARD WAVEFORMS

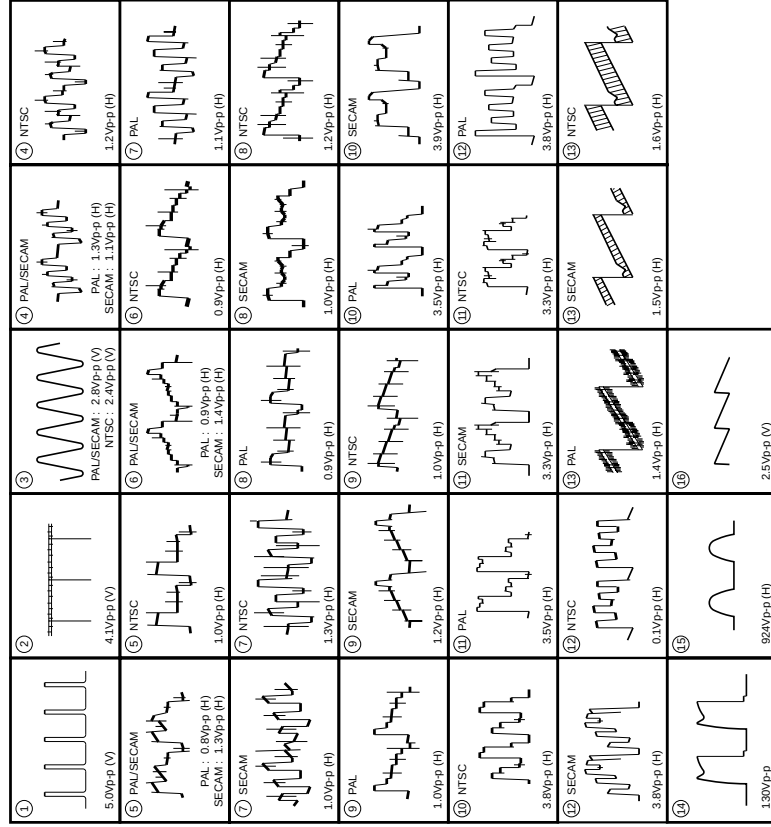

(1) Schematic Diagram of A129 Board

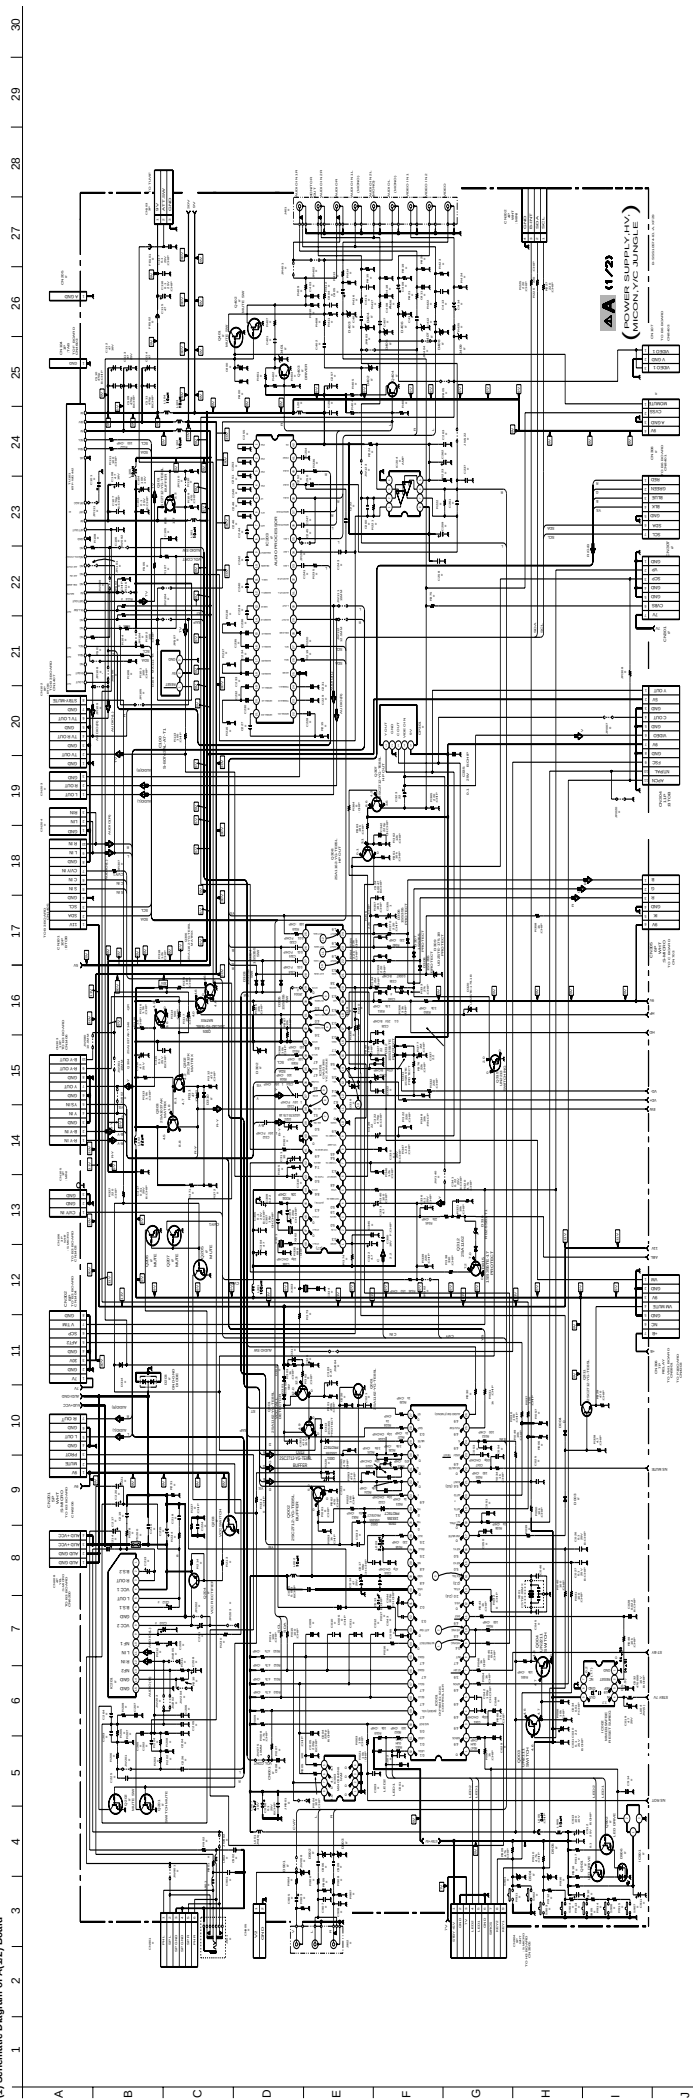

- 59 -


- 60 -

- 61 -


- 62 -



(3) Schematic Diagrams of F and J2 Boards

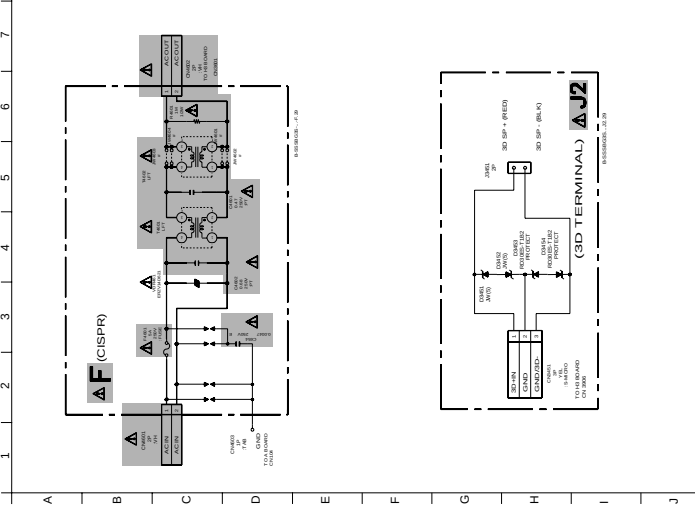


PRINTED WIRING BOARDS

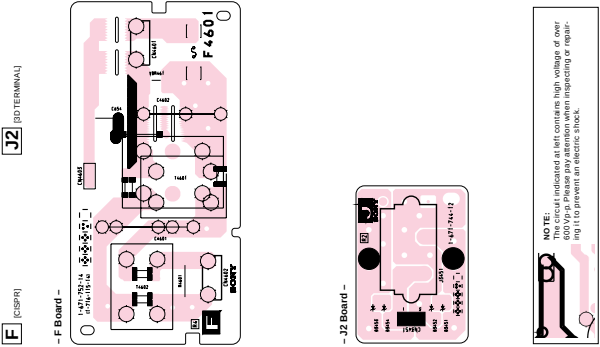

PRINTED WIRING BOARDS


[A] [POWER SUPPLY (W/ MCON VC JANGLE)]

- A Board -

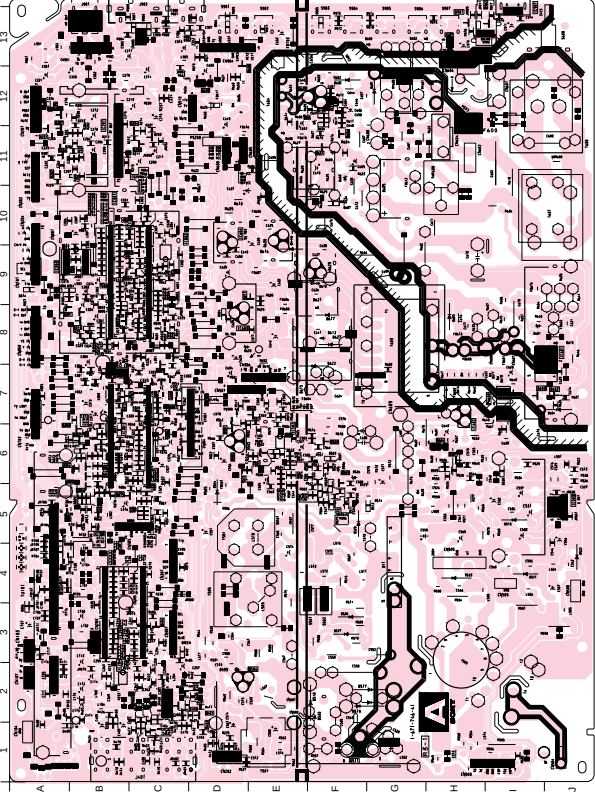

A BOARD

IC	Q001	C-8	Q004	C-8	Q015	B-1	Q028	E-12
	Q002	B-8	Q005	B-8	Q016	B-1	Q029	E-12
	Q003	C-8	Q006	B-8	Q017	B-1	Q030	E-12
	Q004	C-8	Q007	B-8	Q018	B-1	Q031	E-12
	Q005	C-8	Q008	B-8	Q019	B-1	Q032	E-12
	Q006	B-8	Q009	B-8	Q020	B-1	Q033	E-12
	Q007	B-8	Q010	B-8	Q021	B-1	Q034	E-12
	Q008	B-8	Q011	B-8	Q022	B-1	Q035	E-12
	Q009	B-8	Q012	B-8	Q023	B-1	Q036	E-12
	Q010	B-8	Q013	B-8	Q024	B-1	Q037	E-12
TRANSISTOR	Q011	C-8	Q014	B-8	Q025	B-1	Q038	E-12
	Q012	C-8	Q015	B-8	Q026	B-1	Q039	E-12
	Q013	C-8	Q016	B-8	Q027	B-1	Q040	E-12
	Q014	C-8	Q017	B-8	Q028	B-1	Q041	E-12
	Q015	C-8	Q018	B-8	Q029	B-1	Q042	E-12
	Q016	C-8	Q019	B-8	Q030	B-1	Q043	E-12
	Q017	C-8	Q020	B-8	Q031	B-1	Q044	E-12
	Q018	C-8	Q021	B-8	Q032	B-1	Q045	E-12
	Q019	C-8	Q022	B-8	Q033	B-1	Q046	E-12
	Q020	C-8	Q023	B-8	Q034	B-1	Q047	E-12
DIODE	Q021	C-8	Q024	B-8	Q035	B-1	Q048	E-12
	Q022	C-8	Q025	B-8	Q036	B-1	Q049	E-12
	Q023	C-8	Q026	B-8	Q037	B-1	Q050	E-12
	Q024	C-8	Q027	B-8	Q038	B-1	Q051	E-12
	Q025	C-8	Q028	B-8	Q039	B-1	Q052	E-12
	Q026	C-8	Q029	B-8	Q040	B-1	Q053	E-12
	Q027	C-8	Q030	B-8	Q041	B-1	Q054	E-12
	Q028	C-8	Q031	B-8	Q042	B-1	Q055	E-12
	Q029	C-8	Q032	B-8	Q043	B-1	Q056	E-12
	Q030	C-8	Q033	B-8	Q044	B-1	Q057	E-12



B3 [AUDIO PROCESSOR, SUB TUNER AV SWITCH]


- B3 Board



KV-XF29M97/ XF29M67
RM-953

KV-XF29M97/ XF29M67
RM-953


C BOARD IC701 STV5112

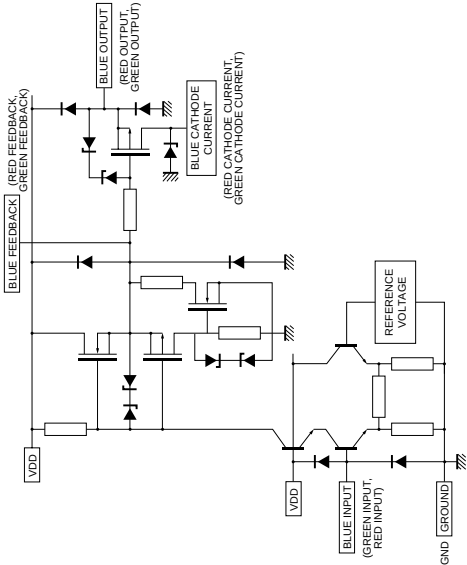


PRINTED WIRING BOARDS

C [RGB OUT]


- C Board -

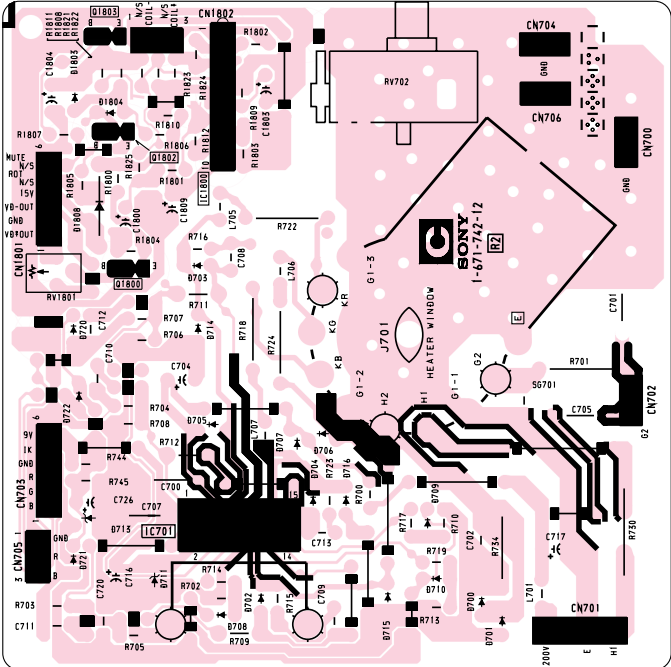

C BOARD WAVEFORMS

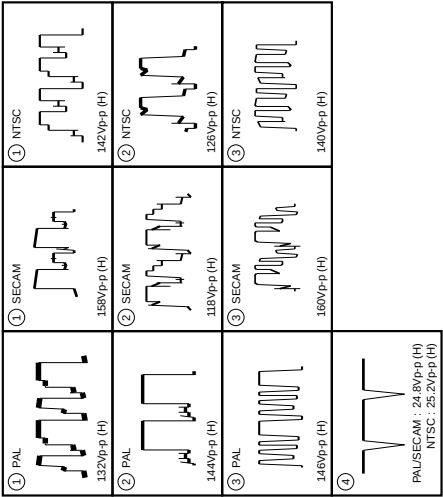


(5) Schematic Diagram of C Board

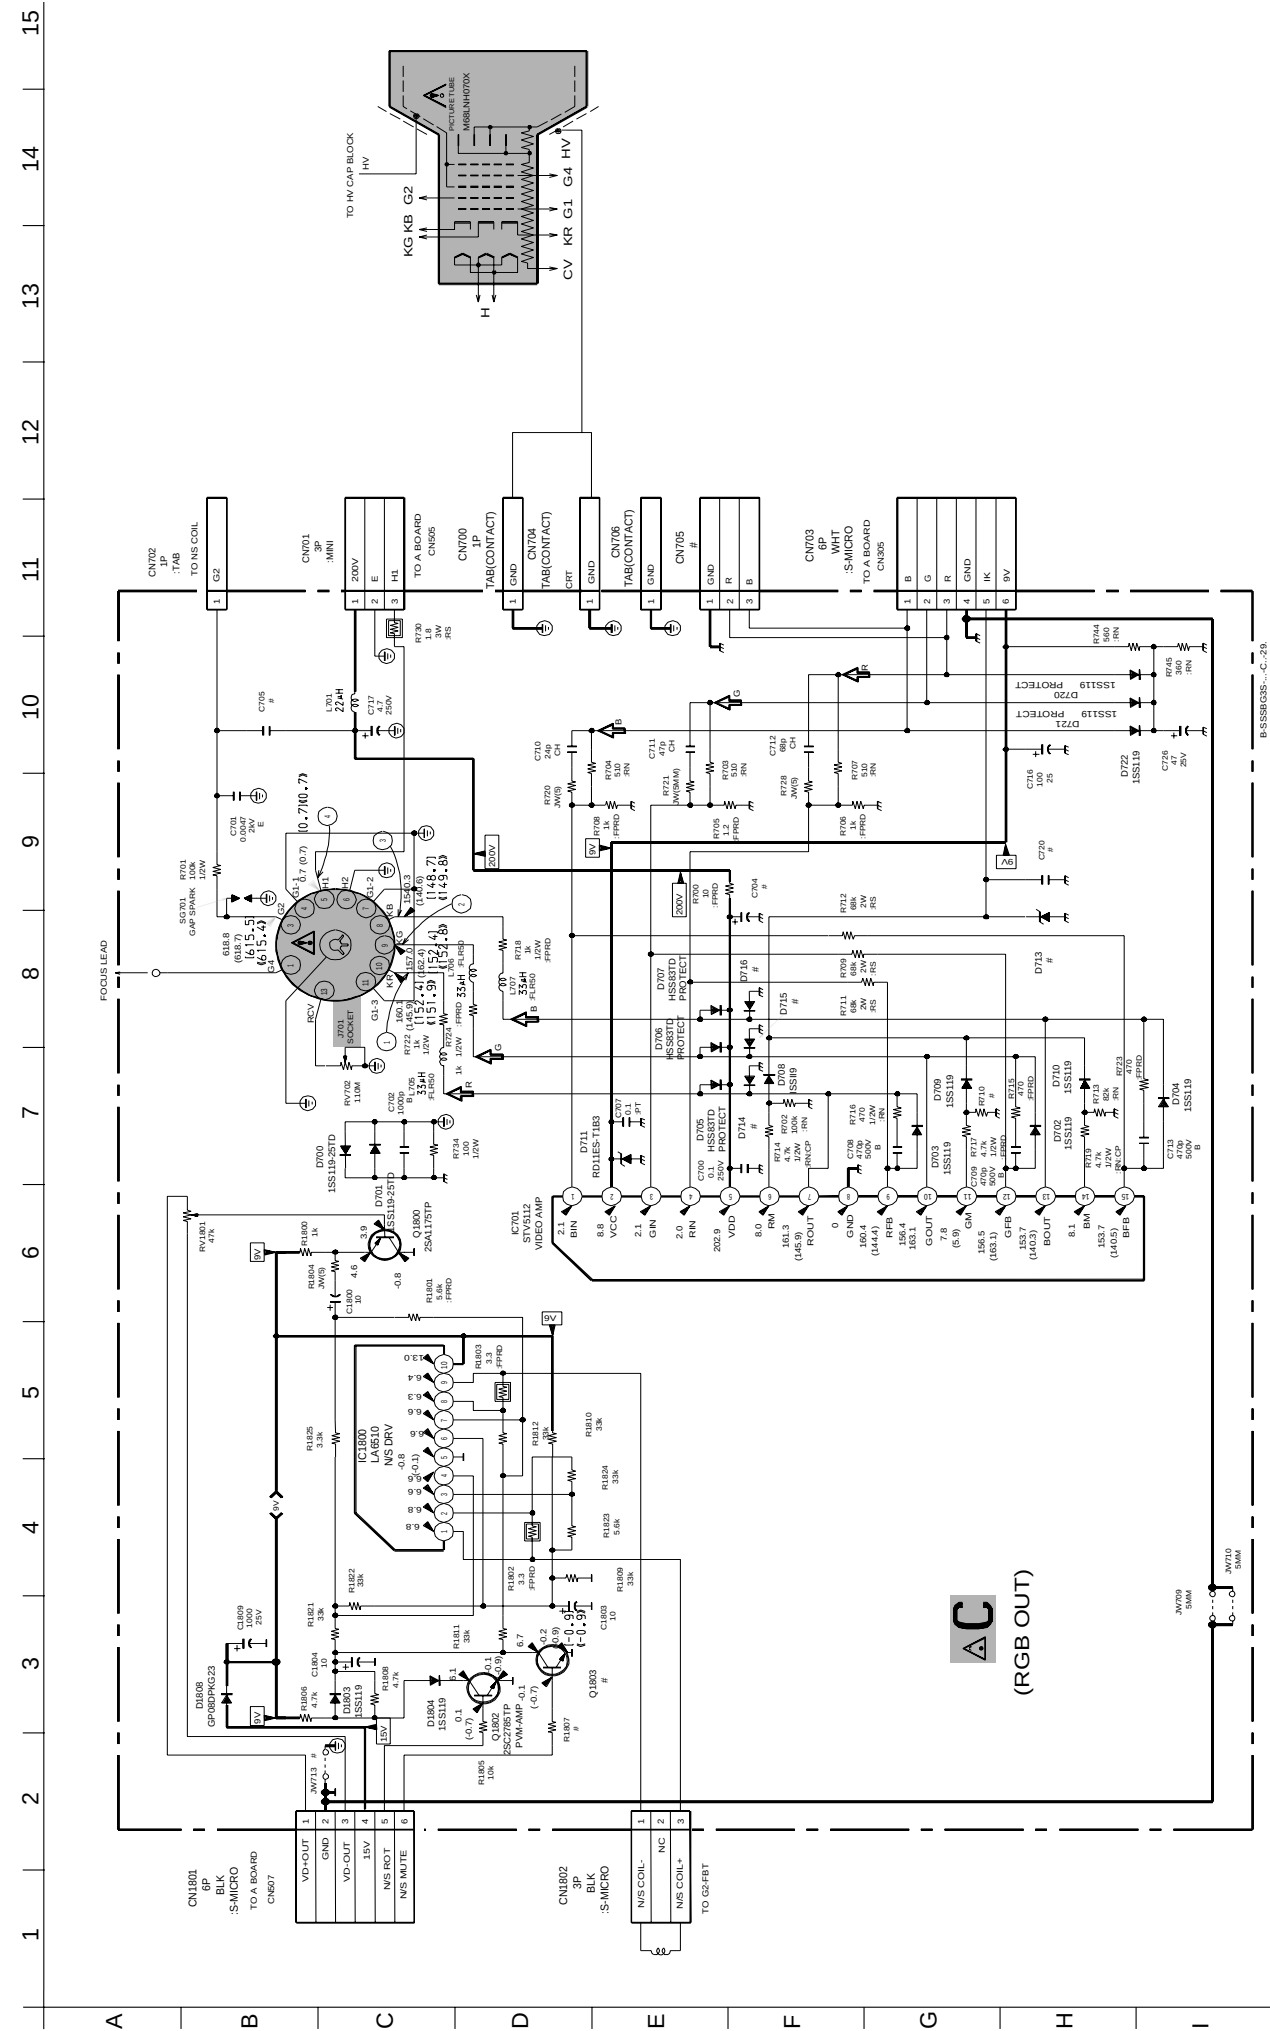


(6) Schematic Diagram of P1 Board

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

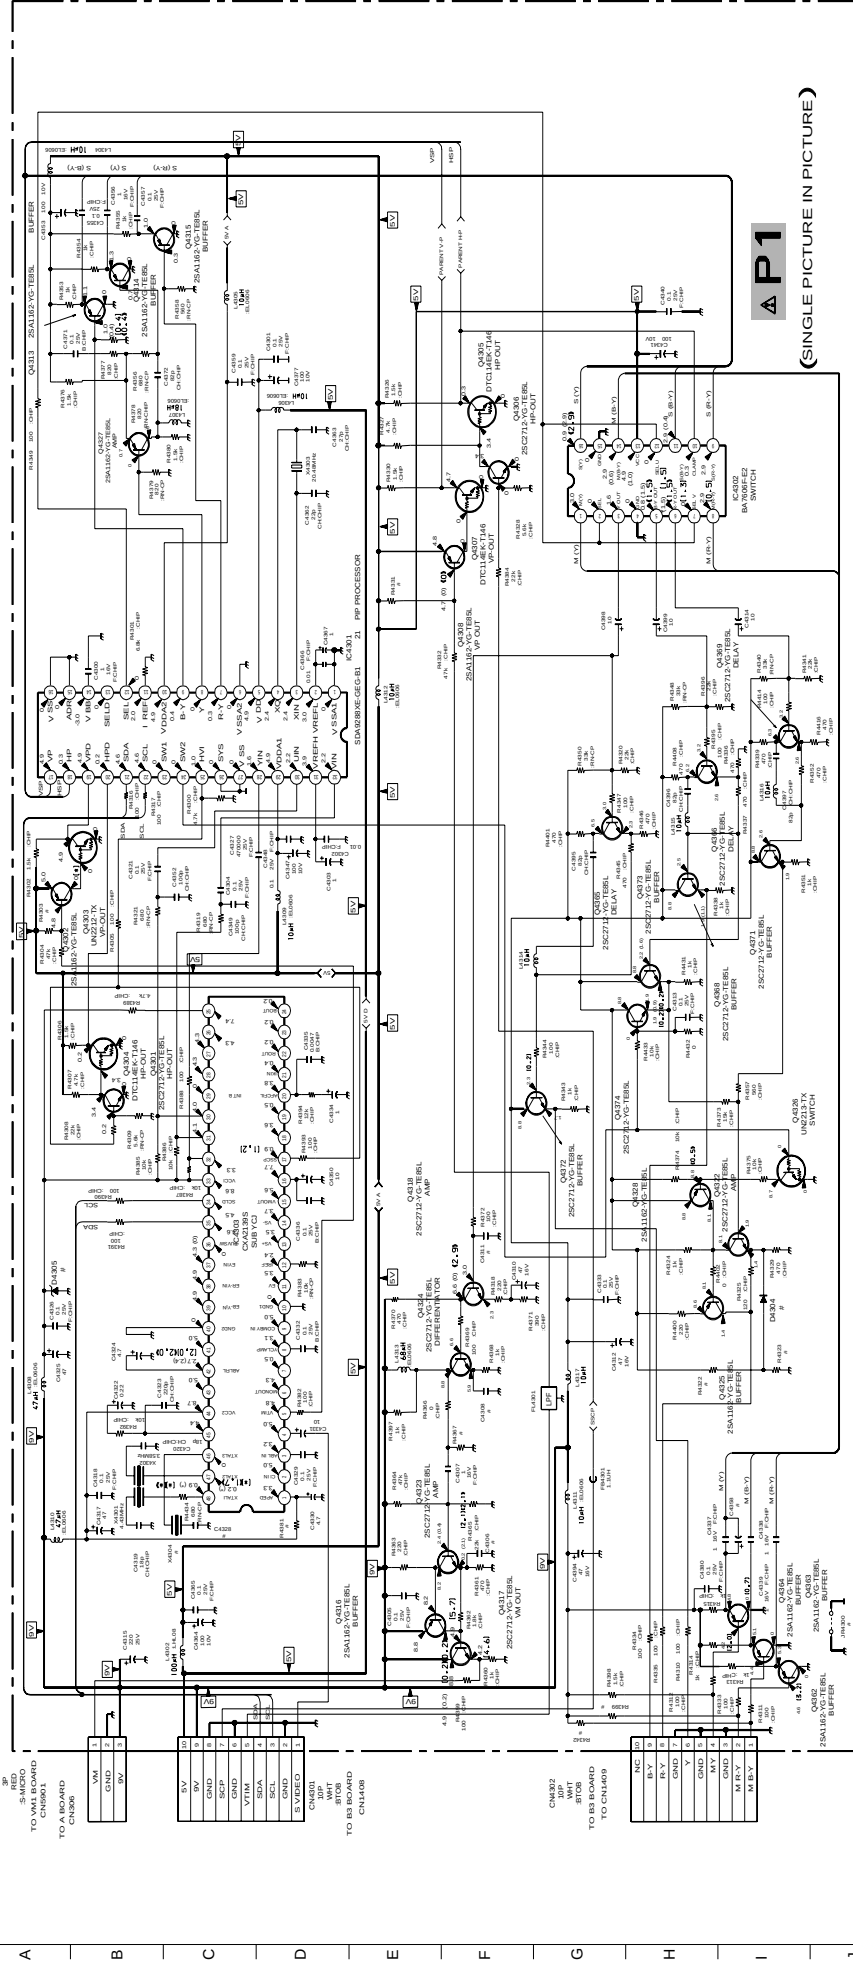

(7) Schematic Diagrams of B2 and H3 Boards

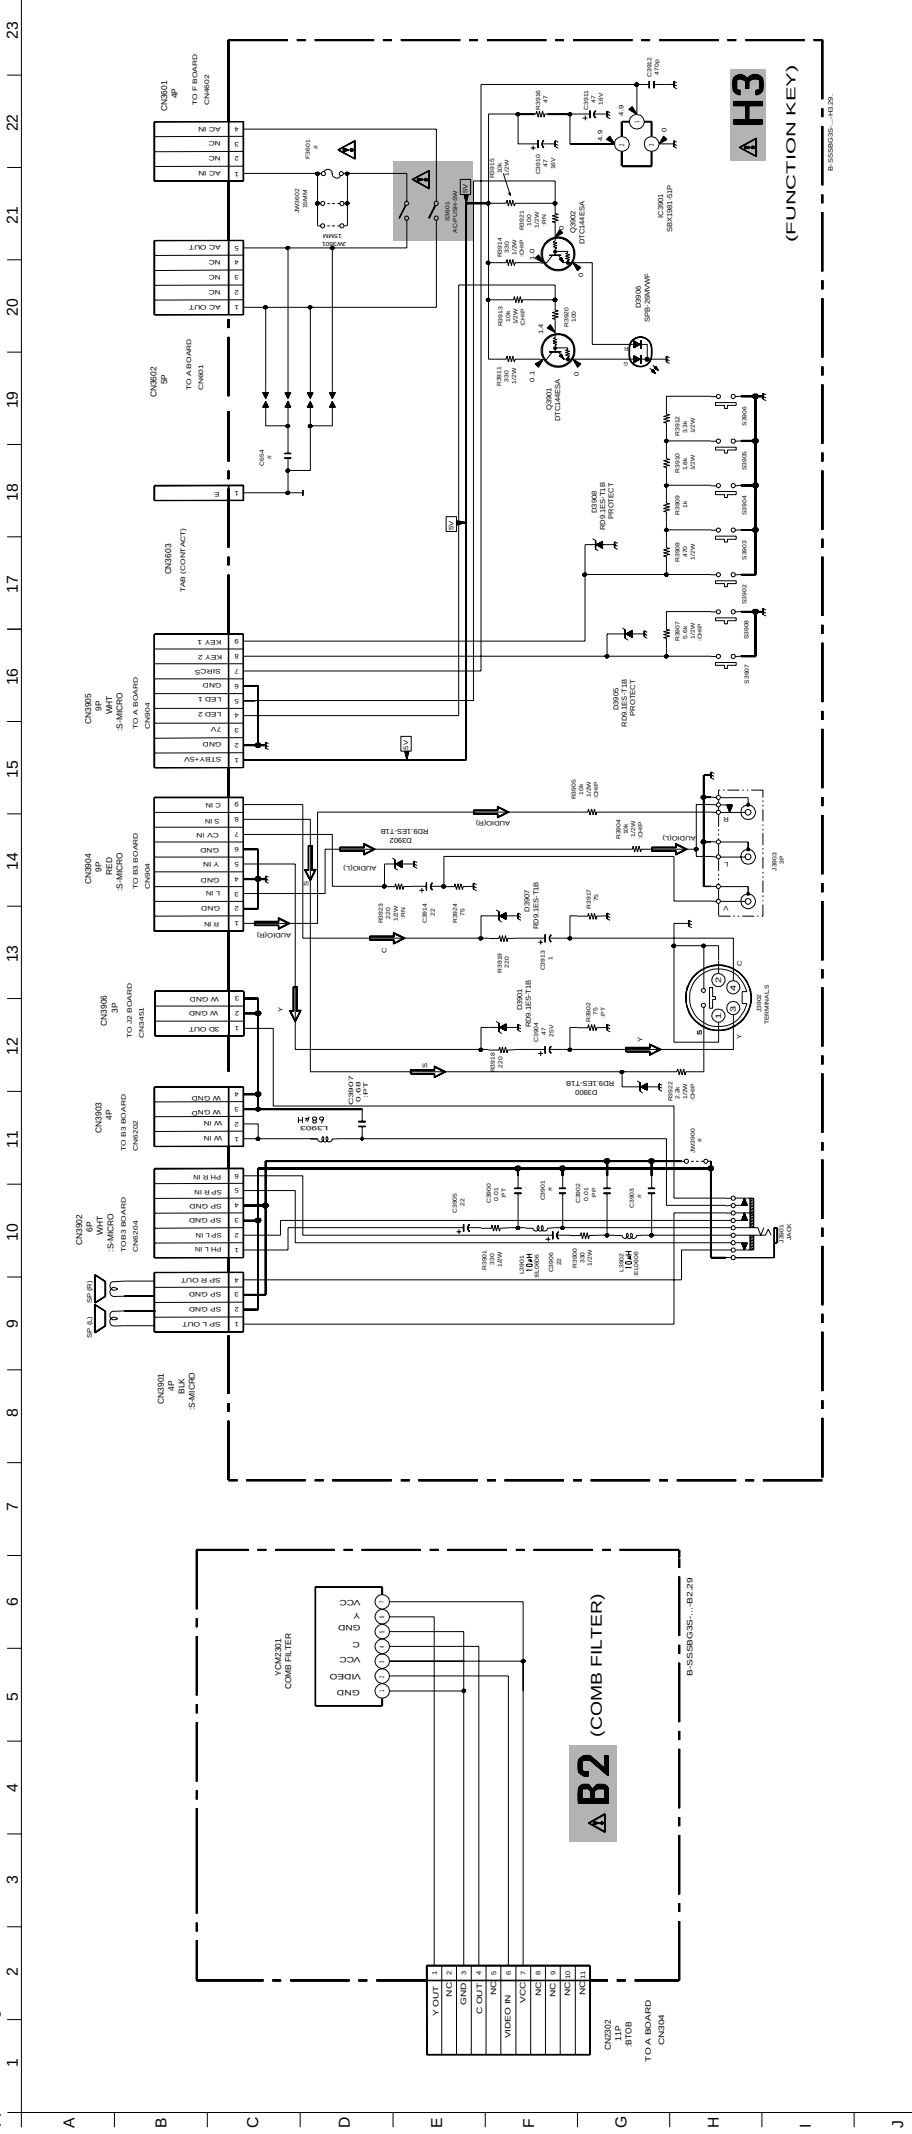

KV-XF29M97XF29M67
RM-953

KV-XF29M97XF29M67
RM-953

PRINTED WIRING BOARDS


B2

[COMB FILTER]


H3

[FUNCTION KEY]


– B2 Board –

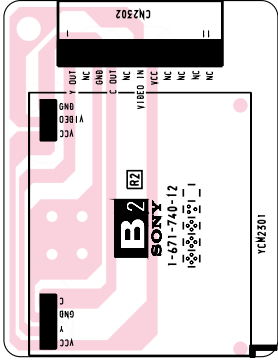


– H3 Board –

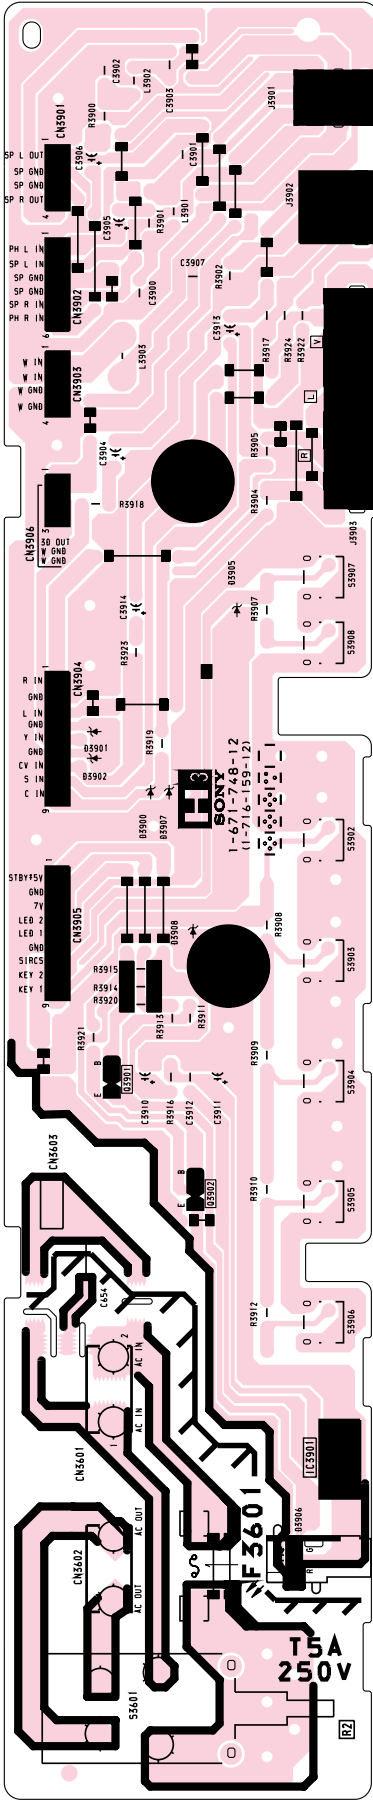


(8) Schematic Diagram of VM1 Board

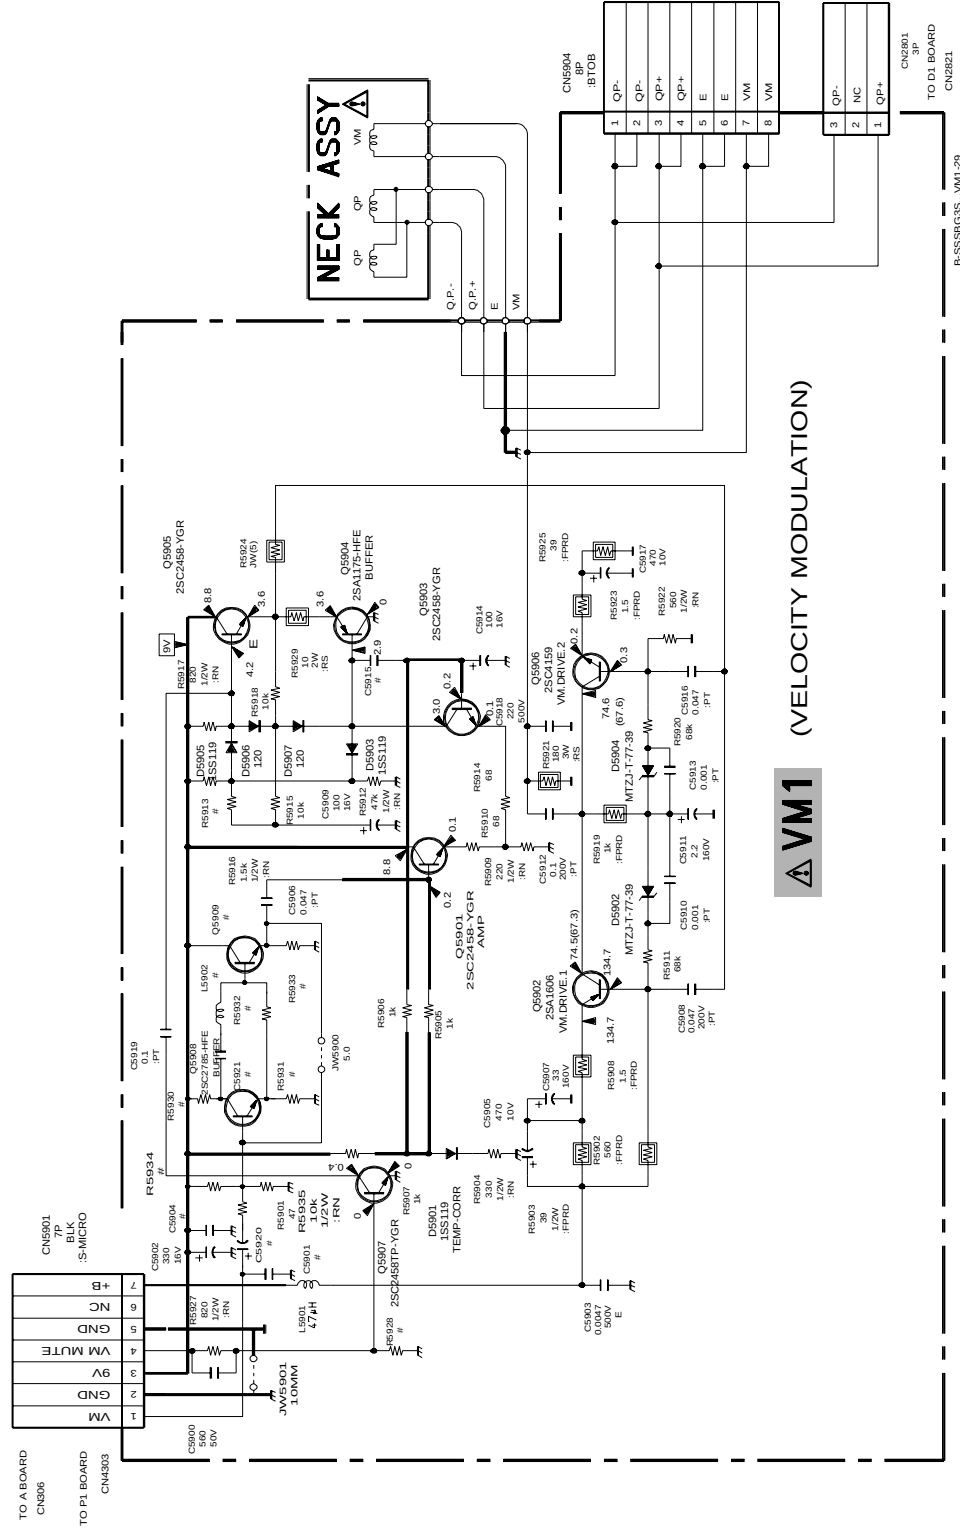
























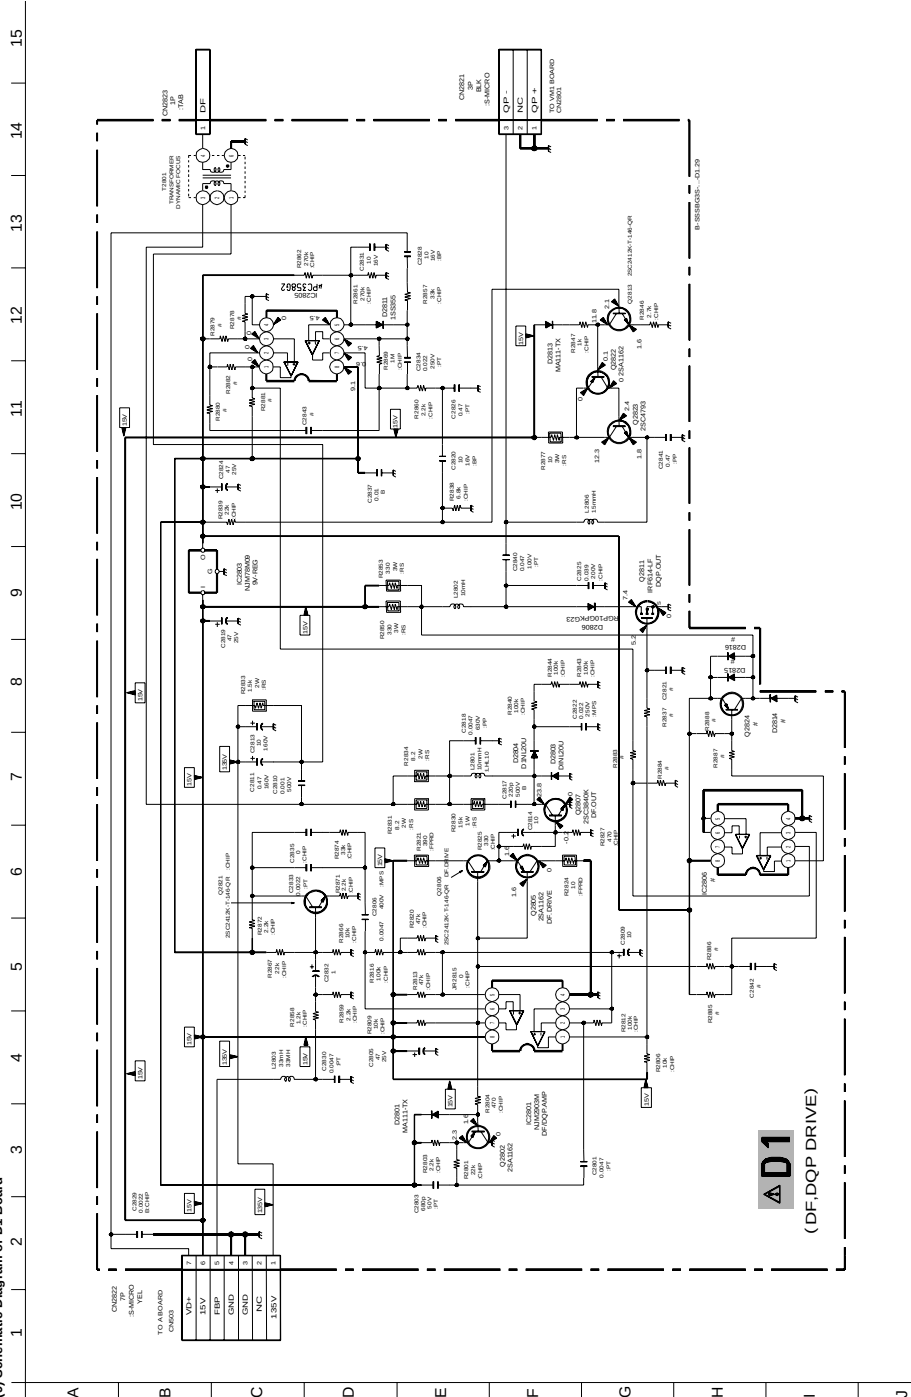
[illegible]

VM1
[VELOCITY MODULATION]

- VM1 Board -

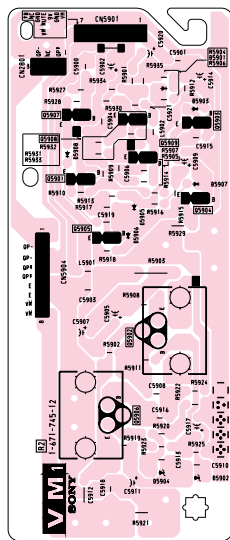[illegible]

DIODE

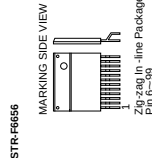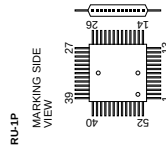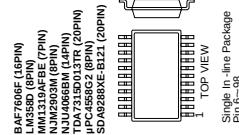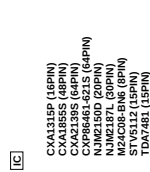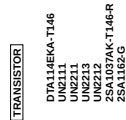

SECTION 6

EXPLODED VIEWS


NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark $\triangle$ are critical for safety. Replace only with part number specified.

6-1. SPEAKER BRACKET


- : 7-685-663-71 SCREW +BVTP 4 × 16
●: 7-685-648-79 SCREW +BVTP 3 × 12

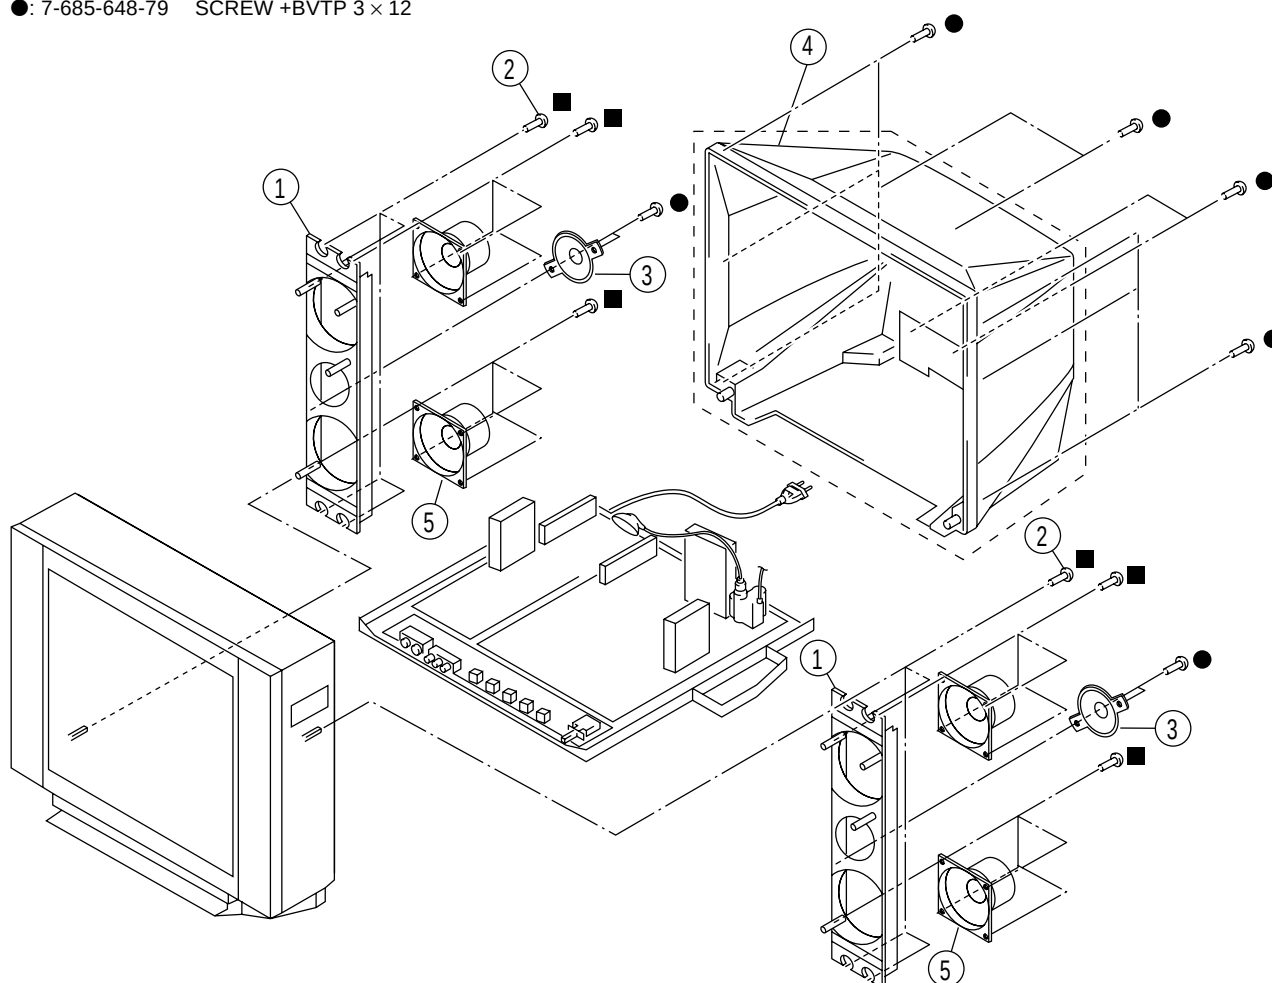

REF. NO.	PART NO.	DESCRIPTION	REMARK
1	4-065-512-02	BRACKET, SPEAKER	
2	4-302-404-03	SCREW (WASHER HEAD) (+P 4X16)	
3	1-529-190-11	SPEAKER (5CM)	
4	$\triangle$ 4-065-506-04	COVER, REAR	
5	1-529-179-11	SPEAKER (8CM)	

6-2. CHASSIS


- : 7-685-648-71 SCREW BVTP 3 × 12
■: 7-685-663-71 SCREW BVTP 4 × 16

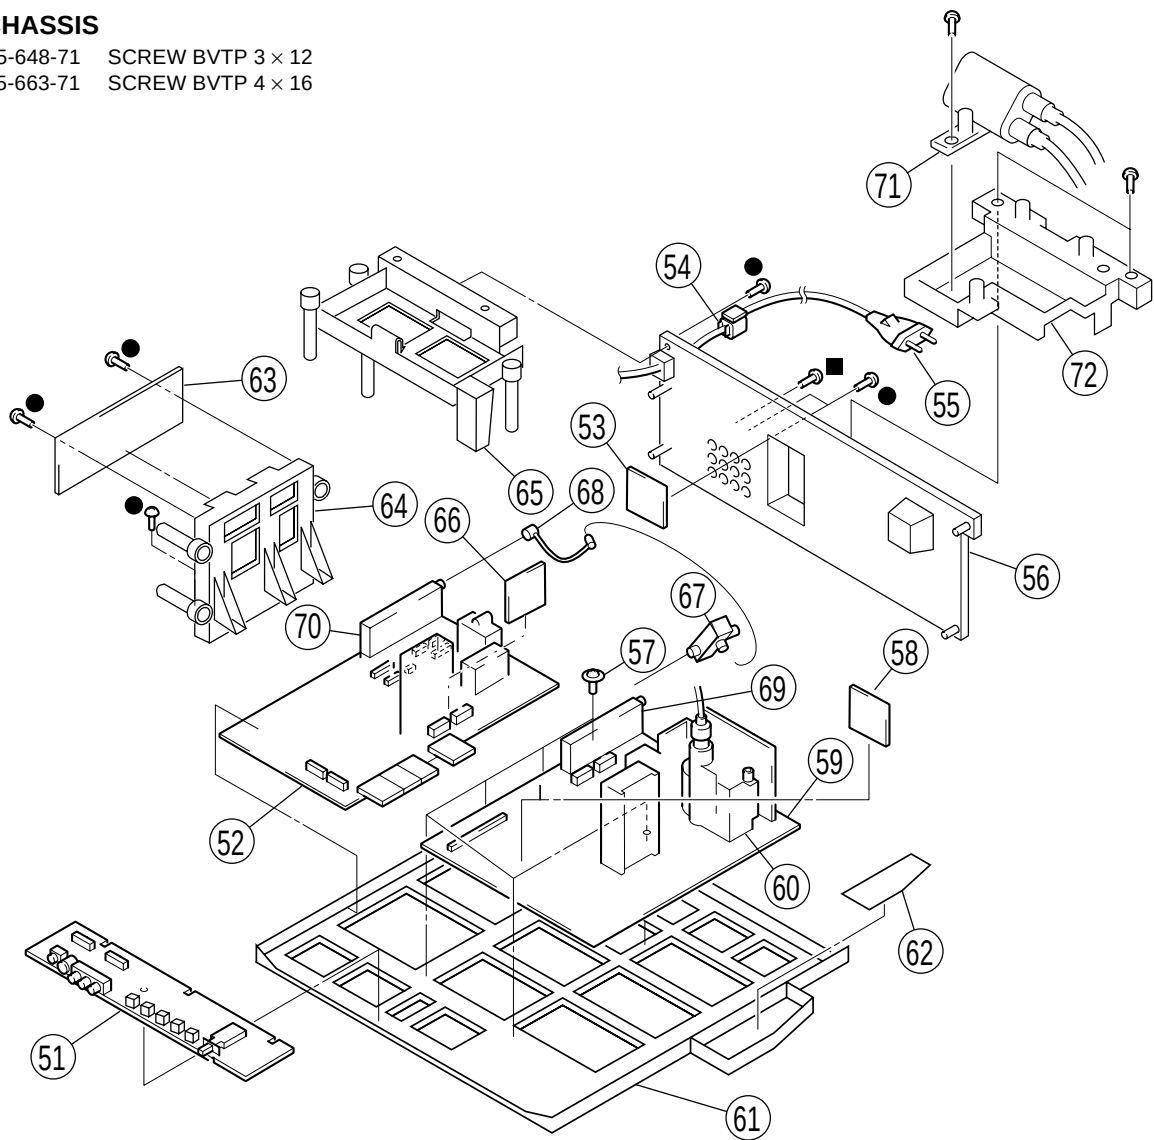

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	* A-1372-772-A	H3 BOARD, MOUNTED		64	* 4-066-682-01	BRACKET, F PWB	
52	* A-1135-105-A	B3 BOARD, COMPLETE		65	* 4-070-963-01	HOLDER, PWB	
53	* A-1388-243-A	J2 BOARD, MOUNTED		66	* A-1190-365-A	P1 BOARD, MOUNTED	
54	4-022-115-21	HOLDER, AC CORD		67	1-251-658-21	SPLITTER RF	
55	△ 1-574-062-61	CORD, POWER (WITH CONNECTOR) 2.5A/250V		68	* 1-534-630-51	P-P CABLE	
56	4-066-684-51	BRACKET, TERMINAL		69	8-598-452-20	TUNER, FSS BTF-WG442	
57	4-046-797-01	SCREW (3X12), (+)BVTAP		70	8-598-508-10	TUNER, FSS BTF-LG436	
58	* A-1131-417-A	B2 BOARD, MOUNTED		71	△ 1-467-525-21	CAP BLOCK, HIGH-VOLTAGE	
59	* A-1298-237-A	A BOARD, COMPLETE		72	4-066-680-02	BRACKET, HVC	
60	△ 1-453-305-11	TRANSFORMER ASSY, FLYBACK (NX-4009/C6P4)					
61	* 4-066-681-04	BRACKET, MAIN					
62	* A-1343-640-A	D1 BOARD, MOUNTED					
63	* A-1241-361-A	F BOARD, MOUNTED					

6-3. PICTURE TUBE

●: 7-685-648-79 SCREW BVTP 3 × 12

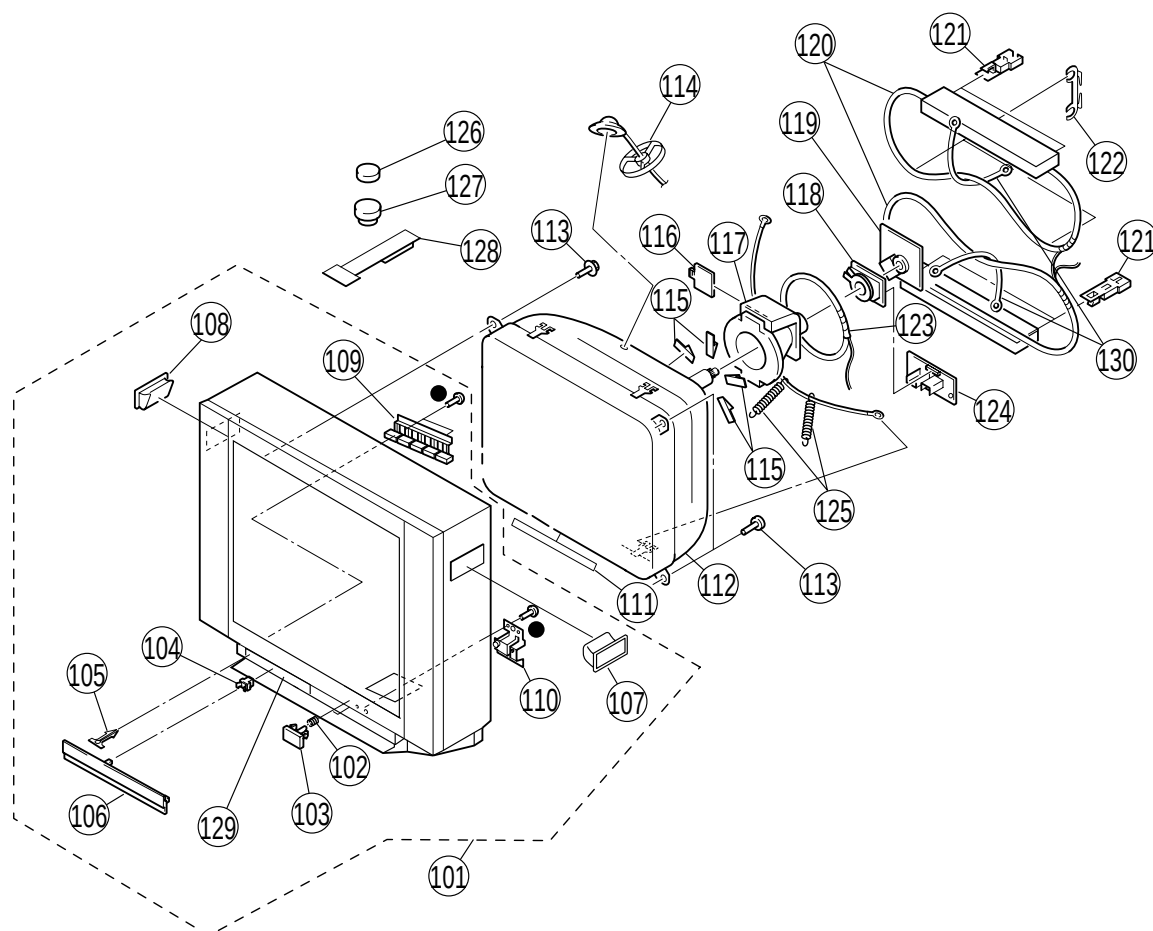


REF. NO.	PART NO.	DESCRIPTION	REMARK
101	X-4037-761-1	BEZNET ASSY	102-110,129
102	4-036-405-11	SPRING, COMPRESSION	
103	4-065-508-01	BUTTON, POWER	
104	4-047-464-01	CATCHER, PUSH	
105	4-067-062-01	DAMPER	
106	4-068-602-52	DOOR, CONTROL	
107	X-4035-862-4	HANDLE ASSY (R)	
108	X-4035-861-4	HANDLE ASSY (L)	
109	4-065-509-01	BUTTON, CONTROL	
110	* 4-065-510-01	GUIDE, LIGHT	
111	4-054-468-01	SHEET, BLOTING	
112	△ 8-735-056-05	PICTURE TUBE (M68LNH070X) (KV-XF29M67)	
	△ 8-735-057-05	PICTURE TUBE (M68LNH070X) (KV-XF29M97)	
113	4-046-765-01	SCREW, TAPPING 7+CROWN WASHER	
114	* 3-704-372-41	HOLDER, HV CABLE	
115	4-046-600-11	SPACER, DY	

REF. NO.	PART NO.	DESCRIPTION	REMARK
116	2-163-920-01	PLATE, TLH CORRECTION	
117	8-451-494-31	DEFLECTION YOKE (Y29RSA-S)	
118	8-453-011-11	NA299-M	
119	* A-1331-906-A	C BOARD, COMPLETE	
120	△ 1-416-495-11	COIL, DEMAGNETIC	
121	* 4-062-970-01	CLIP (29RSN), DGC	
122	4-061-369-01	HOLDER, DEGAUSE COIL	
123	1-452-896-11	COIL, NA ROTATION (RT200)	
124	* A-1342-556-A	VM1 BOARD, COMPLETE	
125	4-369-318-61	SPRING, TENSION	
126	1-452-032-00	MAGNET, DISC	
127	1-452-094-00	CIRCULAR DISC MAGNET B	
128	4-051-734-41	PIECE B(120), CONV. CORRECT	
129	4-032-761-01	SHAFT(S), DOOR	
130	4-068-028-02	BAND, DGC	

6-4. 3D SPEAKER

- ▲: 7-685-661-71 SCREW BVTP 4 × 12
■: 7-685-663-71 SCREW BVTP 4 × 16

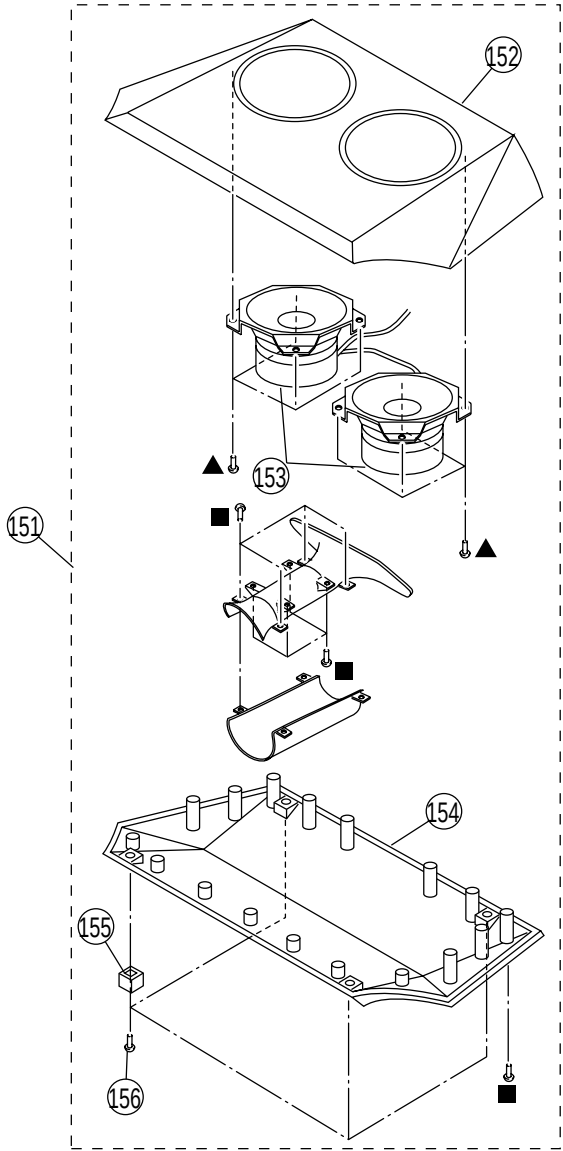

REF. NO.	PART NO.	DESCRIPTION	REMARK
151	A-1501-451-A	BOX ASSY, SPEAKER (3D)	
152	* 4-065-515-01	BOX (TP), 3D SPEAKER	
153	1-529-172-11	SPEAKER, LOUD (10CM)	
154	* 4-065-516-01	BOX (BT), 3D SPEAKER	
155	* 4-037-244-01	FOOT	
156	4-302-428-03	SCREW (WASHER HEAD) (+P 3X12)	

SECTION 7

ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark $\triangle$ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

• All resistors are in ohms
• F : nonflammable

CAPACITORS

• MF : μ F, PF : μ F

COILS

• MMH : mH, UH : μ H

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
	* A-1299-237-A	A BOARD COMPLETE *****		C303	1-125-798-91	ELECT	0.47UF 20.00%63V
	1-466-162-42	BLOCK, COM FILTER (CFB-4)		C304	1-126-967-11	ELECT	47UF 20.00%50V
	* 4-040-983-41	TERMINAL BOARD (D)		C305	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
	4-382-854-11	SCREW (M3X10), P, SW (+)		C306	1-163-233-51	CERAMIC CHIP	18PF 5.00% 50V
	4-382-854-21	SCREW (M3X14), P, SW (+)		C307	1-163-233-51	CERAMIC CHIP	18PF 5.00% 50V
		<CAPACITOR>		C308	1-163-125-00	CERAMIC CHIP	220PF 5.00% 50V
C004	1-163-001-51	CERAMIC CHIP	220PF 10% 50V	C309	1-126-957-11	ELECT	0.22UF 20.00%50V
C005	1-163-001-51	CERAMIC CHIP	220PF 10% 50V	C311	1-126-963-11	ELECT	4.7UF 20.00%50V
C006	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C312	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C007	1-104-664-11	ELECT	47UF 20.00%16V	C313	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C013	1-164-232-11	CERAMIC CHIP	0.01UF 10.00%50V	C314	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C014	1-104-664-11	ELECT	47UF 20.00%25V	C315	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C015	1-163-009-11	CERAMIC CHIP	0.001UF 10.00%50V	C316	1-126-934-11	ELECT	220UF 20.00%16V
C016	1-163-243-11	CERAMIC CHIP	47PF 5.00% 50V	C317	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C017	1-163-113-00	CERAMIC CHIP	68PF 10% 50V	C318	1-163-031-11	CERAMIC CHIP	0.01UF 50V
C019	1-104-664-11	ELECT	47UF 20.00%25V	C319	1-163-031-11	CERAMIC CHIP	0.01UF 50V
C022	1-163-227-51	CERAMIC CHIP	10PF 0.50PF 50V	C320	1-163-031-11	CERAMIC CHIP	0.01UF 50V
C023	1-163-227-51	CERAMIC CHIP	10PF 0.50PF 50V	C322	1-163-005-51	CERAMIC CHIP	470PF 10% 50V
C024	1-163-227-51	CERAMIC CHIP	10PF 0.50PF 50V	C323	1-126-965-11	ELECT	22UF 20.00%50V
C026	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C324	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%50V
C027	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C325	1-125-799-91	ELECT	1UF 20.00%63V
C028	1-163-037-11	CERAMIC CHIP	0.022UF 10.00%50V	C327	1-126-965-11	ELECT	22UF 20.00%50V
C030	1-126-965-11	ELECT	22UF 20.00%50V	C328	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C031	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C329	1-126-965-11	ELECT	22UF 20.00%50V
C032	1-107-823-51	CERAMIC CHIP	470000PF 10% 16V	C330	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C034	1-163-031-11	CERAMIC CHIP	0.01UF 50V	C331	1-125-805-91	ELECT	4.7UF 20.00%50V
C041	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C332	1-125-805-91	ELECT	4.7UF 20.00%50V
C042	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C335	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C044	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C336	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C047	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C337	1-125-800-91	ELECT	2.2UF 20.00%63V
C103	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C338	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%50V
C104	1-104-665-11	ELECT	100UF 20.00%10V	C341	1-115-340-51	CERAMIC CHIP	0.22UF 10.00%25V
C107	1-163-005-51	CERAMIC CHIP	470PF 10% 50V	C342	1-163-125-00	CERAMIC CHIP	220PF 5.00% 50V
C108	1-104-664-11	ELECT	47UF 20.00%16V	C502	1-163-145-00	CERAMIC CHIP	0.0015UF 5.00% 50V
C109	1-163-005-51	CERAMIC CHIP	470PF 10% 50V	C503	1-125-797-91	ELECT	10UF 20.00%50V
C110	1-163-005-51	CERAMIC CHIP	470PF 10% 50V	C506	1-107-638-11	ELECT	33UF 20.00%160V
C111	1-163-005-51	CERAMIC CHIP	470PF 10% 50V	C507	1-161-830-00	CERAMIC	0.0047UF 500V
C112	1-104-664-11	ELECT	47UF 20.00%16V	C510	1-102-112-00	CERAMIC	330PF 10.00%50V
C113	1-104-664-11	ELECT	47UF 20.00%25V	C513	1-163-263-51	CERAMIC CHIP	330PF 10% 50V
C114	1-126-967-11	ELECT	47UF 20.00%50V	C514	1-106-383-00	MYLAR	0.047UF 10.00%200V
C115	1-126-967-11	ELECT	47UF 20.00%50V	C517	1-164-182-11	CERAMIC CHIP	3300PF 10% 50V
C116	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C518	1-104-665-11	ELECT	100UF 20.00%10V
C117	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V	C519	1-102-212-00	CERAMIC	820PF 10.00%500V
C300	1-164-505-11	CERAMIC CHIP	2.2UF 16V	C521	1-126-934-11	ELECT	220UF 20.00%16V
C301	1-126-935-11	ELECT	470UF 20.00%16V	C522	1-126-933-11	ELECT	100UF 20.00%16V
C302	1-163-005-51	CERAMIC CHIP	470PF 10% 50V	C523	1-102-002-00	CERAMIC	680PF 10.00%500V
				C524	1-126-967-11	ELECT	47UF 20.00%50V
				C526	1-130-495-00	MYLAR	0.1UF 5.00% 50V

A

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
C527	1-102-820-00	CERAMIC	330PF 5.00% 50V
C528	1-162-116-00	CERAMIC	680PF 10.00%2KV
C530	1-137-372-11	MYLAR	0.022UF 5.00% 50V
C531	1-107-903-11	ELECT	2.2UF 20.00%50V
C532	1-126-941-11	ELECT	470UF 20.00%25V
C533	1-126-941-11	ELECT	470UF 20.00%25V
C536	1-136-165-00	MYLAR	0.1UF 5.00% 50V
C537	1-126-969-11	ELECT	220UF 20.00%50V
C538	1-136-617-11	FILM	0.019UF 3.00% 2KV
C539	1-129-723-00	FILM	0.056UF 5.00% 630V
C540	1-136-171-00	MYLAR	0.33UF 5.00% 50V
C546	1-165-319-11	CERAMIC CHIP	0.1UF 50V
C549	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%50V
C550	1-106-220-00	MYLAR	0.1UF 10.00%100V
C551	1-125-799-91	ELECT	1UF 20.00%63V
C552	1-162-116-00	CERAMIC	680PF 10.00%2KV
C553	1-162-116-00	CERAMIC	680PF 10.00%2KV
C554	1-137-417-11	MYLAR	0.0047UF 10.00%200V
C556	1-126-941-11	ELECT	470UF 20.00%25V
C557	1-126-941-11	ELECT	470UF 20.00%25V
C558	1-123-024-21	ELECT	33UF 160V
C560	1-102-228-00	CERAMIC	470PF 10.00%500V
C561	1-129-898-00	FILM	0.0022UF 5.00% 630V
C562	1-102-228-00	CERAMIC	470PF 10.00%500V
C564	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C565	1-107-655-11	ELECT	47UF 20.00%250V
C566	1-102-244-00	CERAMIC	220PF 10.00%500V
C567	1-115-520-11	FILM	0.68UF 5.00% 250V
C568	1-102-228-00	CERAMIC	470PF 10.00%500V
C570	1-115-522-11	FILM	1UF 5.00% 250V
C572	1-117-661-21	FILM	0.15UF 5.00% 250V
C573	1-106-387-00	MYLAR	0.068UF 10.00%200V
C574	1-104-709-11	ELECT	4.7UF 160V
C576	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C577	1-106-395-00	MYLAR	0.15UF 10.00%200V
C582	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C584	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C586	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C600 Δ	1-104-705-11	MYLAR	0.1UF 20.00%250V
C601	1-130-338-91	FILM	0.01UF 5.00% 630V
C602 Δ	1-104-705-11	MYLAR	0.1UF 20.00%250V
C603	1-104-664-11	ELECT	47UF 20.00%25V
C604	1-163-009-11	CERAMIC CHIP	0.001UF 10.00%50V
C605 Δ	1-119-886-51	CERAMIC	470PF 10.00%250V
C606 Δ	1-119-886-51	CERAMIC	470PF 10.00%250V
C607	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C608	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C609	1-126-968-11	ELECT	100UF 20.00%50V
C610	1-125-797-91	ELECT	10UF 20.00%50V
C611	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C612	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C613	1-125-906-11	ELECT	560UF 20.00%450V
C614	1-125-797-91	ELECT	10UF 20.00%50V
C615 Δ	1-119-886-51	CERAMIC	470PF 10.00%250V
C616	1-130-202-00	FILM	0.022UF 5.00% 400V
C617	1-107-792-11	CERAMIC	100PF 5.00% 1KV
C618	1-125-893-11	FILM	680PF 3.00% 1.5KV

REF. NO.	PART NO.	DESCRIPTION	REMARK
C619 Δ	1-119-886-51	CERAMIC	470PF 10.00%250V
C620	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C621	1-102-114-00	CERAMIC	470PF 10.00%50V
C622	1-102-119-00	CERAMIC	0.0015UF 10.00%50V
C623	1-104-665-11	ELECT	100UF 20.00%25V
C624	1-125-772-91	CERAMIC	1500PF 10.00%2KV
C625	1-102-002-00	CERAMIC	680PF 10.00%500V
C626	1-102-002-00	CERAMIC	680PF 10.00%500V
C627	1-102-002-00	CERAMIC	680PF 10.00%500V
C628	1-126-952-11	ELECT	1000UF 20.00%35V
C629	1-125-797-91	ELECT	10UF 20.00%50V
C630	1-124-347-51	ELECT	100UF 20.00%160V
C631	1-128-550-11	ELECT	2200UF 20.00%50V
C632	1-126-936-11	ELECT	3300UF 20.00%16V
C633	1-104-999-11	MYLAR	0.1UF 10.00%200V
C634	1-126-933-11	ELECT	100UF 20.00%16V
C635	1-104-665-11	ELECT	100UF 20.00%10V
C636	1-104-760-51	CERAMIC CHIP	0.047UF 10.00%50V
C638	1-161-830-00	CERAMIC	0.0047UF 500V
C641	1-102-002-00	CERAMIC	680PF 10.00%500V
C642	1-126-943-11	ELECT	2200UF 20.00%25V
C643	1-104-665-11	ELECT	100UF 20.00%10V
C644	1-104-331-11	CERAMIC	0.0022UF 10.00%1KV
C645	1-137-605-11	MYLAR	0.01UF 10.00%250V
C646	1-107-679-91	ELECT	10UF 20.00%450V
C647	1-163-275-11	CERAMIC CHIP	0.001UF 5.00% 50V
C649	1-126-940-11	ELECT	330UF 20.00%25V
C650	1-163-275-11	CERAMIC CHIP	0.001UF 5.00% 50V
C651	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C652	1-126-965-11	ELECT	22UF 20.00%50V
C653	1-104-664-11	ELECT	47UF 20.00%25V
C655 Δ	1-119-886-51	CERAMIC	470PF 10.00%250V
C657	1-101-821-00	CERAMIC	0.0022UF 500V
C912	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C913	1-104-665-11	ELECT	100UF 20.00%10V
<CONNECTOR>			
CN101 *	1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
CN102 *	1-779-889-11	CONNECTOR, BOARD TO BOARD 8P	
CN104	1-695-915-11	TAB (CONTACT)	
CN105 *	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN106 *	1-564-506-11	PLUG, CONNECTOR 3P	
CN201 *	1-564-508-11	PLUG, CONNECTOR 5P	
CN202 *	1-508-847-00	PIN, CONNECTOR 4P	
CN302 *	1-779-889-11	CONNECTOR, BOARD TO BOARD 8P	
CN303 *	1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
CN304 *	1-766-955-11	CONNECTOR, BOARD TO BOARD 11P	
CN305 *	1-564-509-11	PLUG, CONNECTOR 6P	
CN501 *	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN502 *	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN503 *	1-564-510-11	PLUG, CONNECTOR 7P	
CN504	1-695-915-11	TAB (CONTACT)	
CN505	1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P	
CN507 *	1-564-509-11	PLUG, CONNECTOR 6P	
CN508	1-695-915-11	TAB (CONTACT)	
CN509	1-695-915-11	TAB (CONTACT)	
CN601 *	1-580-843-11	PIN, CONNECTOR (POWER)	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN602	* 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P		D608	8-719-110-53	DIODE RD20ES-T1B2	
CN603	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P		D609	8-719-311-31	DIODE RU1P-V1	
CN604	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P		D610	8-719-210-21	DIODE 11EQS04-NTA1B	
CN605	* 1-564-507-11	PLUG, CONNECTOR 4P		D611	8-719-046-74	DIODE AU-01Z-V1	
CN608	* 1-564-507-11	PLUG, CONNECTOR 4P		D612	8-719-071-38	DIODE D5S6M	
CN904	* 1-564-512-11	PLUG, CONNECTOR 9P		D613	8-719-046-74	DIODE AU-01Z-V1	
		<DIODE>		D614	8-719-046-74	DIODE AU-01Z-V1	
D001	8-719-988-61	DIODE 1SS355TE-17		D620	8-719-110-72	DIODE RD30ES-T1B1	
D002	8-719-988-61	DIODE 1SS355TE-17		D621	8-719-071-38	DIODE D5S6M	
D004	1-216-295-61	SHORT CHIP 0		D622	8-719-071-39	DIODE FMU-G26S	
D005	8-719-988-61	DIODE 1SS355TE-17		D623	8-719-978-65	DIODE DTZ-TT11-15B	
D006	1-216-295-61	SHORT CHIP 0		D624	8-719-073-01	DIODE MA111-(K8).SO	
D100	8-719-073-01	DIODE MA111-(K8).SO		D625	8-719-977-28	DIODE DTZ10B	
D300	1-216-295-61	SHORT CHIP 0		D628	8-719-911-19	DIODE 1SS119-25TD	
D301	8-719-988-61	DIODE 1SS355TE-17		D629	8-719-052-74	DIODE FMX-12S	
D303	8-719-988-61	DIODE 1SS355TE-17		D630	8-719-052-74	DIODE FMX-12S	
D304	8-719-988-61	DIODE 1SS355TE-17		D631	8-719-068-00	DIODE ERC04-06SE	
D305	8-719-988-61	DIODE 1SS355TE-17		D632	8-719-068-00	DIODE ERC04-06SE	
D306	8-719-988-61	DIODE 1SS355TE-17		D633	8-719-948-45	DIODE ERA22-08TP3	
D307	8-719-988-61	DIODE 1SS355TE-17		D634	8-719-073-01	DIODE MA111-(K8).SO	
D308	8-719-988-61	DIODE 1SS355TE-17		D635	8-719-073-01	DIODE MA111-(K8).SO	
D309	8-719-069-54	DIODE UDZS-TE17-5.1B		D636	8-719-510-02	DIODE D1NS4-TA2	
D311	8-719-988-61	DIODE 1SS355TE-17		D637	8-719-109-96	DIODE RD6.8ES-T1B1	
D312	8-719-988-61	DIODE 1SS355TE-17		D638	8-719-200-82	DIODE 11ES2-TB5	
D313	8-719-988-61	DIODE 1SS355TE-17				<CONNECTOR>	
D320	8-719-069-60	DIODE UDZS-TE17-9.1B		DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	
D321	8-719-069-60	DIODE UDZS-TE17-9.1B				<FERRITE BEAD>	
D504	8-719-302-43	DIODE EL1Z		FB101	1-216-295-61	SHORT CHIP 0	
D505	8-719-988-61	DIODE 1SS355TE-17		FB102	1-216-295-61	SHORT CHIP 0	
D506	8-719-911-19	DIODE 1SS119-25TD		FB501	1-410-397-21	FERRITE 1.1UH	
D507	8-719-988-61	DIODE 1SS355TE-17		FB502	1-410-397-21	FERRITE 1.1UH	
D508	8-719-988-61	DIODE 1SS355TE-17		FB600	1-410-397-21	FERRITE 1.1UH	
D509	1-216-073-61	RES-CHIP 10G 5% 1/10W		FB601	1-410-397-21	FERRITE 1.1UH	
D510	8-719-988-61	DIODE 1SS355TE-17		FB602	1-410-397-21	FERRITE 1.1UH	
D511	8-719-988-61	DIODE 1SS355TE-17		FB603	1-410-397-21	FERRITE 1.1UH	
D512	8-719-988-61	DIODE 1SS355TE-17		FB604	1-412-911-31	FERRITE 0UH	
D513	8-719-908-03	DIODE GP08DPKG23		FB605	1-412-911-31	FERRITE 0UH	
D517	8-719-312-71	DIODE RS3FS		FB606	1-412-911-31	FERRITE 0UH	
D518	8-719-074-35	DIODE RU4AM-T4		FB607	1-410-397-21	FERRITE 1.1UH	
D519	8-719-312-71	DIODE RS3FS		FB608	1-412-911-31	FERRITE 0UH	
D521	8-719-302-43	DIODE EL1Z		FB611	1-410-397-21	FERRITE 1.1UH	
D522	8-719-028-45	DIODE D2L20U-F		FB612	1-410-397-21	FERRITE 1.1UH	
D523	8-719-302-43	DIODE EL1Z		FB613	1-410-397-21	FERRITE 1.1UH	
D527	8-719-908-03	DIODE GP08DPKG23		FB615	1-410-397-21	FERRITE 1.1UH	
D528	8-719-908-03	DIODE GP08DPKG23				<IC>	
D531	8-719-988-61	DIODE 1SS355TE-17		IC001	8-752-905-64	IC CXP86461-621S	
D532	8-719-988-61	DIODE 1SS355TE-17		IC002	8-759-371-21	IC MM1319AFBE	
D534	8-719-988-61	DIODE 1SS355TE-17		IC003	8-759-672-78	IC M24C08-BN6	
D600	8-719-911-19	DIODE 1SS119-25TD		IC100	8-759-042-02	IC S-80743AL-A7-T1	
D602	8-719-911-19	DIODE 1SS119-25TD		IC301	8-752-090-41	IC CXA2139S	
D603	8-719-150-92	DIODE RD33ES-T1B2					
D604	8-719-028-72	DIODE RGP02-17PKG23					
D605	8-719-510-53	DIODE D4SB60L					
D606	8-719-108-18	DIODE TF541M					
D607	8-719-073-01	DIODE MA111-(K8).SO					

A

The components identified by shading and mark $\triangle$ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
IC502	8-759-700-07	IC NJM2903M-TE2				<PHOTO COUPLER>	
IC503	8-759-980-58	IC TDA8172					
IC601	8-749-014-48	IC STR-F6656					
IC602	8-749-920-61	IC SE-135N					
IC603	8-759-701-59	IC NJM78M09FA					
IC604	8-759-231-53	IC TA7805S					
		<CHIP CONDUCTOR>					
JR001	1-216-295-61	SHORT CHIP	0				
JR002	1-216-295-61	SHORT CHIP	0				
JR004	1-216-295-61	SHORT CHIP	0				
JR005	1-216-295-61	SHORT CHIP	0				
JR006	1-216-295-61	SHORT CHIP	0				
JR007	1-216-295-61	SHORT CHIP	0				
JR008	1-216-295-61	SHORT CHIP	0				
JR010	1-216-295-61	SHORT CHIP	0				
JR012	1-216-295-61	SHORT CHIP	0				
JR014	1-216-295-61	SHORT CHIP	0				
JR015	1-216-295-61	SHORT CHIP	0				
JR016	1-216-295-61	SHORT CHIP	0				
JR102	1-216-295-61	SHORT CHIP	0				
JR107	1-216-295-61	SHORT CHIP	0				
JR301	1-216-295-61	SHORT CHIP	0				
JR303	1-216-295-61	SHORT CHIP	0				
JR500	1-216-295-61	SHORT CHIP	0				
JR501	1-216-295-61	SHORT CHIP	0				
JR502	1-216-295-61	SHORT CHIP	0				
JR503	1-216-295-61	SHORT CHIP	0				
JR600	1-216-295-61	SHORT CHIP	0				
		<COIL>					
L002	1-414-856-11	INDUCTOR	10UH				
L003	1-414-180-11	INDUCTOR	3.3UH				
L005	1-414-233-22	INDUCTOR CHIP	0UH				
L101	1-414-856-11	INDUCTOR	10UH				
L102	1-414-856-11	INDUCTOR	10UH				
L103	1-414-856-11	INDUCTOR	10UH				
L104	1-414-856-11	INDUCTOR	10UH				
L105	1-414-856-11	INDUCTOR	10UH				
L301	1-414-189-31	INDUCTOR	100UH				
L302	1-414-185-41	INDUCTOR	22UH				
L501	1-412-525-31	INDUCTOR	10UH				
L502	1-422-613-11	COIL, AIR CORE					
L503	1-412-525-31	INDUCTOR	10UH				
L504	1-412-525-31	INDUCTOR	10UH				
L507	1-459-111-00	INDUCTOR	10MH				
L511	1-406-977-21	INDUCTOR	100UH				
L513	1-412-551-31	INDUCTOR	1.5MH				
L515	1-459-104-00	COIL, WITH CORE					
L518	1-414-187-11	INDUCTOR	47UH				
L601	1-412-527-11	INDUCTOR	15UH				
L905	1-414-856-11	INDUCTOR	10UH				
		<RESISTOR>					
R001	1-414-233-22	INDUCTOR CHIP	0UH				
R002	1-216-025-61	RES-CHIP	100			5%	1/10W
R003	1-216-073-61	RES-CHIP	10G			5%	1/10W
R004	1-216-025-61	RES-CHIP	100			5%	1/10W
R005	1-216-025-61	RES-CHIP	100			5%	1/10W
R008	1-216-065-61	RES-CHIP	4.7K			5%	1/10W
R010	1-216-065-61	RES-CHIP	4.7K			5%	1/10W
R011	1-216-065-61	RES-CHIP	4.7K			5%	1/10W
R012	1-216-065-61	RES-CHIP	4.7K			5%	1/10W
R013	1-216-065-61	RES-CHIP	4.7K			5%	1/10W
R014	1-216-025-61	RES-CHIP	100			5%	1/10W
R015	1-216-025-61	RES-CHIP	100			5%	1/10W
R017	1-216-049-61	RES-CHIP	1K			5%	1/10W
R018	1-216-033-61	RES-CHIP	220			5%	1/10W
R019	1-216-073-61	RES-CHIP	10G			5%	1/10W
R021	1-216-073-61	RES-CHIP	10G			5%	1/10W
R022	1-216-025-61	RES-CHIP	100			5%	1/10W
R023	1-216-049-61	RES-CHIP	1K			5%	1/10W
		<TRANSISTOR>					
Q001	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q002	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q003	8-729-424-08	TRANSISTOR UN2111-TX					
Q004	8-729-421-22	TRANSISTOR UN2211-TX					
Q101	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q301	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q304	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q305	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q306	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q307	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q308	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q311	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q313	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q315	8-729-421-19	TRANSISTOR UN2213-TX					
Q501	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q502	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q503	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q505	8-729-931-45	TRANSISTOR IRF614					
Q506	8-729-119-80	TRANSISTOR 2SC2688-LK					
Q507	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L					
Q509	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q511	8-729-048-07	TRANSISTOR 2SD2578-CA					
Q600	8-729-119-78	TRANSISTOR 2SC2785TP-HFE					
Q601	8-729-023-22	TRANSISTOR 2SD2114KT146					
Q602	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q603	8-729-424-08	TRANSISTOR UN2111-TX					
Q604	8-729-200-17	TRANSISTOR 2SA1091R-TPE2					
Q605	8-729-044-30	TRANSISTOR 2SK2845-LB102					
Q606	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					
Q607	8-729-922-37	TRANSISTOR 2SD2144S-TP-UVW					
Q608	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L					

A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R024	1-216-063-61	RES-CHIP	3.9K 5% 1/10W	R319	1-216-025-61	RES-CHIP	100 5% 1/10W
R025	1-216-063-61	RES-CHIP	3.9K 5% 1/10W	R320	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R026	1-216-063-61	RES-CHIP	3.9K 5% 1/10W	R321	1-216-073-61	RES-CHIP	10G 5% 1/10W
R027	1-216-049-61	RES-CHIP	1K 5% 1/10W	R322	1-216-033-61	RES-CHIP	220 5% 1/10W
R028	1-216-073-61	RES-CHIP	10G 5% 1/10W	R326	1-216-029-61	RES-CHIP	150 5% 1/10W
R029	1-216-049-61	RES-CHIP	1K 5% 1/10W	R327	1-216-033-61	RES-CHIP	220 5% 1/10W
R031	1-216-049-61	RES-CHIP	1K 5% 1/10W	R328	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R032	1-216-025-61	RES-CHIP	100 5% 1/10W	R329	1-216-041-61	RES-CHIP	470 5% 1/10W
R034	1-216-049-61	RES-CHIP	1K 5% 1/10W	R331	1-216-295-61	SHORT CHIP	0
R035	1-216-025-61	RES-CHIP	100 5% 1/10W	R332	1-216-033-61	RES-CHIP	220 5% 1/10W
R036	1-216-025-61	RES-CHIP	100 5% 1/10W	R333	1-216-083-61	RES-CHIP	27K 5% 1/10W
R037	1-216-025-61	RES-CHIP	100 5% 1/10W	R334	1-216-129-61	METAL CHIP	2.2M 5% 1/10W
R038	1-216-049-61	RES-CHIP	1K 5% 1/10W	R335	1-216-045-00	METAL CHIP	680 5% 1/10W
R040	1-216-025-61	RES-CHIP	100 5% 1/10W	R339	1-216-033-61	RES-CHIP	220 5% 1/10W
R041	1-216-025-61	RES-CHIP	100 5% 1/10W	R340	1-216-025-61	RES-CHIP	100 5% 1/10W
R042	1-216-295-61	SHORT CHIP	0	R345	1-216-081-61	RES-CHIP	22K 5% 1/10W
R043	1-216-049-61	RES-CHIP	1K 5% 1/10W	R346	1-216-051-61	RES-CHIP	1.2K 5% 1/10W
R044	1-216-025-61	RES-CHIP	100 5% 1/10W	R347	1-216-051-61	RES-CHIP	1.2K 5% 1/10W
R045	1-414-233-22	INDUCTOR CHIP	0UH	R348	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
R046	1-216-049-61	RES-CHIP	1K 5% 1/10W	R349	1-216-073-61	RES-CHIP	10G 5% 1/10W
R047	1-414-233-22	INDUCTOR CHIP	0UH	R350	1-216-061-61	RES-CHIP	3.3G 5% 1/10W
R048	1-216-073-61	RES-CHIP	10G 5% 1/10W	R351	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
R050	1-216-073-61	RES-CHIP	10G 5% 1/10W	R354	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R052	1-216-053-61	RES-CHIP	1.5K 5% 1/10W	R355	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R053	1-216-049-61	RES-CHIP	1K 5% 1/10W	R356	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R054	1-216-049-61	RES-CHIP	1K 5% 1/10W	R357	1-216-079-00	METAL CHIP	18K 5% 1/10W
R055	1-216-073-61	RES-CHIP	10G 5% 1/10W	R358	1-216-049-61	RES-CHIP	1K 5% 1/10W
R056	1-216-073-61	RES-CHIP	10G 5% 1/10W	R359	1-216-033-61	RES-CHIP	220 5% 1/10W
R061	1-216-295-61	SHORT CHIP	0	R360	1-216-033-61	RES-CHIP	220 5% 1/10W
R062	1-216-041-61	RES-CHIP	470 5% 1/10W	R361	1-216-073-61	RES-CHIP	10G 5% 1/10W
R063	1-216-041-61	RES-CHIP	470 5% 1/10W	R362	1-216-075-61	RES-CHIP	12K 5% 1/10W
R064	1-216-041-61	RES-CHIP	470 5% 1/10W	R363	1-216-079-00	METAL CHIP	18K 5% 1/10W
R065	1-216-041-61	RES-CHIP	470 5% 1/10W	R364	1-216-295-61	SHORT CHIP	0
R066	1-216-049-61	RES-CHIP	1K 5% 1/10W	R365	1-216-033-61	RES-CHIP	220 5% 1/10W
R067	1-216-049-61	RES-CHIP	1K 5% 1/10W	R366	1-216-073-61	RES-CHIP	10G 5% 1/10W
R101	1-216-025-61	RES-CHIP	100 5% 1/10W	R367	1-216-073-61	RES-CHIP	10G 5% 1/10W
R102	1-216-025-61	RES-CHIP	100 5% 1/10W	R368	1-216-073-61	RES-CHIP	10G 5% 1/10W
R105	1-216-295-61	SHORT CHIP	0	R370	1-216-033-61	RES-CHIP	220 5% 1/10W
R109	1-216-041-61	RES-CHIP	470 5% 1/10W	R373	1-216-025-61	RES-CHIP	100 5% 1/10W
R111	1-216-025-61	RES-CHIP	100 5% 1/10W	R376	1-216-081-61	RES-CHIP	22K 5% 1/10W
R112	1-216-025-61	RES-CHIP	100 5% 1/10W	R377	1-216-121-61	RES-CHIP	1M 5% 1/10W
R113	1-216-025-61	RES-CHIP	100 5% 1/10W	R378	1-216-295-61	SHORT CHIP	0
R225	1-216-033-61	RES-CHIP	220 5% 1/10W	R500	1-220-958-91	RES, METAL FILM	1K
R226	1-216-033-61	RES-CHIP	220 5% 1/10W	R501	1-216-049-61	RES-CHIP	1K 5% 1/10W
R227	1-216-033-61	RES-CHIP	220 5% 1/10W	R505	1-208-830-11	METAL CHIP	100K 0.5% 1/10W
R237	1-216-295-61	SHORT CHIP	0	R506	1-216-081-61	RES-CHIP	22K 5% 1/10W
R301	1-216-113-00	RES-CHIP	470K 5% 1/10W	R507	1-249-389-11	CARBON	4.7 5% 1/4W
R302	1-216-295-61	SHORT CHIP	0	R508	1-216-471-11	METAL OXIDE	27 5% 3W
R303	1-216-049-61	RES-CHIP	1K 5% 1/10W	R509	1-216-473-11	METAL OXIDE	56 5% 3W
R304	1-216-073-61	RES-CHIP	10G 5% 1/10W	R510	1-216-449-11	METAL OXIDE	56 5% 2W
R306	1-216-085-00	METAL CHIP	33K 5% 1/10W	R511	1-215-908-00	METAL OXIDE	33 5% 3W
R308	1-216-025-61	RES-CHIP	100 5% 1/10W	R515	1-215-911-11	METAL OXIDE	100 5% 3W
R309	1-216-025-61	RES-CHIP	100 5% 1/10W	R517	1-208-798-11	METAL CHIP	4.7K 0.5% 1/10W
R310	1-216-025-61	RES-CHIP	100 5% 1/10W	R518	1-220-948-91	METAL	100 5% 1/2W
R315	1-216-053-61	RES-CHIP	1.5K 5% 1/10W	R519	1-215-913-11	METAL OXIDE	220 5% 3W
R316	1-216-053-61	RES-CHIP	1.5K 5% 1/10W	R520	1-215-445-00	METAL	10K 1% 1/4W
R318	1-216-051-61	RES-CHIP	1.2K 5% 1/10W	R522	1-208-806-11	METAL CHIP	10K 0.5% 1/10W
				R523	1-220-952-91	METAL MELF	330 5% 1/2W

KV-XF29M97/XF29M67

RM-953

A

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R525	1-208-846-11	METAL CHIP	470K 0.5% 1/10W	R596	1-215-916-00	METAL OXIDE	680 5% 3W
R526	1-208-804-11	METAL CHIP	8.2K 0.5% 1/10W	R597	1-247-750-11	CARBON	680 5% 1/2W
R527	1-216-001-61	RES-CHIP	10 5% 1/10W	R598	1-220-976-91	METAL MELF	56K 5% 1/2W
R528	1-208-814-91	METAL CHIP	22K 0.5% 1/10W	R599	1-249-389-11	CARBON	4.7 5% 1/4W
R529	1-216-635-11	METAL CHIP	220 0.5% 1/10W	R600	1-220-976-91	METAL MELF	56K 5% 1/2W
R531	1-220-963-91	METAL MELF	3.3K 5% 1/2W	R601	1-249-420-11	CARBON	1.8K 5% 1/4W
R533	1-220-958-91	RES, METAL FILM	1K	R602	1-249-389-11	CARBON	4.7 5% 1/4W
R534	1-216-364-11	METAL OXIDE	0.39 5% 2W	R603	1-215-485-00	METAL	470K 1% 1/4W
R535	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R604	1-216-097-61	RES-CHIP	100K 5% 1/10W
R536	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R607	1-220-965-91	METAL CHIP	4.7K 5% 1/2W
R537	1-208-804-11	METAL CHIP	8.2K 0.5% 1/10W	R608	1-240-205-91	CARBON	22M 5% 1/2W
R539	1-216-049-61	RES-CHIP	1K 5% 1/10W	R609	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R540	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	R610	1-216-073-61	RES-CHIP	10G 5% 1/10W
R541	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	R611	1-216-089-61	RES, CHIP	47K (2012)
R542	1-216-073-61	RES-CHIP	10G 5% 1/10W	R612	1-216-045-00	METAL CHIP	680 5% 1/10W
R543	1-216-437-00	METAL OXIDE	5.6K 5% 1W	R614	1-216-041-61	RES-CHIP	470 5% 1/10W
R544	1-215-917-11	METAL OXIDE	1K 5% 3W	R615	1-216-369-00	METAL OXIDE	1 5% 2W
R545	1-216-077-61	RES, CHIP	15K (2012)	R616	1-260-302-51	CARBON	6.8 5% 1/2W
R546	1-216-077-61	RES, CHIP	15K (2012)	R617	1-247-791-91	CARBON	22 5% 1/4W
R547	1-216-085-00	METAL CHIP	33K 5% 1/10W	R619	1-260-128-11	CARBON	270K 5% 1/2W
R548	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W	R621	1-215-864-00	METAL OXIDE	150 5% 1W
R549	1-215-452-00	METAL	20K 1% 1/4W	R623	1-216-095-61	RES-CHIP	82K 5% 1/10W
R550	1-216-097-61	RES-CHIP	100K 5% 1/10W	R624	1-216-089-61	RES, CHIP	47K (2012)
R551	1-249-441-11	CARBON	100K 5% 1/4W	R626	1-216-049-61	RES-CHIP	1K 5% 1/10W
R552	1-216-057-61	RES-CHIP	2.2K 5% 1/10W	R627	1-240-251-11	CMT-MELF	6.8 5% 10W
R553	1-215-453-00	METAL	22K 1% 1/4W	R629	1-247-747-11	CARBON	470 5% 1/2W
R554	1-215-453-00	METAL	22K 1% 1/4W	R630	1-249-429-11	CARBON	10K 5% 1/4W
R556	1-215-437-00	METAL	4.7K 1% 1/4W	R631	1-216-089-61	RES, CHIP	47K (2012)
R558	1-220-963-91	METAL MELF	3.3K 5% 1/2W	R632	1-220-886-11	FUSIBLE	0.1 10% 1W
R559	1-220-969-91	METAL CHIP	10K 5% 1/2W	R634	Δ 1-218-265-11	METAL	8.2M 5% 1W
R560	1-216-073-61	RES-CHIP	10G 5% 1/10W	R635	1-216-492-11	METAL OXIDE	82K 5% 3W
R561	1-216-049-61	RES-CHIP	1K 5% 1/10W	R636	1-215-924-00	METAL OXIDE	15K 5% 3W
R562	1-249-401-11	CARBON	47 5% 1/4W	R637	1-216-492-11	METAL OXIDE	82K 5% 3W
R564	1-208-820-11	METAL CHIP	39K 0.5% 1/10W	R639	1-216-361-21	METAL OXIDE	0.22 5% 2W
R565	1-216-073-61	RES-CHIP	10G 5% 1/10W	R640	1-220-956-91	METAL MELF	680 5% 1/2W
R567	1-216-105-61	METAL CHIP	220K 5% 1/10W	R641	1-216-361-21	METAL OXIDE	0.22 5% 2W
R568	1-249-383-11	CARBON	1.5 5% 1/4W	R642	1-220-959-91	METAL MELF	1.5K 5% 1/2W
R570	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	R643	1-220-963-91	METAL MELF	3.3K 5% 1/2W
R571	1-215-443-00	METAL	8.2K 1% 1/4W	R644	1-220-959-91	METAL MELF	1.5K 5% 1/2W
R573	1-216-083-61	RES-CHIP	27K 5% 1/10W	R646	1-215-924-00	METAL OXIDE	15K 5% 3W
R575	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W	R647	1-249-387-11	CARBON	3.3 5% 1/4W
R577	1-215-913-11	METAL OXIDE	220 5% 3W	R648	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R578	1-216-369-00	METAL OXIDE	1 5% 2W	R649	1-220-958-91	RES, METAL FILM	1K
R579	1-216-295-61	SHORT CHIP	0	R650	1-215-882-00	METAL OXIDE	22 5% 2W
R580	1-208-830-11	METAL CHIP	100K 0.5% 1/10W	R652	1-215-900-11	METAL OXIDE	22K 5% 2W
R581	1-208-790-11	METAL CHIP	2.2K 0.5% 1/10W	R653	1-215-873-00	METAL OXIDE	4.7K 5% 1W
R582	1-208-846-11	METAL CHIP	470K 0.5% 1/10W	R654	1-216-369-00	METAL OXIDE	1 5% 2W
R584	1-208-798-11	METAL CHIP	4.7K 0.5% 1/10W	R656	1-220-958-91	RES, METAL FILM	1K
R587	1-216-295-61	SHORT CHIP	0	R657	1-260-127-11	CARBON	220K 5% 1/2W
R588	1-215-888-00	METAL OXIDE	220 5% 2W	R659	1-216-049-61	RES-CHIP	1K 5% 1/10W
R589	1-215-888-00	METAL OXIDE	220 5% 2W	R660	1-216-073-61	RES-CHIP	10G 5% 1/10W
R590	1-215-465-00	METAL	68K 1% 1/4W	R661	1-215-873-00	METAL OXIDE	4.7K 5% 1W
R591	1-260-288-11	CARBON	0.47 5% 1/2W	R909	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R592	1-208-820-11	METAL CHIP	39K 0.5% 1/10W	R910	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R593	1-260-288-11	CARBON	0.47 5% 1/2W				
R594	1-260-288-11	CARBON	0.47 5% 1/2W				
R595	1-216-073-61	RES-CHIP	10G 5% 1/10W				

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

A **B2** **B3**

REF. NO.	PART NO.	DESCRIPTION	REMARK
<RELAY>			
	RY600 Δ 1-755-214-11	RELAY, AC POWER	
	RY601 Δ 1-755-214-11	RELAY, AC POWER	
<SWITCH>			
S501	1-572-707-11	SWITCH, LEVER	
S502	1-572-707-11	SWITCH, LEVER	
<TRANSFORMER>			
T501	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE	
T503	Δ 1-453-305-11	TRANSFORMER ASSY, FLYBACK (NX-4009/C6P4)	
T504	1-431-693-11	TRANSFORMER, HORIZONTAL LINEAR	
T505	1-426-981-11	TRANSFORMER, FERRITE (PMT)	
T601	1-424-505-11	TRANSFORMER, LINE FILTER	
T603	Δ 1-431-946-11	TRANSFORMER, CONVERTER	
T604	Δ 1-431-852-11	TRANSFORMER, CONVERTER (SRT)	
<THERMISTOR>			
THP600	1-809-827-11	THERMISTOR, POSITIVE	
<TUNER>			
TU101	8-598-452-20	TUNER, FSS BTF-WG442	
<CRYSTAL>			
X001	1-781-174-21	VIBRATOR, CERAMIC	
X301	1-781-134-21	VIBRATOR, CRYSTAL	
X302	1-781-132-21	VIBRATOR, CRYSTAL	

	* A-1131-417-A	B2 BOARD MOUNTED	

<CONNECTOR>			
CN2302 *	1-766-952-11	CONNECTOR, BOARD TO BOARD 11P	

	* A-1136-105-A	B3 BOARD COMPLETE	

	4-382-854-11	SCREW (M3X10), P, SW (+)	
<CAPACITOR>			
C1401	1-104-661-91	ELECT	330UF 20.00%16V
C1402	1-104-664-11	ELECT	47UF 20.00%25V
C1403	1-104-664-11	ELECT	47UF 20.00%25V
C1404	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C1405	1-104-664-11	ELECT	47UF 20.00%25V

REF. NO.	PART NO.	DESCRIPTION	REMARK
C1406	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C1407	1-126-933-11	ELECT	100UF 20.00%16V
C1408	1-125-797-91	ELECT	10UF 20.00%50V
C1410	1-104-664-11	ELECT	47UF 20.00%25V
C1411	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C1412	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C1413	1-126-933-11	ELECT	470UF 20.00%16V
C1414	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1415	1-104-664-11	ELECT	47UF 20.00%25V
C1416	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1417	1-126-933-11	ELECT	100UF 20.00%16V
C1418	1-163-031-11	CERAMIC CHIP	0.01UF 50V
C1419	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C1420	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C1421	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1422	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1423	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1425	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1426	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1428	1-104-665-11	ELECT	100UF 20.00%25V
C1429	1-104-663-11	ELECT	33UF 20.00%25V
C1430	1-164-004-51	CERAMIC CHIP	0.1UF 10.00%25V
C1431	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C1432	1-126-933-11	ELECT	100UF 20.00%16V
C1433	1-104-664-11	ELECT	47UF 20.00%16V
C1434	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1435	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C1436	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C1438	1-163-005-51	CERAMIC CHIP	470PF 10% 50V
C1439	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1440	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1441	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1442	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1443	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1444	1-164-005-51	CERAMIC CHIP	470000PF 10% 25V
C1445	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1446	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1447	1-125-797-91	ELECT	10UF 20.00%50V
C1448	1-164-005-51	CERAMIC CHIP	470000PF 10% 25V
C1449	1-126-933-11	ELECT	100UF 20.00%16V
C1450	1-163-005-51	CERAMIC CHIP	470PF 10% 50V
C1451	1-163-005-51	CERAMIC CHIP	470PF 10% 50V
C1452	1-163-005-51	CERAMIC CHIP	470PF 10% 50V
C1453	1-126-933-11	ELECT	100UF 20.00%16V
C1454	1-126-967-11	ELECT	47UF 20.00%50V
C1455	1-126-967-11	ELECT	47UF 20.00%50V
C1456	1-126-933-11	ELECT	100UF 20.00%16V
C1457	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1458	1-126-933-11	ELECT	100UF 20.00%16V
C1459	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1460	1-163-133-00	CERAMIC CHIP	470PF 10% 50V
C1461	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C1462	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C3201	1-125-797-91	ELECT	10UF 20.00%50V
C3203	1-115-339-51	CERAMIC CHIP	0.1UF 10.00%50V
C3206	1-164-232-11	CERAMIC CHIP	0.01UF 10.00%50V
C3207	1-164-489-51	CERAMIC CHIP	0.22UF 10.00%16V
C3208	1-164-489-51	CERAMIC CHIP	0.22UF 10.00%16V

B3

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C3209	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V	C6202	1-126-953-11	ELECT	2200UF 20.00% 35V
C3210	1-125-797-91	ELECT	10UF 20.00% 50V	C6203	1-164-232-11	CERAMIC CHIP	0.01UF 10.00% 50V
C3211	1-125-797-91	ELECT	10UF 20.00% 50V	C6204	1-128-550-11	ELECT	2200UF 20.00% 50V
C3212	1-125-797-91	ELECT	10UF 20.00% 50V	C6205	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C3213	1-104-664-11	ELECT	47UF 20.00% 25V	C6206	1-128-550-11	ELECT	2200UF 20.00% 50V
C3214	1-104-664-11	ELECT	47UF 20.00% 25V	C6207	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3215	1-117-720-51	CERAMIC CHIP	4.7UF 10V	C6208	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3216	1-117-720-51	CERAMIC CHIP	4.7UF 10V	C6209	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C3217	1-164-232-11	CERAMIC CHIP	0.01UF 10.00% 50V	C6210	1-126-924-11	ELECT	330UF 20.00% 10V
C3218	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V	C6211	1-126-924-11	ELECT	330UF 20.00% 10V
C3219	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V	C6212	1-104-664-11	ELECT	47UF 20.00% 25V
C3220	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	C6213	1-136-161-00	MYLAR	0.047UF 5.00% 50V
C3221	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	C6215	1-126-933-11	ELECT	100UF 20.00% 16V
C3222	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	C6216	1-125-799-91	ELECT	1UF 20.00% 63V
C3223	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	C6217	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V
C3224	1-164-505-11	CERAMIC CHIP	2.2UF 16V	C6218	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3225	1-163-038-00	CERAMIC CHIP	0.1UF 25V	C6219	1-125-800-91	ELECT	2.2UF 20.00% 63V
C3226	1-125-797-91	ELECT	10UF 20.00% 50V	C6220	1-164-505-11	CERAMIC CHIP	2.2UF 16V
C3227	1-164-505-11	CERAMIC CHIP	2.2UF 16V	C6221	1-125-798-91	ELECT	0.47UF 20.00% 63V
C3228	1-107-698-11	ELECT	10UF 20.00% 25V	C6222	1-164-505-11	CERAMIC CHIP	2.2UF 16V
C3229	1-107-698-11	ELECT	10UF 20.00% 25V	C6223	1-125-799-91	ELECT	1UF 20.00% 63V
C3240	1-115-339-51	CERAMIC CHIP	0.1UF 10.00% 50V	C6225	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3249	1-216-295-61	SHORT CHIP	0	C6226	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3254	1-216-295-61	SHORT CHIP	0	C6227	1-128-550-11	ELECT	2200UF 20.00% 50V
C3259	1-104-664-11	ELECT	47UF 20.00% 16V	C6228	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3260	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C6229	1-164-505-51	CERAMIC CHIP	2.2UF 10% 16V
C3262	1-104-664-11	ELECT	47UF 20.00% 16V	C6230	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3264	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V	C6231	1-128-550-11	ELECT	2200UF 20.00% 50V
C3265	1-125-797-91	ELECT	10UF 20.00% 50V	C6232	1-163-275-11	CERAMIC CHIP	0.001UF 5.00% 50V
C3266	1-125-797-91	ELECT	10UF 20.00% 50V	C6233	1-163-007-51	CERAMIC CHIP	680PF 10% 50V
C3268	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V	C6234	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V
C3269	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V	C6235	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C3270	1-164-690-51	CERAMIC CHIP	0.0022UF 5.00% 50V	C6236	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C3271	1-164-690-51	CERAMIC CHIP	0.0022UF 5.00% 50V	C6237	1-136-177-00	MYLAR	1UF 5.00% 50V
C3272	1-126-965-11	ELECT	22UF 20.00% 50V	C6238	1-163-009-11	CERAMIC CHIP	0.001UF 10.00% 50V
C3273	1-115-339-51	CERAMIC CHIP	0.1UF 10.00% 50V	C6239	1-127-682-51	ELECT MELF	2200UF 20% 25V
C3274	1-125-797-91	ELECT	10UF 20.00% 50V	C6240	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C3276	1-164-344-11	CERAMIC CHIP	0.068UF 10.00% 25V	C6241	1-136-161-00	MYLAR	0.047UF 5.00% 50V
C3277	1-164-344-11	CERAMIC CHIP	0.068UF 10.00% 25V	C6244	1-163-019-51	CERAMIC CHIP	6800PF 10% 50V
C3278	1-164-344-11	CERAMIC CHIP	0.068UF 10.00% 25V	C6245	1-163-019-51	CERAMIC CHIP	6800PF 10% 50V
C3279	1-164-344-11	CERAMIC CHIP	0.068UF 10.00% 25V	C6249	1-216-295-61	SHORT CHIP	0
C3280	1-115-419-11	CERAMIC CHIP	3300PF 5.00% 25V	C6251	1-126-965-11	ELECT	22UF 20.00% 50V
C3281	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	C6252	1-126-965-11	ELECT	22UF 20.00% 50V
C3282	1-125-797-91	ELECT	10UF 20.00% 50V	C6253	1-125-798-91	ELECT	0.47UF 20.00% 63V
C3283	1-125-797-91	ELECT	10UF 20.00% 50V				
C3284	1-115-339-51	CERAMIC CHIP	0.1UF 10.00% 50V				
C3285	1-125-797-91	ELECT	10UF 20.00% 50V			<CONNECTOR>	
C3286	1-125-797-91	ELECT	10UF 20.00% 50V	CN1400*	1-564-512-11	PLUG, CONNECTOR 9P	
C3287	1-125-797-91	ELECT	10UF 20.00% 50V	CN1401*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
C3288	1-163-037-11	CERAMIC CHIP	0.022UF 10.00% 50V	CN1403*	1-564-506-11	PLUG, CONNECTOR 3P	
C3289	1-115-419-11	CERAMIC CHIP	3300PF 5.00% 25V	CN1404*	1-779-891-11	CONNECTOR, BOARD TO BOARD 8P	
C3290	1-164-505-11	CERAMIC CHIP	2.2UF 16V	CN1405*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C3291	1-164-505-11	CERAMIC CHIP	2.2UF 16V	CN1406*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P	
C6200	1-216-295-61	SHORT CHIP	0	CN1407*	1-779-891-11	CONNECTOR, BOARD TO BOARD 8P	
C6201	1-125-797-91	ELECT	10UF 20.00% 50V	CN1408	1-764-818-11	CONNECTOR, BOARD TO BOARD 10P	
				CN1409	1-764-818-11	CONNECTOR, BOARD TO BOARD 10P	
				CN6200*	1-564-507-11	PLUG, CONNECTOR 4P	

B3

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN6202*	1-564-507-11	PLUG, CONNECTOR 4P		JR1409	1-216-295-61	SHORT CHIP	0
CN6204*	1-564-509-11	PLUG, CONNECTOR 6P		JR1410	1-216-295-61	SHORT CHIP	0
CN6205*	1-564-507-11	PLUG, CONNECTOR 4P		JR3200	1-216-295-61	SHORT CHIP	0
CN6206*	1-564-508-11	PLUG, CONNECTOR 5P		JR3201	1-216-295-61	SHORT CHIP	0
				JR3202	1-216-295-61	SHORT CHIP	0
		<DIODE>		JR3203	1-216-295-61	SHORT CHIP	0
D1401	8-719-069-60	DIODE UDZS-TE17-9.1B		JR3204	1-216-295-61	SHORT CHIP	0
D1402	8-719-069-60	DIODE UDZS-TE17-9.1B		JR3207	1-216-295-61	SHORT CHIP	0
D1403	8-719-069-60	DIODE UDZS-TE17-9.1B		JR3208	1-216-295-61	SHORT CHIP	0
D1404	8-719-069-60	DIODE UDZS-TE17-9.1B		JR3209	1-216-295-61	SHORT CHIP	0
D1405	8-719-069-60	DIODE UDZS-TE17-9.1B					
D1406	8-719-069-60	DIODE UDZS-TE17-9.1B		JR6200	1-216-295-61	SHORT CHIP	0
D1407	8-719-069-60	DIODE UDZS-TE17-9.1B		JR6201	1-216-295-61	SHORT CHIP	0
D1408	8-719-069-60	DIODE UDZS-TE17-9.1B		JR6202	1-216-295-61	SHORT CHIP	0
D1409	8-719-069-60	DIODE UDZS-TE17-9.1B		JR6203	1-216-295-61	SHORT CHIP	0
D1410	8-719-069-60	DIODE UDZS-TE17-9.1B		JR6204	1-216-295-61	SHORT CHIP	0
D1411	8-719-069-60	DIODE UDZS-TE17-9.1B				<COIL>	
D1412	8-719-069-60	DIODE UDZS-TE17-9.1B		L1400	1-414-856-11	INDUCTOR	10UH
D1415	8-719-069-60	DIODE UDZS-TE17-9.1B		L1402	1-412-537-31	INDUCTOR	100UH
D1416	8-719-069-60	DIODE UDZS-TE17-9.1B		L1403	1-414-856-11	INDUCTOR	10UH
D6200	8-719-109-86	DIODE RD5.1ES-T1B3		L1404	1-412-537-31	INDUCTOR	100UH
				L1405	1-414-856-11	INDUCTOR	10UH
D6205	8-719-988-61	DIODE 1SS355TE-17					
D6211	8-719-073-01	DIODE MA111-(K8),SO		L1406	1-414-856-11	INDUCTOR	10UH
D6212	8-719-073-01	DIODE MA111-(K8),SO		L1407	1-414-856-11	INDUCTOR	10UH
				L3202	1-414-856-11	INDUCTOR	10UH
		<FERRITE BEAD>		L6202	1-416-857-11	INDUCTOR	65UH
FB6201	1-410-397-21	FERRITE	1.1UH			<IC LINK>	
FB6202	1-410-397-21	FERRITE	1.1UH				
				PS6200	1-532-686-21	LINK, IC 2.7A/150V	
		<IC>		PS6201	1-532-686-21	LINK, IC 2.7A/150V	
IC1401	8-752-068-46	IC CXA1855S				<TRANSISTOR>	
IC1402	8-759-100-96	IC NJM4558M-TE2		Q1401	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC1403	8-759-231-53	IC L7805CV		Q1402	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
IC1404	8-759-701-59	IC L7809CV		Q1403	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3200	8-759-100-96	IC UPC4558G2-T2		Q1404	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
				Q1408	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3201	8-759-553-44	IC NJM2187L					
IC3202	8-759-100-96	IC UPC4558G2-T2		Q1409	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3203	8-759-711-10	IC NJU4066BM-T2		Q1410	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3205	8-752-057-18	IC CXA1315P		Q6200	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3206	8-759-496-02	IC NJM2150D		Q6201	8-729-421-19	TRANSISTOR UN2213-TX	
				Q6202	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC3207	8-759-273-12	IC TDA7315D013TR					
IC6200	8-759-168-24	IC TA8200AH		Q6203	8-729-421-19	TRANSISTOR UN2213-TX	
IC6201	8-759-553-45	IC TDA7481		Q6204	8-729-421-19	TRANSISTOR UN2213-TX	
				Q6205	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
		<JACK>		Q6206	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
J1401	1-784-646-11	TERMINAL, S		Q6207	8-729-224-62	TRANSISTOR 2SK246GR-TPE2	
J1402	1-778-387-11	JACK BLOCK, PIN 12P					
				Q6208	8-729-421-19	TRANSISTOR UN2213-TX	
		<CHIP CONDUCTOR>				<RESISTOR>	
JR1401	1-216-295-61	SHORT CHIP	0	R1400	1-216-105-61	METAL CHIP	220K 5% 1/10W
JR1402	1-216-295-61	SHORT CHIP	0	R1401	1-216-031-61	RES-CHIP	180 5% 1/10W
JR1405	1-216-295-61	SHORT CHIP	0	R1402	1-216-033-61	RES-CHIP	220 5% 1/10W
JR1406	1-216-295-61	SHORT CHIP	0	R1403	1-216-033-61	RES-CHIP	220 5% 1/10W
JR1407	1-216-295-61	SHORT CHIP	0	R1404	1-216-295-61	SHORT CHIP	0

B3

REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R1406	1-216-017-61	RES-CHIP	47	5%	1/10W	R1468	1-216-093-11	METAL CHIP	68K	5%	1/10W
R1407	1-216-033-61	RES-CHIP	220	5%	1/10W	R1469	1-216-105-61	METAL CHIP	220K	5%	1/10W
R1408	1-216-031-61	RES-CHIP	180	5%	1/10W	R1470	1-216-105-61	METAL CHIP	220K	5%	1/10W
R1409	1-216-105-61	METAL CHIP	220K	5%	1/10W						
R1410	1-216-105-61	METAL CHIP	220K	5%	1/10W	R1471	1-216-022-00	METAL CHIP	75	5%	1/10W
						R1472	1-216-033-61	RES-CHIP	220	5%	1/10W
R1411	1-216-089-61	RES, CHIP	47K		(2012)	R1473	1-216-033-61	RES-CHIP	220	5%	1/10W
R1412	1-216-089-61	RES, CHIP	47K		(2012)	R1474	1-216-295-61	SHORT CHIP	0		
R1413	1-216-105-61	METAL CHIP	220K	5%	1/10W	R1475	1-216-089-61	RES, CHIP	47K		(2012)
R1414	1-216-025-61	RES-CHIP	100	5%	1/10W						
R1417	1-216-025-61	RES-CHIP	100	5%	1/10W	R1476	1-216-091-61	RES-CHIP	56K	5%	1/10W
						R1477	1-216-047-00	METAL CHIP	820	5%	1/10W
R1418	1-216-025-61	RES-CHIP	100	5%	1/10W	R1478	1-216-051-61	RES-CHIP	1.2K	5%	1/10W
R1419	1-216-025-61	RES-CHIP	100	5%	1/10W	R1479	1-216-105-61	METAL CHIP	220K	5%	1/10W
R1420	1-216-073-61	RES-CHIP	10G	5%	1/10W	R1480	1-216-105-61	METAL CHIP	220K	5%	1/10W
R1421	1-216-057-61	RES-CHIP	2.2K	5%	1/10W						
R1423	1-216-025-61	RES-CHIP	100	5%	1/10W	R1481	1-216-022-00	METAL CHIP	75	5%	1/10W
						R1482	1-216-025-61	RES-CHIP	100	5%	1/10W
R1424	1-216-073-61	RES-CHIP	10G	5%	1/10W	R1483	1-216-025-61	RES-CHIP	100	5%	1/10W
R1425	1-216-047-00	METAL CHIP	820	5%	1/10W	R1484	1-216-025-61	RES-CHIP	100	5%	1/10W
R1426	1-216-025-61	RES-CHIP	100	5%	1/10W	R1485	1-216-025-61	RES-CHIP	100	5%	1/10W
R1427	1-216-063-61	RES-CHIP	3.9K	5%	1/10W						
R1428	1-216-025-61	RES-CHIP	100	5%	1/10W	R1486	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
						R1487	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R1429	1-216-089-61	RES, CHIP	47K		(2012)	R1488	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R1430	1-216-025-61	RES-CHIP	100	5%	1/10W	R1489	1-216-022-00	METAL CHIP	75	5%	1/10W
R1431	1-216-025-61	RES-CHIP	100	5%	1/10W	R1490	1-216-025-61	RES-CHIP	100	5%	1/10W
R1432	1-216-041-61	RES-CHIP	470	5%	1/10W						
R1433	1-216-025-61	RES-CHIP	100	5%	1/10W	R1491	1-216-025-61	RES-CHIP	100	5%	1/10W
						R1492	1-216-021-61	RES-CHIP	68	5%	1/10W
R1434	1-216-025-61	RES-CHIP	100	5%	1/10W	R1493	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1435	1-216-022-00	METAL CHIP	75	5%	1/10W	R1494	1-216-031-61	RES-CHIP	180	5%	1/10W
R1436	1-216-025-61	RES-CHIP	100	5%	1/10W	R1495	1-216-033-61	RES-CHIP	220	5%	1/10W
R1437	1-216-022-00	METAL CHIP	75	5%	1/10W						
R1438	1-216-025-61	RES-CHIP	100	5%	1/10W	R1496	1-216-041-61	RES-CHIP	470	5%	1/10W
						R1497	1-216-041-61	RES-CHIP	470	5%	1/10W
R1439	1-216-295-61	SHORT CHIP	0			R1498	1-216-025-61	RES-CHIP	100	5%	1/10W
R1441	1-216-025-61	RES-CHIP	100	5%	1/10W	R1499	1-216-025-61	RES-CHIP	100	5%	1/10W
R1442	1-216-049-61	RES-CHIP	1K	5%	1/10W	R1500	1-216-025-61	RES-CHIP	100	5%	1/10W
R1443	1-216-049-61	RES-CHIP	1K	5%	1/10W						
R1444	1-216-089-61	RES, CHIP	47K		(2012)	R1501	1-216-045-00	METAL CHIP	680	5%	1/10W
						R3208	1-216-053-61	RES-CHIP	1.5K	5%	1/10W
R1445	1-216-025-61	RES-CHIP	100	5%	1/10W	R3209	1-216-069-61	RES-CHIP	6.8K	5%	1/10W
R1446	1-216-105-61	METAL CHIP	220K	5%	1/10W	R3210	1-216-053-61	RES-CHIP	1.5K	5%	1/10W
R1447	1-216-025-61	RES-CHIP	100	5%	1/10W	R3211	1-216-069-61	RES-CHIP	6.8K	5%	1/10W
R1448	1-216-043-61	RES-CHIP	560	5%	1/10W						
R1449	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3212	1-216-049-61	RES-CHIP	1K	5%	1/10W
						R3213	1-216-091-61	RES-CHIP	56K	5%	1/10W
R1450	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3214	1-216-295-61	SHORT CHIP	0		
R1451	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3215	1-216-295-61	SHORT CHIP	0		
R1452	1-216-089-61	RES, CHIP	47K		(2012)	R3216	1-216-073-61	RES-CHIP	10G	5%	1/10W
R1453	1-216-025-61	RES-CHIP	100	5%	1/10W						
R1454	1-216-091-61	RES-CHIP	56K	5%	1/10W	R3217	1-216-073-61	RES-CHIP	10G	5%	1/10W
						R3218	1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R1455	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3219	1-216-077-61	RES, CHIP	15K		(2012)
R1456	1-216-113-61	RES-CHIP	470K	5%	1/10W	R3224	1-216-101-61	RES-CHIP	150K	5%	1/10W
R1457	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3225	1-216-073-61	RES-CHIP	10G	5%	1/10W
R1458	1-216-073-61	RES-CHIP	10G	5%	1/10W						
R1459	1-216-025-61	RES-CHIP	100	5%	1/10W	R3226	1-216-073-61	RES-CHIP	10G	5%	1/10W
						R3227	1-216-129-61	METAL CHIP	2.2M	5%	1/10W
R1460	1-216-033-61	RES-CHIP	220	5%	1/10W	R3228	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1461	1-216-025-61	RES-CHIP	100	5%	1/10W	R3229	1-216-095-61	RES-CHIP	82K	5%	1/10W
R1463	1-216-073-61	RES-CHIP	10G	5%	1/10W	R3230	1-216-055-61	RES-CHIP	1.8K	5%	1/10W
R1464	1-216-113-61	RES-CHIP	470K	5%	1/10W						
R1465	1-216-113-61	RES-CHIP	470K	5%	1/10W	R3231	1-216-091-61	RES-CHIP	56K	5%	1/10W
						R3232	1-216-089-61	RES, CHIP	47K		(2012)
R1466	1-216-033-61	RES-CHIP	220	5%	1/10W	R3238	1-216-073-61	RES-CHIP	10G	5%	1/10W
R1467	1-216-057-61	RES-CHIP	2.2K	5%	1/10W	R3239	1-216-073-61	RES-CHIP	10G	5%	1/10W
						R3240	1-216-081-61	RES-CHIP	22K	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3241	1-216-093-11	METAL CHIP	68K 5% 1/10W	R6239	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
R3242	1-216-081-61	RES-CHIP	22K 5% 1/10W	R6240	1-220-969-91	METAL CHIP	10K 5% 1/2W
R3243	1-216-073-61	RES-CHIP	10G 5% 1/10W	R6241	1-215-890-11	METAL OXIDE	470 5% 2W
R3244	1-216-073-61	RES-CHIP	10G 5% 1/10W	R6242	1-215-890-11	METAL OXIDE	470 5% 2W
R3247	1-216-101-61	RES-CHIP	150K 5% 1/10W	R6243	1-249-392-11	CARBON	8.2 5% 1/4W
R3248	1-216-081-61	RES-CHIP	22K 5% 1/10W	R6244	1-216-073-61	RES-CHIP	10G 5% 1/10W
R3249	1-216-073-61	RES-CHIP	10G 5% 1/10W	R6245	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
R3250	1-216-049-61	RES-CHIP	1K 5% 1/10W	R6246	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
R3260	1-216-025-61	RES-CHIP	100 5% 1/10W	R6248	1-216-041-61	RES-CHIP	470 5% 1/10W
R3261	1-216-025-61	RES-CHIP	100 5% 1/10W	R6249	1-216-057-61	RES-CHIP	2.2K 5% 1/10W
R3262	1-216-101-61	RES-CHIP	150K 5% 1/10W	R6250	1-216-295-61	SHORT CHIP	0
R3263	1-216-093-11	METAL CHIP	68K 5% 1/10W	R6251	1-216-049-61	RES-CHIP	1K 5% 1/10W
R3264	1-216-053-61	RES-CHIP	1.5K 5% 1/10W	R6252	1-216-097-61	RES-CHIP	100K 5% 1/10W
R3266	1-216-295-61	SHORT CHIP	0	R6253	1-216-041-61	RES-CHIP	470 5% 1/10W
R3267	1-216-049-61	RES-CHIP	1K 5% 1/10W	R6254	1-216-017-61	RES-CHIP	47 5% 1/10W
R3268	1-216-049-61	RES-CHIP	1K 5% 1/10W	R6255	1-216-308-61	METAL CHIP	4.7 5% 1/10W
R3269	1-216-057-61	RES-CHIP	2.2K 5% 1/10W	R6256	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R3270	1-216-295-61	SHORT CHIP	0	R6257	1-216-061-61	RES-CHIP	3.3G 5% 1/10W
R3271	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	R6258	1-216-017-61	RES-CHIP	47 5% 1/10W
R3272	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	R6259	1-216-308-61	METAL CHIP	4.7 5% 1/10W
R3273	1-216-057-61	RES-CHIP	2.2K 5% 1/10W	R6260	1-216-073-61	RES-CHIP	10G 5% 1/10W
R3274	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	R6262	1-216-059-61	RES-CHIP	2.7K 5% 1/10W
R3275	1-216-295-61	SHORT CHIP	0	R6263	1-216-059-61	RES-CHIP	2.7K 5% 1/10W
R3276	1-216-295-61	SHORT CHIP	0	R6266	1-216-089-61	RES, CHIP	47K (2012)
R3277	1-216-073-61	RES-CHIP	10G 5% 1/10W	R6268	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
R3278	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R6278	1-216-295-61	SHORT CHIP	0
R3279	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	<TUNER>			
R3280	1-216-033-61	RES-CHIP	220 5% 1/10W	TU1401	8-598-508-10	TUNER, FSS BTF-LG436	
R3281	1-216-033-61	RES-CHIP	220 5% 1/10W	*****			
R3282	1-216-079-00	METAL CHIP	18K 5% 1/10W	* A-1331-906-A C BOARD MOUNTED			
R3283	1-216-081-61	RES-CHIP	22K 5% 1/10W	*****			
R3284	1-216-073-61	RES-CHIP	10G 5% 1/10W	4-382-854-11 SCREW (M3X10), P, SW (+)			
R3285	1-216-073-61	RES-CHIP	10G 5% 1/10W	<CAPACITOR>			
R3286	1-216-073-61	RES-CHIP	10G 5% 1/10W	C700	1-110-389-11	FILM MELF	0.1UF 5% 250V
R3287	1-216-073-61	RES-CHIP	10G 5% 1/10W	C701	1-162-114-00	CERAMIC	0.0047UF 2KV
R3288	1-216-073-61	RES-CHIP	10G 5% 1/10W	C702	1-102-074-00	CERAMIC	0.001UF 10.00% 50V
R3289	1-216-073-61	RES-CHIP	10G 5% 1/10W	C707	1-137-399-11	MYLAR	0.1UF 5.00% 50V
R3290	1-216-081-61	RES-CHIP	22K 5% 1/10W	C708	1-102-228-00	CERAMIC	470PF 10.00% 500V
R3291	1-216-079-00	METAL CHIP	18K 5% 1/10W	C709	1-102-228-00	CERAMIC	470PF 10.00% 500V
R3294	1-216-073-61	RES-CHIP	10G 5% 1/10W	C710	1-102-960-00	CERAMIC	24PF 5.00% 50V
R3295	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	C711	1-102-852-91	CERAMIC	47PF 5.00% 50V
R3296	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	C712	1-102-525-11	CERAMIC	68PF 5.00% 50V
R3297	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	C713	1-102-228-00	CERAMIC	470PF 10.00% 500V
R3298	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	C716	1-104-665-11	ELECT	100UF 20.00% 25V
R3299	1-216-069-61	RES-CHIP	6.8K 5% 1/10W	C717	1-107-651-11	ELECT	4.7UF 20.00% 250V
R6200	1-216-089-61	RES, CHIP	47K (2012)	C726	1-104-664-11	ELECT	47UF 20.00% 25V
R6201	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	C1800	1-125-797-91	ELECT	10UF 20.00% 50V
R6202	1-216-065-61	RES-CHIP	4.7K 5% 1/10W	C1803	1-125-797-91	ELECT	10UF 20.00% 50V
R6203	1-216-295-61	SHORT CHIP	0	C1804	1-125-797-91	ELECT	10UF 20.00% 50V
R6205	1-216-073-61	RES-CHIP	10G 5% 1/10W	C1809	1-126-942-61	ELECT	1000UF 20.00% 25V
R6207	1-216-049-61	RES-CHIP	1K 5% 1/10W				
R6209	1-216-049-61	RES-CHIP	1K 5% 1/10W				
R6213	1-216-073-61	RES-CHIP	10G 5% 1/10W				
R6214	1-216-073-61	RES-CHIP	10G 5% 1/10W				
R6219	1-216-089-61	RES, CHIP	47K (2012)				
R6235	1-216-029-61	RES-CHIP	150 5% 1/10W				
R6236	1-216-075-61	RES-CHIP	12K 5% 1/10W				
R6237	1-216-089-61	RES, CHIP	47K (2012)				

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

C

D₁

REF. NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>			
CN700	1-695-915-11	TAB (CONTACT)	
CN701	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
CN702	1-695-915-11	TAB (CONTACT)	
CN703 *	1-564-509-11	PLUG, CONNECTOR 6P	
CN704	1-695-915-11	TAB (CONTACT)	
CN706	1-695-915-11	TAB (CONTACT)	
CN1801 *	1-564-509-11	PLUG, CONNECTOR 6P	
CN1802 *	1-564-506-11	PLUG, CONNECTOR 3P	
<DIODE>			
D702	8-719-911-19	DIODE 1SS119-25TD	
D703	8-719-911-19	DIODE 1SS119-25TD	
D704	8-719-911-19	DIODE 1SS119-25TD	
D705	8-719-051-85	DIODE HSS83TD	
D706	8-719-051-85	DIODE HSS83TD	
D707	8-719-051-85	DIODE HSS83TD	
D708	8-719-911-19	DIODE 1SS119-25TD	
D709	8-719-911-19	DIODE 1SS119-25TD	
D710	8-719-911-19	DIODE 1SS119-25TD	
D711	8-719-110-23	DIODE RD11ES-T1B3	
D720	8-719-911-19	DIODE 1SS119-25TD	
D721	8-719-911-19	DIODE 1SS119-25TD	
D722	8-719-911-19	DIODE 1SS119-25TD	
D1803	8-719-911-19	DIODE 1SS119-25TD	
D1804	8-719-911-19	DIODE 1SS119-25TD	
D1808	8-719-908-03	DIODE GP08DPKG23	
<IC>			
IC701	8-759-561-28	IC STV5112	
IC1800	8-759-822-38	IC LA6510	
<JACK>			
J701	Δ 1-540-071-22	SOCKET, CRT	
<COIL>			
L701	1-410-667-31	INDUCTOR 22UH	
L705	1-414-186-31	INDUCTOR 33UH	
L706	1-414-186-31	INDUCTOR 33UH	
L707	1-414-186-31	INDUCTOR 33UH	
<TRANSISTOR>			
Q1800	8-729-119-76	TRANSISTOR 2SA1175TP-HFE	
Q1802	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
<RESISTOR>			
R700	1-249-393-11	CARBON 10 5% 1/4W	
R701	1-249-496-11	CARBON 100K 5% 1/2W	
R702	1-215-469-00	METAL 100K 1% 1/4W	
R703	1-215-414-00	METAL 510 1% 1/4W	
R704	1-215-414-00	METAL 510 1% 1/4W	

REF. NO.	PART NO.	DESCRIPTION	REMARK
R705	1-240-297-91	METAL MELF 1.2K 5% 1/2W	
R706	1-240-297-91	METAL MELF 1.2K 5% 1/2W	
R707	1-215-414-00	METAL 510 1% 1/4W	
R708	1-240-297-91	METAL MELF 1.2K 5% 1/2W	
R709	1-215-903-11	METAL OXIDE 68K 5% 2W	
R711	1-215-903-11	METAL OXIDE 68K 5% 2W	
R712	1-215-903-11	METAL OXIDE 68K 5% 2W	
R713	1-215-467-00	METAL 82K 1% 1/4W	
R714	1-220-965-91	METAL CHIP 4.7K 5% 1/2W	
R715	1-220-954-91	METAL MELF 470 5% 1/2W	
R716	1-220-954-91	METAL MELF 470 5% 1/2W	
R717	1-220-965-91	METAL CHIP 4.7K 5% 1/2W	
R718	1-247-752-11	CARBON 1K 5% 1/2W	
R719	1-220-965-91	METAL CHIP 4.7K 5% 1/2W	
R722	1-247-752-11	CARBON 1K 5% 1/2W	
R723	1-220-954-91	METAL MELF 470 5% 1/2W	
R724	1-247-752-11	CARBON 1K 5% 1/2W	
R730	1-216-392-11	METAL OXIDE 1.8 5% 3W	
R734	1-247-739-11	CARBON 100 5% 1/2W	
R744	1-215-415-00	METAL 560 1% 1/4W	
R745	1-215-410-00	METAL 360 1% 1/4W	
R1800	1-220-958-91	RES, METAL FILM 1K	
R1801	1-220-966-91	METAL CHIP 5.6K 5% 1/2W	
R1802	1-249-387-11	CARBON 3.3 5% 1/4W	
R1803	1-249-387-11	CARBON 3.3 5% 1/4W	
R1805	1-220-969-91	METAL CHIP 10K 5% 1/2W	
R1806	1-220-965-91	METAL CHIP 4.7K 5% 1/2W	
R1808	1-220-965-91	METAL CHIP 4.7K 5% 1/2W	
R1809	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1810	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1811	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1812	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1821	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1822	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1823	1-220-966-91	METAL CHIP 5.6K 5% 1/2W	
R1824	1-220-974-91	METAL CHIP 33K 5% 1/2W	
R1825	1-220-963-91	METAL MELF 3.3K 5% 1/2W	
<VARIABLE RESISTOR>			
RV702	1-241-656-11	RES, ADJ, METAL FILM 110M	
RV1801	1-223-241-11	RES, ADJ, CARBON 47K	
<SPARK GAP>			
SG701	1-519-422-11	GAP, SPARK	

* A-1343-640-A D1 BOARD MOUNTED *****			
<CAPACITOR>			
C2801	1-130-479-00	MYLAR 0.0047UF 5.00% 50V	
C2803	1-136-357-11	MYLAR 680PF 5.00% 50V	

D₁

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C2805	1-104-664-11	ELECT	47UF 20.00% 25V	L2803	1-414-502-41	INDUCTOR 33MH	
C2806	1-136-559-11	MYLAR	0.0047UF 10.00% 400V	L2806	1-406-678-11	INDUCTOR 15MH	
C2809	1-125-797-91	ELECT	10UF 20.00% 50V				
C2810	1-162-318-11	CERAMIC	0.001UF 10.00% 500V			<TRANSISTOR>	
C2811	1-107-938-11	ELECT	0.47UF 20.00% 160V	Q2802	8-729-026-49	TRANSISTOR 2SA1037AK-T146-QR	
C2813	1-107-636-11	ELECT	10UF 20.00% 160V	Q2805	8-729-026-49	TRANSISTOR 2SA1037AK-T146-QR	
C2814	1-125-797-91	ELECT	10UF 20.00% 50V	Q2806	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
C2817	1-102-244-00	CERAMIC	220PF 10.00% 500V	Q2807	8-729-043-95	TRANSISTOR 2SC3840K	
C2818	1-136-347-11	FILM	0.0047UF 5.00% 630V	Q2811	8-729-931-45	TRANSISTOR IRF614-LF	
C2819	1-104-664-11	ELECT	47UF 20.00% 25V				
C2820	1-107-714-11	ELECT	10UF 20.00% 16V	Q2813	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
C2822	1-106-375-12	MYLAR	0.022UF 10.00% 250V	Q2821	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
C2824	1-104-664-11	ELECT	47UF 20.00% 25V	Q2822	8-729-026-49	TRANSISTOR 2SA1037AK-T146-QR	
C2825	1-136-759-11	FILM	0.039UF 5.00% 200V	Q2823	8-729-017-06	TRANSISTOR 2SC4793	
C2826	1-137-194-81	MYLAR	0.47UF 5.00% 50V			<RESISTOR>	
C2828	1-107-714-11	ELECT	10UF 20.00% 16V	R2801	1-216-081-61	RES-CHIP 22K 5% 1/10W	
C2829	1-164-161-11	CERAMIC CHIP	0.0022UF 10.00% 50V	R2803	1-216-057-61	RES-CHIP 2.2K 5% 1/10W	
C2830	1-130-479-00	MYLAR	0.0047UF 5.00% 50V	R2804	1-216-041-61	RES-CHIP 470 5% 1/10W	
C2831	1-107-714-11	ELECT	10UF 20.00% 16V	R2806	1-216-073-61	RES-CHIP 10G 5% 1/10W	
C2832	1-125-799-91	ELECT	1UF 20.00% 63V	R2809	1-216-073-61	RES-CHIP 10G 5% 1/10W	
C2833	1-137-366-11	MYLAR	0.0022UF 5.00% 50V				
C2834	1-106-375-12	MYLAR	0.022UF 10.00% 250V	R2812	1-216-097-61	RES-CHIP 100K 5% 1/10W	
C2835	1-216-295-61	SHORT CHIP	0	R2813	1-216-089-61	RES, CHIP 47K (2012)	
C2837	1-102-129-00	CERAMIC	0.01UF 10.00% 50V	R2816	1-216-097-61	RES-CHIP 100K 5% 1/10W	
C2840	1-106-383-00	MYLAR	0.047UF 5.00% 100V	R2820	1-216-089-61	RES, CHIP 47K (2012)	
C2841	1-137-194-81	MYLAR	0.47UF 5.00% 50V	R2821	1-249-412-11	CARBON 390 5% 1/4W	
		<CONNECTOR>		R2824	1-249-393-11	CARBON 10 5% 1/4W	
CN2821 *	1-564-506-11	PLUG, CONNECTOR 3P		R2825	1-216-037-61	RES-CHIP 330 5% 1/10W	
CN2822 *	1-564-510-11	PLUG, CONNECTOR 7P		R2827	1-216-041-61	RES-CHIP 470 5% 1/10W	
CN2823	1-695-915-11	TAB (CONTACT)		R2830	1-215-876-00	METAL OXIDE 15K 5% 1W	
		<DIODE>		R2831	1-216-462-00	METAL OXIDE 8.2K 5% 2W	
D2801	8-719-988-61	DIODE 1SS355TE-17		R2833	1-215-893-11	METAL OXIDE 1.5K 5% 2W	
D2803	8-719-063-73	DIODE D1NL20U-TR		R2834	1-216-462-00	METAL OXIDE 8.2K 5% 2W	
D2804	8-719-063-73	DIODE D1NL20U-TR		R2837	1-216-041-61	RES-CHIP 470 5% 1/10W	
D2806	8-719-302-43	DIODE EL1Z		R2838	1-216-069-61	RES-CHIP 6.8K 5% 1/10W	
D2811	8-719-988-61	DIODE 1SS355TE-17		R2839	1-216-081-61	RES-CHIP 22K 5% 1/10W	
D2813	8-719-988-61	DIODE 1SS355TE-17					
		<IC>		R2840	1-216-097-61	RES-CHIP 100K 5% 1/10W	
IC2801	8-759-700-07	IC NJM2903M-TE2		R2843	1-216-097-61	RES-CHIP 100K 5% 1/10W	
IC2803	8-759-701-59	IC NJM78M09FA		R2844	1-216-097-61	RES-CHIP 100K 5% 1/10W	
IC2805	8-759-998-98	IC LM358DR		R2846	1-216-059-61	RES-CHIP 2.7K 5% 1/10W	
		<CHIP CONDUCTOR>		R2847	1-216-049-61	RES-CHIP 1K 5% 1/10W	
JR2803	1-216-295-61	SHORT CHIP	0	R2850	1-215-914-11	METAL OXIDE 330 5% 3W	
JR2804	1-216-295-61	SHORT CHIP	0	R2853	1-215-914-11	METAL OXIDE 330 5% 3W	
JR2815	1-216-295-61	SHORT CHIP	0	R2857	1-216-085-00	METAL CHIP 33K 5% 1/10W	
		<COIL>		R2858	1-216-051-61	RES-CHIP 1.2K 5% 1/10W	
L2801	1-406-677-11	INDUCTOR	10MH	R2859	1-216-057-61	RES-CHIP 2.2K 5% 1/10W	
L2802	1-406-989-21	INDUCTOR	10MH				
				R2860	1-216-059-61	RES-CHIP 2.7K 5% 1/10W	
				R2861	1-216-107-00	METAL CHIP 270K 5% 1/10W	
				R2862	1-216-107-00	METAL CHIP 270K 5% 1/10W	
				R2866	1-216-073-61	RES-CHIP 10G 5% 1/10W	
				R2867	1-216-081-61	RES-CHIP 22K 5% 1/10W	
				R2869	1-216-121-61	RES-CHIP 1M 5% 1/10W	
				R2871	1-216-057-61	RES-CHIP 2.2K 5% 1/10W	
				R2872	1-216-057-61	RES-CHIP 2.2K 5% 1/10W	
				R2874	1-216-085-00	METAL CHIP 33K 5% 1/10W	
				R2877	1-215-905-11	METAL OXIDE 10 5% 3W	

KV-XF29M97/XF29M67
RM-953

The components identified by shading and mark $\triangle$ are critical for safety.
Replace only with part number specified.

D₁ **F** **H₃**

REF. NO.	PART NO.	DESCRIPTION	REMARK
<TRANSFORMER>			
T2801	1-424-584-11	TRANSFORMER, DYNAMIC FOCUS	

	* A-1241-361-A	F BOARD MOUNTED	

	1-533-223-11	HOLDER, FUSE	
<CAPACITOR>			
C654	$\triangle$ 1-117-703-11	CERAMIC	0.0047UF 99% 250V
C4601	$\triangle$ 1-104-708-11	MYLAR	0.47UF 20.00%250V
C4602	$\triangle$ 1-109-835-11	MYLAR	0.68UF 20.00%250V
<CONNECTOR>			
CN4601*	$\triangle$ 1-580-843-11	PIN, CONNECTOR (POWER)	
CN4602*	$\triangle$ 1-580-843-11	PIN, CONNECTOR (POWER)	
CN4603	1-695-915-11	TAB (CONTACT)	
<FUSE>			
F4601	$\triangle$ 1-532-299-00	FUSE, TIME-LAG 5A/250V	
<RESISTOR>			
R4601	$\triangle$ 1-202-719-00	SOLID	1M 10% 1/2W
<TRANSFORMER>			
T4601	$\triangle$ 1-431-536-11	TRANSFORMER, LINE FILTER	
T4602	$\triangle$ 1-431-182-11	TRANSFORMER, LINE FILTER	
<VARISTOR>			
VDR461	1-803-830-11	VARISTOR (ERZV14D621)	

	* A-1372-772-A	H3 BOARD MOUNTED	

	* 4-055-304-01	HOLDER, LED	
<CAPACITOR>			
C3900	1-136-153-00	MYLAR	0.01UF 5.00% 50V
C3902	1-136-153-00	MYLAR	0.01UF 5.00% 50V
C3904	1-104-664-11	ELECT	47UF 20.00%25V
C3905	1-125-805-91	ELECT	4.7UF 20.00%50V
C3906	1-125-805-91	ELECT	4.7UF 20.00%50V
C3907	1-136-175-00	MYLAR	0.68UF 5.00% 50V
C3910	1-104-664-11	ELECT	47UF 20.00%16V

REF. NO.	PART NO.	DESCRIPTION	REMARK
C3911	1-104-664-11	ELECT	47UF 20.00%16V
C3912	1-102-114-00	CERAMIC	470PF 10.00%50V
C3913	1-125-799-91	ELECT	1UF 20.00%63V
C3914	1-126-933-11	ELECT	100UF 20.00%16V
<CONNECTOR>			
CN3601*	1-580-844-11	PIN, CONNECTOR (POWER)	
CN3602*	1-580-844-11	PIN, CONNECTOR (POWER)	
CN3603	1-695-915-11	TAB (CONTACT)	
CN3901*	1-564-507-11	PLUG, CONNECTOR 4P	
CN3902*	1-564-509-11	PLUG, CONNECTOR 6P	
CN3903*	1-564-507-11	PLUG, CONNECTOR 4P	
CN3904*	1-564-512-11	PLUG, CONNECTOR 9P	
CN3905*	1-564-512-11	PLUG, CONNECTOR 9P	
CN3906*	1-564-506-11	PLUG, CONNECTOR 3P	
<DIODE>			
D3900	8-719-070-16	DIODE NNCD9.1A-T1	
D3901	8-719-070-16	DIODE NNCD9.1A-T1	
D3902	8-719-070-16	DIODE NNCD9.1A-T1	
D3905	8-719-070-16	DIODE NNCD9.1A-T1	
D3906	8-719-045-19	DIODE SPB-26MVWF	
D3907	8-719-070-16	DIODE NNCD9.1A-T1	
D3908	8-719-070-16	DIODE NNCD9.1A-T1	
<IC>			
IC3901	8-742-134-00	HYB IC SBX1981-51P	
<JACK>			
J3901	1-750-264-11	JACK	
J3902	1-784-646-11	TERMINAL, S	
J3903	1-770-329-11	JACK, PIN 3P	
<COIL>			
L3901	1-414-183-41	INDUCTOR	10UH
L3902	1-414-183-41	INDUCTOR	10UH
L3903	1-406-976-11	INDUCTOR	68UH
<TRANSISTOR>			
Q3901	8-729-030-02	TRANSISTOR DTC144ESA-TP	
Q3902	8-729-030-02	TRANSISTOR DTC144ESA-TP	
<RESISTOR>			
R3900	1-220-952-91	METAL MELF	330 5% 1/2W
R3901	1-220-952-91	METAL MELF	330 5% 1/2W
R3902	1-247-804-11	CARBON	75 5% 1/4W
R3904	1-220-969-91	METAL CHIP	10K 5% 1/2W
R3905	1-220-969-91	METAL CHIP	10K 5% 1/2W
R3907	1-220-966-91	METAL CHIP	5.6K 5% 1/2W
R3908	1-220-954-91	METAL MELF	470 5% 1/2W
R3909	1-220-958-91	RES, METAL FILM 1K	

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

H₃ **J₂** **P₁**

REF. NO.	PART NO.	DESCRIPTION	REMARK
R3910	1-220-960-91	METAL MELF	1.8K 5% 1/2W
R3911	1-220-952-91	METAL MELF	330 5% 1/2W
R3912	1-220-963-91	METAL MELF	3.3K 5% 1/2W
R3913	1-220-969-91	METAL CHIP	10K 5% 1/2W
R3914	1-220-952-91	METAL MELF	330 5% 1/2W
R3915	1-220-969-91	METAL CHIP	10K 5% 1/2W
R3916	1-249-401-11	CARBON	47 5% 1/4W
R3917	1-247-804-11	CARBON	75 5% 1/4W
R3918	1-220-951-91	METAL	220 5% 1/2W
R3919	1-220-951-91	METAL	220 5% 1/2W
R3920	1-220-948-91	METAL	100 5% 1/2W
R3921	1-220-948-91	METAL	100 5% 1/2W
R3922	1-220-961-91	METAL CHIP	2.2K 5% 1/2W
R3923	1-220-951-91	METAL	220 5% 1/2W
R3924	1-247-804-11	CARBON	75 5% 1/4W
<SWITCH>			
S3601 Δ	1-571-433-21	SWITCH, PUSH (AC POWER)	
S3902	1-692-431-21	SWITCH, TACTILE	
S3903	1-692-431-21	SWITCH, TACTILE	
S3904	1-692-431-21	SWITCH, TACTILE	
S3905	1-692-431-21	SWITCH, TACTILE	
S3906	1-692-431-21	SWITCH, TACTILE	
S3907	1-692-431-21	SWITCH, TACTILE	
S3908	1-692-431-21	SWITCH, TACTILE	

* A-1388-243-A J2 BOARD MOUNTED			

<CONNECTOR>			
CN3451 *	1-564-518-11	PLUG, CONNECTOR 3P	
<DIODE>			
D3453	8-719-110-72	DIODE RD30ES-T1B2	
D3454	8-719-110-72	DIODE RD30ES-T1B2	
<JACK>			
J3451	1-694-467-11	TERMINAL, PUSH (2P)	

* A-1190-365-A P1 BOARD MOUNTED			

<CAPACITOR>			
C4300	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4301	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4302	1-163-031-11	CERAMIC CHIP	0.01UF 50V

REF. NO.	PART NO.	DESCRIPTION	REMARK
C4303	1-125-799-91	ELECT	1UF 20.00% 63V
C4304	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4305	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4307	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4310	1-104-664-11	ELECT	47UF 20.00% 16V
C4312	1-104-664-11	ELECT	47UF 20.00% 16V
C4313	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4314	1-125-797-91	ELECT	10UF 20.00% 50V
C4315	1-104-666-11	ELECT	220UF 20.00% 25V
C4317	1-126-967-11	ELECT	47UF 20.00% 50V
C4318	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4319	1-163-233-51	CERAMIC CHIP	18PF 5.00% 50V
C4320	1-163-233-51	CERAMIC CHIP	18PF 5.00% 50V
C4321	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4322	1-126-957-11	ELECT	0.22UF 20.00% 50V
C4323	1-163-125-00	CERAMIC CHIP	220PF 5.00% 50V
C4324	1-125-805-91	ELECT	4.7UF 20.00% 50V
C4325	1-126-967-11	ELECT	47UF 20.00% 50V
C4326	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4327	1-164-005-51	CERAMIC CHIP	470000PF 10% 25V
C4329	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4330	1-125-805-91	ELECT	4.7UF 20.00% 50V
C4331	1-125-797-91	ELECT	10UF 20.00% 50V
C4332	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V
C4333	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4334	1-125-799-91	ELECT	1UF 20.00% 63V
C4335	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00% 50V
C4336	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V
C4337	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4338	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4339	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4340	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4341	1-104-665-11	ELECT	100UF 20.00% 10V
C4347	1-104-665-11	ELECT	100UF 20.00% 10V
C4348	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4349	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C4350	1-125-797-91	ELECT	10UF 20.00% 50V
C4352	1-163-251-11	CERAMIC CHIP	100PF 5.00% 50V
C4353	1-104-665-11	ELECT	100UF 20.00% 10V
C4355	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4356	1-164-346-51	CERAMIC CHIP	1UF 10% 16V
C4357	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4359	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4362	1-163-235-11	CERAMIC CHIP	22PF 5.00% 50V
C4363	1-163-237-51	CERAMIC CHIP	27PF 10% 50V
C4364	1-104-665-11	ELECT	100UF 20.00% 10V
C4365	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4366	1-163-031-11	CERAMIC CHIP	0.01UF 50V
C4367	1-125-799-91	ELECT	1UF 20.00% 63V
C4371	1-164-004-51	CERAMIC CHIP	0.1UF 10.00% 25V
C4372	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C4377	1-104-665-11	ELECT	100UF 20.00% 10V
C4380	1-163-038-00	CERAMIC CHIP	0.1UF 25V
C4394	1-104-664-11	ELECT	47UF 20.00% 16V
C4395	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C4396	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V
C4397	1-163-249-11	CERAMIC CHIP	82PF 5.00% 50V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C4398	1-125-797-91	ELECT	10UF 20.00%50V	Q4323	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
C4399	1-125-797-91	ELECT	10UF 20.00%50V	Q4324	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
		<CONNECTOR>		Q4325	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
CN4301	1-764-811-11	CONNECTOR, BOARD TO BOARD 10P		Q4326	8-729-421-19	TRANSISTOR UN2213-TX	
CN4302	1-764-811-11	CONNECTOR, BOARD TO BOARD 10P		Q4327	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
CN4303*	1-564-506-11	PLUG, CONNECTOR 3P		Q4328	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
		<FERRITE BEAD>		Q4362	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
FB4301	1-410-397-21	FERRITE	1.1UH	Q4363	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
		<FILTER>		Q4364	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
FL4301	1-236-728-41	ENCAPSULATED COMPONENT		Q4365	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
		<IC>		Q4366	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC4301	8-759-655-57	IC SDA9288XE-B0121-GEG		Q4368	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC4302	8-759-568-62	IC BA7606F-E2		Q4369	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
IC4303	8-752-090-41	IC CXA2139S		Q4371	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
		<COIL>		Q4372	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
L4302	1-412-537-31	INDUCTOR	100UH	Q4373	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
L4304	1-408-603-31	INDUCTOR	10UH	Q4374	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
L4305	1-408-603-31	INDUCTOR	10UH			<RESISTOR>	
L4306	1-408-603-31	INDUCTOR	10UH	R4300	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
L4307	1-408-412-00	INDUCTOR	18UH	R4301	1-216-069-61	RES-CHIP	6.8K 5% 1/10W
L4308	1-408-611-31	INDUCTOR	47UH	R4302	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
L4309	1-408-603-31	INDUCTOR	10UH	R4304	1-216-089-61	RES, CHIP	47K (2012)
L4310	1-408-611-31	INDUCTOR	47UH	R4305	1-216-025-61	RES-CHIP	100 5% 1/10W
L4311	1-408-603-31	INDUCTOR	10UH	R4306	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
L4312	1-408-603-31	INDUCTOR	10UH	R4307	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
L4313	1-414-188-41	INDUCTOR	68UH	R4308	1-216-081-61	RES-CHIP	22K 5% 1/10W
L4314	1-414-856-11	INDUCTOR	10UH	R4309	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
L4315	1-414-856-11	INDUCTOR	10UH	R4310	1-216-025-61	RES-CHIP	100 5% 1/10W
L4316	1-414-856-11	INDUCTOR	10UH	R4311	1-216-025-61	RES-CHIP	100 5% 1/10W
L4317	1-414-856-11	INDUCTOR	10UH	R4312	1-216-025-61	RES-CHIP	100 5% 1/10W
		<TRANSISTOR>		R4313	1-216-049-61	RES-CHIP	1K 5% 1/10W
Q4301	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		R4314	1-216-049-61	RES-CHIP	1K 5% 1/10W
Q4302	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4315	1-216-049-61	RES-CHIP	1K 5% 1/10W
Q4303	8-729-424-59	TRANSISTOR UN2212-TX		R4316	1-216-025-61	RES-CHIP	100 5% 1/10W
Q4304	8-729-421-22	TRANSISTOR UN2211-TX		R4317	1-216-025-61	RES-CHIP	100 5% 1/10W
Q4305	8-729-421-22	TRANSISTOR UN2211-TX		R4318	1-216-033-61	RES-CHIP	220 5% 1/10W
Q4306	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		R4319	1-216-045-00	METAL CHIP	680 5% 1/10W
Q4307	8-729-421-22	TRANSISTOR UN2211-TX		R4320	1-216-081-61	RES-CHIP	22K 5% 1/10W
Q4308	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4321	1-216-045-00	METAL CHIP	680 5% 1/10W
Q4313	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4324	1-216-049-61	RES-CHIP	1K 5% 1/10W
Q4314	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4325	1-216-027-61	RES-CHIP	120 5% 1/10W
Q4315	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4326	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
Q4316	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		R4327	1-216-065-61	RES-CHIP	4.7K 5% 1/10W
Q4317	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		R4328	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
Q4318	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		R4329	1-216-041-61	RES-CHIP	470 5% 1/10W
Q4322	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		R4330	1-216-053-61	RES-CHIP	1.5K 5% 1/10W
				R4332	1-216-089-61	RES, CHIP	47K (2012)
				R4333	1-216-025-61	RES-CHIP	100 5% 1/10W
				R4334	1-216-025-61	RES-CHIP	100 5% 1/10W
				R4335	1-216-025-61	RES-CHIP	100 5% 1/10W
				R4336	1-216-041-61	RES-CHIP	470 5% 1/10W
				R4337	1-216-041-61	RES-CHIP	470 5% 1/10W
				R4338	1-216-049-61	RES-CHIP	1K 5% 1/10W
				R4339	1-216-041-61	RES-CHIP	470 5% 1/10W
				R4340	1-216-085-00	METAL CHIP	33K 5% 1/10W
				R4341	1-216-081-61	RES-CHIP	22K 5% 1/10W

P₁

VM₁

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R4343	1-216-049-61	RES-CHIP	1K	5%	1/10W	R4408	1-216-041-61	RES-CHIP	470	5%	1/10W
R4344	1-216-025-61	RES-CHIP	100	5%	1/10W	R4414	1-216-025-61	RES-CHIP	100	5%	1/10W
R4345	1-216-041-61	RES-CHIP	470	5%	1/10W	R4416	1-216-041-61	RES-CHIP	470	5%	1/10W
R4346	1-216-041-61	RES-CHIP	470	5%	1/10W	R4431	1-216-049-61	RES-CHIP	1K	5%	1/10W
R4347	1-216-025-61	RES-CHIP	100	5%	1/10W	R4432	1-216-689-11	RES, CHIP	39K		(2012)
R4348	1-216-085-00	METAL CHIP	33K	5%	1/10W	R4433	1-216-073-61	RES-CHIP	10G	5%	1/10W
R4349	1-216-025-61	RES-CHIP	100	5%	1/10W	R4434	1-216-045-00	METAL CHIP	680	5%	1/10W
R4350	1-216-085-00	METAL CHIP	33K	5%	1/10W	<CRYSTAL>					
R4351	1-216-049-61	RES-CHIP	1K	5%	1/10W	X4301	1-781-134-21	VIBRATOR, CRYSTAL			
R4352	1-216-041-61	RES-CHIP	470	5%	1/10W	X4302	1-781-132-21	VIBRATOR, CRYSTAL			
R4353	1-216-049-61	RES-CHIP	1K	5%	1/10W	X4303	1-760-095-21	VIBRATOR, CRYSTAL			
R4354	1-216-049-61	RES-CHIP	1K	5%	1/10W	*****					
R4355	1-216-049-61	RES-CHIP	1K	5%	1/10W	* A-1342-556-A VM1 BOARD MOUNTED					
R4356	1-208-778-11	METAL CHIP	680	0.5%	1/10W	*****					
R4357	1-216-043-61	RES-CHIP	560	5%	1/10W	4-382-854-11	SCREW (M3X10), P, SW (+)				
R4358	1-208-776-11	METAL CHIP	560	0.5%	1/10W	<CAPACITOR>					
R4359	1-216-025-61	RES-CHIP	100	5%	1/10W	C5900	1-102-115-00	CERAMIC	560PF	10.00%	50V
R4360	1-216-049-61	RES-CHIP	1K	5%	1/10W	C5902	1-104-661-91	ELECT	330UF	20.00%	16V
R4361	1-216-041-61	RES-CHIP	470	5%	1/10W	C5903	1-161-830-00	CERAMIC	0.0047UF		500V
R4362	1-216-055-61	RES-CHIP	1.8K	5%	1/10W	C5905	1-126-925-11	ELECT	470UF	20.00%	10V
R4363	1-216-033-61	RES-CHIP	220	5%	1/10W	C5906	1-130-491-00	MYLAR	0.047UF	5.00%	50V
R4364	1-216-089-61	RES, CHIP	47K		(2012)	C5907	1-107-638-11	ELECT	33UF	20.00%	160V
R4365	1-216-081-61	RES-CHIP	22K	5%	1/10W	C5908	1-106-383-00	MYLAR	0.047UF	10.00%	200V
R4366	1-216-295-61	SHORT CHIP	0			C5909	1-126-933-11	ELECT	100UF	20.00%	16V
R4368	1-216-049-61	RES-CHIP	1K	5%	1/10W	C5910	1-130-471-00	MYLAR	0.001UF	5.00%	50V
R4369	1-216-025-61	RES-CHIP	100	5%	1/10W	C5911	1-107-949-11	ELECT	2.2UF	20.00%	160V
R4370	1-216-041-61	RES-CHIP	470	5%	1/10W	C5912	1-104-999-11	MYLAR	0.1UF	10.00%	200V
R4371	1-216-039-61	RES-CHIP	390	5%	1/10W	C5913	1-130-471-00	MYLAR	0.001UF	5.00%	50V
R4372	1-216-025-61	RES-CHIP	100	5%	1/10W	C5914	1-126-933-11	ELECT	100UF	20.00%	16V
R4373	1-216-077-61	RES, CHIP	15K		(2012)	C5916	1-130-491-00	MYLAR	0.047UF	5.00%	50V
R4374	1-216-073-61	RES-CHIP	10G	5%	1/10W	C5917	1-126-925-11	ELECT	470UF	20.00%	10V
R4375	1-216-073-61	RES-CHIP	10G	5%	1/10W	C5918	1-102-244-00	CERAMIC	220PF	10.00%	500V
R4376	1-216-053-61	RES-CHIP	1.5K	5%	1/10W	C5919	1-136-165-00	MYLAR	0.1UF	5.00%	50V
R4377	1-216-047-00	METAL CHIP	820	5%	1/10W	<CONNECTOR>					
R4378	1-216-047-00	METAL CHIP	820	5%	1/10W	CN2801*	1-564-506-11	PLUG, CONNECTOR 3P			
R4379	1-208-780-11	METAL CHIP	820	0.5%	1/10W	CN5901*	1-564-510-11	PLUG, CONNECTOR 7P			
R4380	1-216-053-61	RES-CHIP	1.5K	5%	1/10W	CN5904*	1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
R4382	1-216-025-61	RES-CHIP	100	5%	1/10W	<DIODE>					
R4383	1-208-806-11	METAL CHIP	10K	0.5%	1/10W	D5901	8-719-911-19	DIODE 1SS119-25TD			
R4384	1-216-081-61	RES-CHIP	22K	5%	1/10W	D5902	8-719-110-88	DIODE RD39ES-B2			
R4385	1-216-073-61	RES-CHIP	10G	5%	1/10W	D5903	8-719-911-19	DIODE 1SS119-25TD			
R4386	1-216-073-61	RES-CHIP	10G	5%	1/10W	D5904	8-719-110-88	DIODE RD39ES-B2			
R4387	1-216-073-61	RES-CHIP	10G	5%	1/10W	D5905	8-719-911-19	DIODE 1SS119-25TD			
R4388	1-216-025-61	RES-CHIP	100	5%	1/10W	D5906	1-249-406-11	CARBON	120	5%	1/4W
R4389	1-216-065-61	RES-CHIP	4.7K	5%	1/10W	D5907	1-249-406-11	CARBON	120	5%	1/4W
R4390	1-216-025-61	RES-CHIP	100	5%	1/10W						
R4391	1-216-025-61	RES-CHIP	100	5%	1/10W						
R4392	1-216-073-61	RES-CHIP	10G	5%	1/10W						
R4393	1-216-025-61	RES-CHIP	100	5%	1/10W						
R4394	1-216-075-61	RES-CHIP	12K	5%	1/10W						
R4395	1-216-025-61	RES-CHIP	100	5%	1/10W						
R4396	1-216-081-61	RES-CHIP	22K	5%	1/10W						
R4397	1-216-049-61	RES-CHIP	1K	5%	1/10W						
R4398	1-216-053-61	RES-CHIP	1.5K	5%	1/10W						
R4400	1-216-033-61	RES-CHIP	220	5%	1/10W						
R4401	1-216-041-61	RES-CHIP	470	5%	1/10W						
R4402	1-216-295-61	SHORT CHIP	0								



The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<COIL>	
L5901	1-414-187-11	INDUCTOR 47UH	
		<TRANSISTOR>	
Q5901	8-729-230-45	TRANSISTOR 2SC2458TP-YGR	
Q5902	8-729-809-26	TRANSISTOR 2SA1606-E	
Q5903	8-729-230-45	TRANSISTOR 2SC2458TP-YGR	
Q5904	8-729-119-76	TRANSISTOR 2SA1175TP-HFE	
Q5905	8-729-230-45	TRANSISTOR 2SC2458TP-YGR	
Q5906	8-729-809-29	TRANSISTOR 2SC4159-E	
Q5907	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
		<RESISTOR>	
R5901	1-249-401-11	CARBON 47 5% 1/4W	
R5902	1-249-414-11	CARBON 560 5% 1/4W	
R5903	1-247-734-11	CARBON 39 5% 1/2W	
R5904	1-220-952-91	METAL MELF 330 5% 1/2W	
R5905	1-220-958-91	RES, METAL FILM 1K	
R5906	1-220-958-91	RES, METAL FILM 1K	
R5907	1-220-958-91	RES, METAL FILM 1K	
R5908	1-249-383-11	CARBON 1.5 5% 1/4W	
R5909	1-220-951-91	METAL 220 5% 1/2W	
R5910	1-220-946-81	METAL MELF 68 5% 1/2W	
R5911	1-249-439-11	CARBON 68K 5% 1/4W	
R5912	1-220-975-91	METAL MELF 47K 5% 1/2W	
R5914	1-220-946-81	METAL MELF 68 5% 1/2W	
R5915	1-220-969-91	METAL CHIP 10K 5% 1/2W	
R5916	1-220-959-91	METAL MELF 1.5K 5% 1/2W	
R5917	1-220-957-91	METAL MELF 820 5% 1/2W	
R5918	1-220-969-91	METAL CHIP 10K 5% 1/2W	
R5919	1-249-417-11	CARBON 1K 5% 1/4W	
R5920	1-249-439-11	CARBON 68K 5% 1/4W	
R5921	1-216-476-11	METAL OXIDE 180 5% 3W	
R5922	1-220-955-91	METAL MELF 560 5% 1/2W	
R5923	1-249-383-11	CARBON 1.5 5% 1/4W	
R5925	1-249-400-11	CARBON 39 5% 1/4W	
R5927	1-220-957-91	METAL MELF 820 5% 1/2W	
R5929	1-215-880-00	METAL OXIDE 10 5% 2W	
		MISCELLANEOUS	

1-136-536-31		CAP, HIGH-VOLTAGE FILM 3000PF	
1-202-818-00		RES, SOLID 1.0K	

REF. NO.	PART NO.	DESCRIPTION	REMARK
	1-529-172-11	SPEAKER, LOUD (10CM)	
Δ	1-416-495-11	COIL, DEMAGNETIC	
	1-452-094-00	CIRCULAR DISC MAGNET B	
	1-452-032-00	MAGNET, DISC	
	1-452-896-11	COIL, NA ROTATION (RT200)	
	1-251-658-21	SPLITTER RF	
*	1-555-110-00	CABLE, P-P	
Δ	1-574-062-61	CORD, POWER (WITH CONNECTOR) 2.5A/250V	
	1-529-179-11	SPEAKER (8CM)	
	1-529-190-11	SPEAKER (5CM)	
Δ	8-451-494-31	DEFLECTION YOKE (Y29RSA-S)	
Δ	8-735-057-05	PICTURE TUBE (M68LNH070X) (KV-XF29M97)	
Δ	8-735-056-05	PICTURE TUBE (M68LNH070X) (KV-XF29M67)	
	8-453-011-11	NA299-M	

		ACCESSORIES PACKING MATERIALS	

	A-1028-409-A	PACKING GROUP (SET)	
	A-1501-451-A	BOX ASSY, SPEAKER (3D)	
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)	
	4-076-400-11	MANUAL, INSTRUCTION	
	4-392-003-31	BAND, HOLD	
	4-392-004-21	CLIP	
*	4-065-594-01	BAG, PROTECTION	
*	4-069-218-02	INDIVIDUAL CARTON	
*	4-069-219-01	CUSHION (UPPER)(ASSY)	
*	4-069-220-01	CUSHION (LOWER)(ASSY)	
*	4-067-018-01	CUSHION (1), SEAL	
*	4-067-019-01	CUSHION (2), SEAL	
*	4-067-020-02	CUSHION (3), SEAL	
*	4-067-021-02	CUSHION (4), SEAL	
*	4-067-022-01	CUSHION (5), SEAL	
*	4-065-515-01	BOX (TP), 3D SPEAKER	
*	4-065-516-01	BOX (BT), 3D SPEAKER	

		REMOTE COMMANDER	

	1-418-040-11	REMOTE COMMANDER (RM-953)	
	4-978-977-01	BATTERY COVER, REMOTE COMMANDER	